



## Ergo-Series E6W Barrel Sauna Half Glass Window 59D" x 81H"




Note: Please read manual before construction

# Front & Back Walls

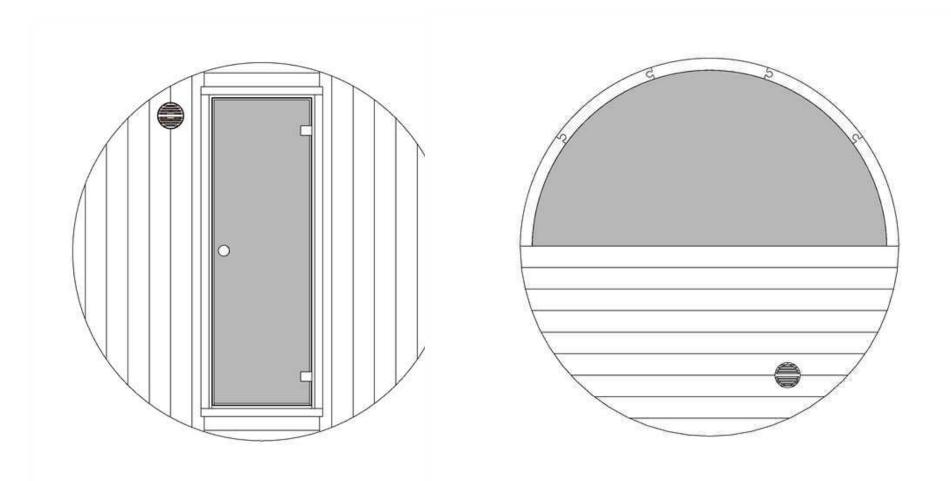


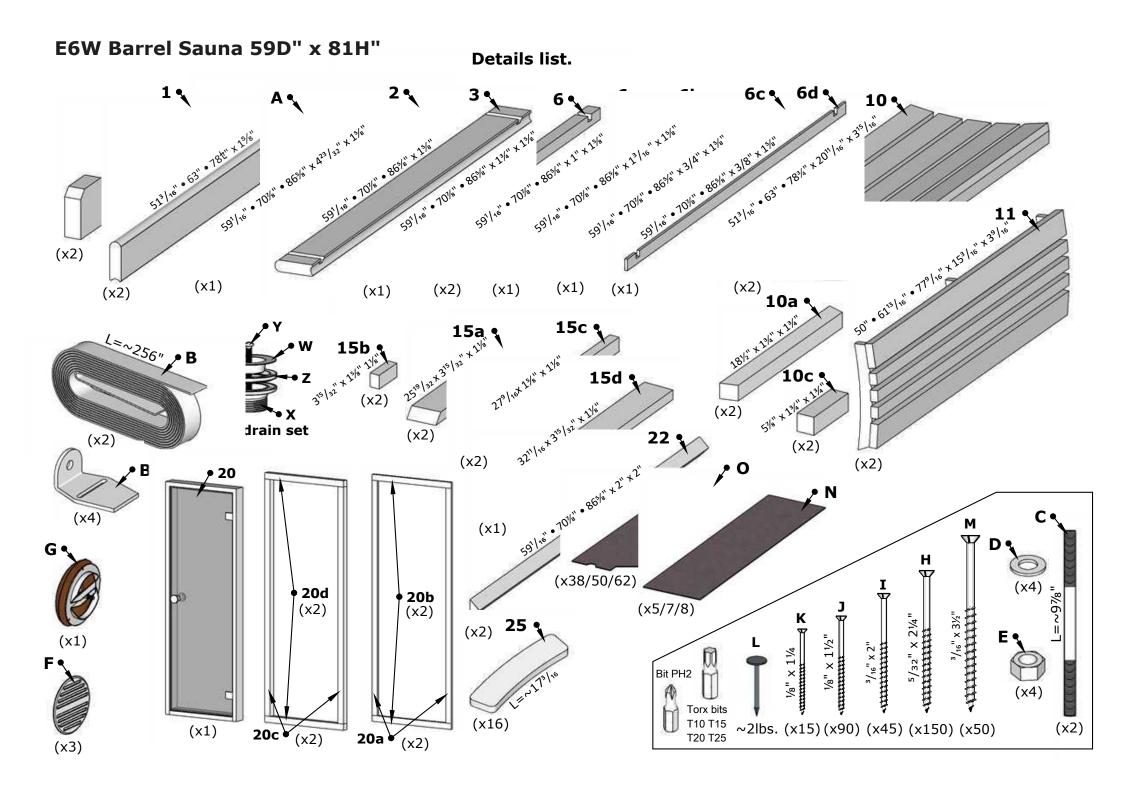


## **Tools needed**

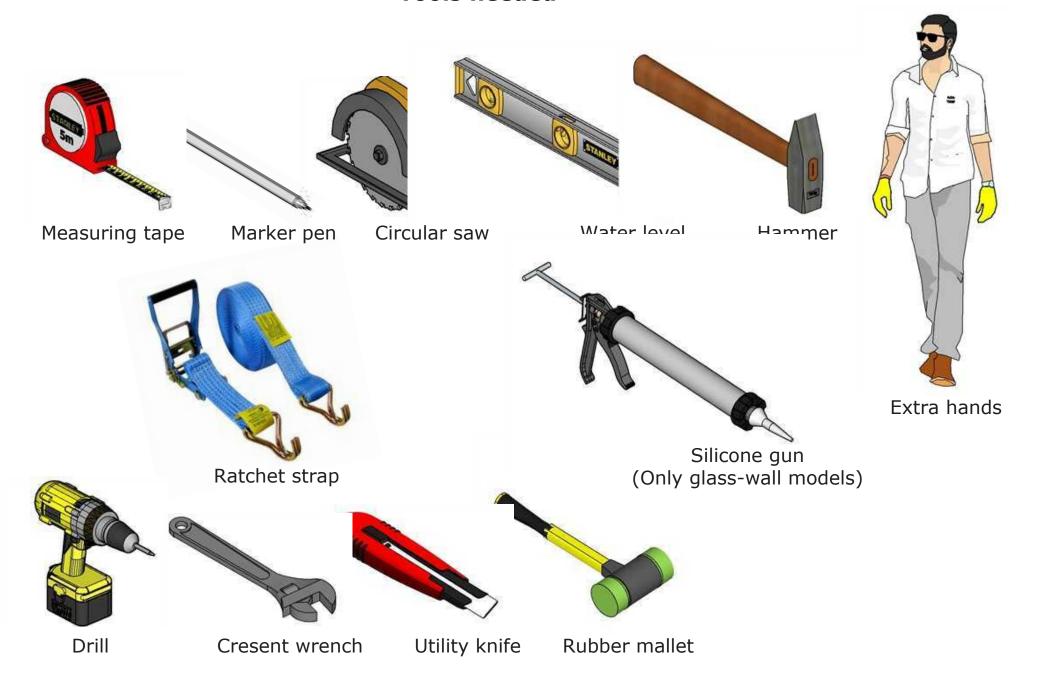


## **Wooden front wall installation**

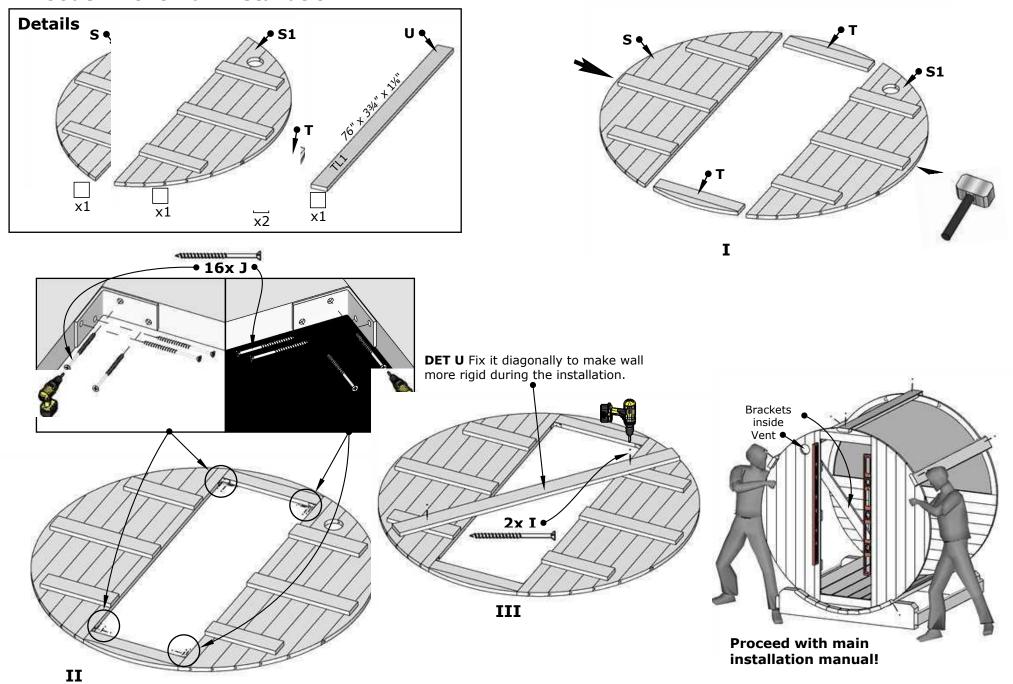



## **Half-moon wall installation**

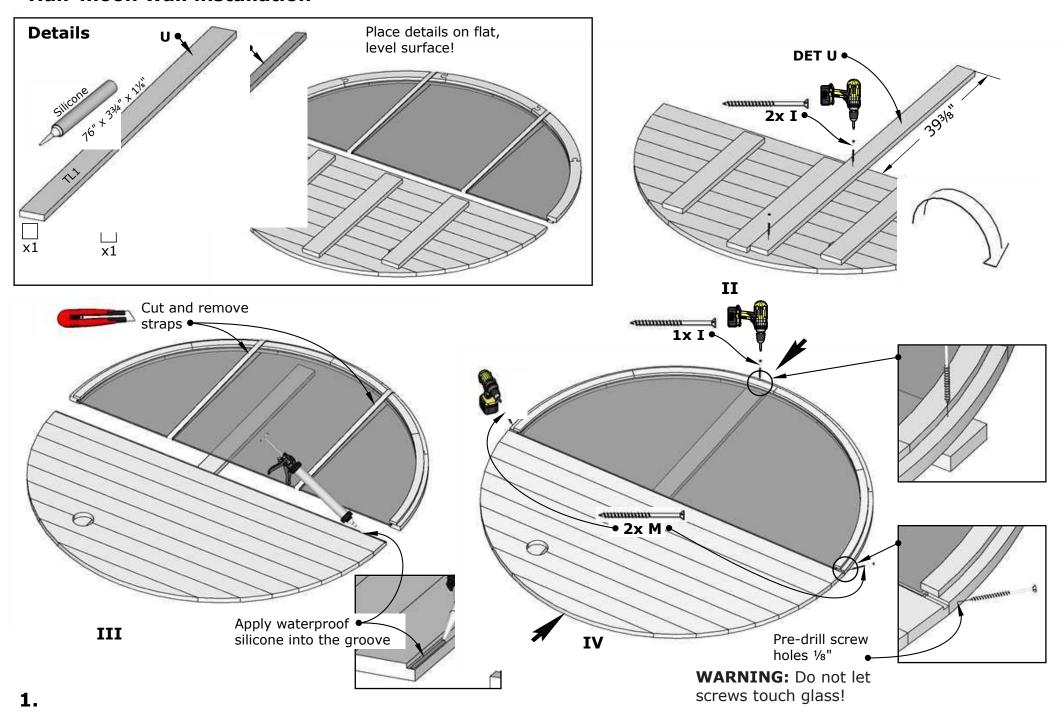


## Half-moon wall installation

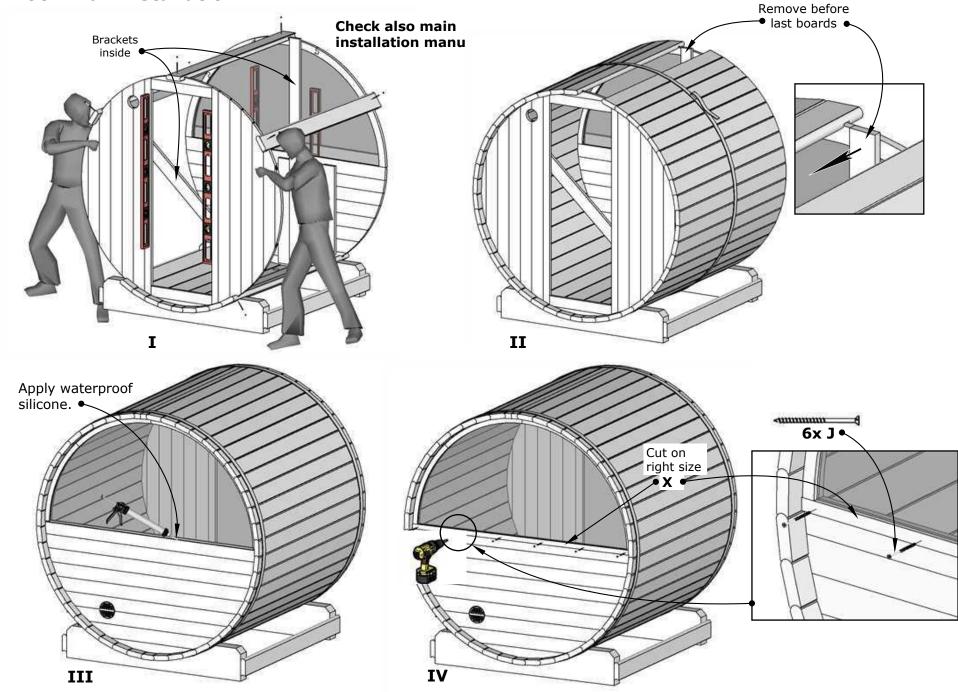


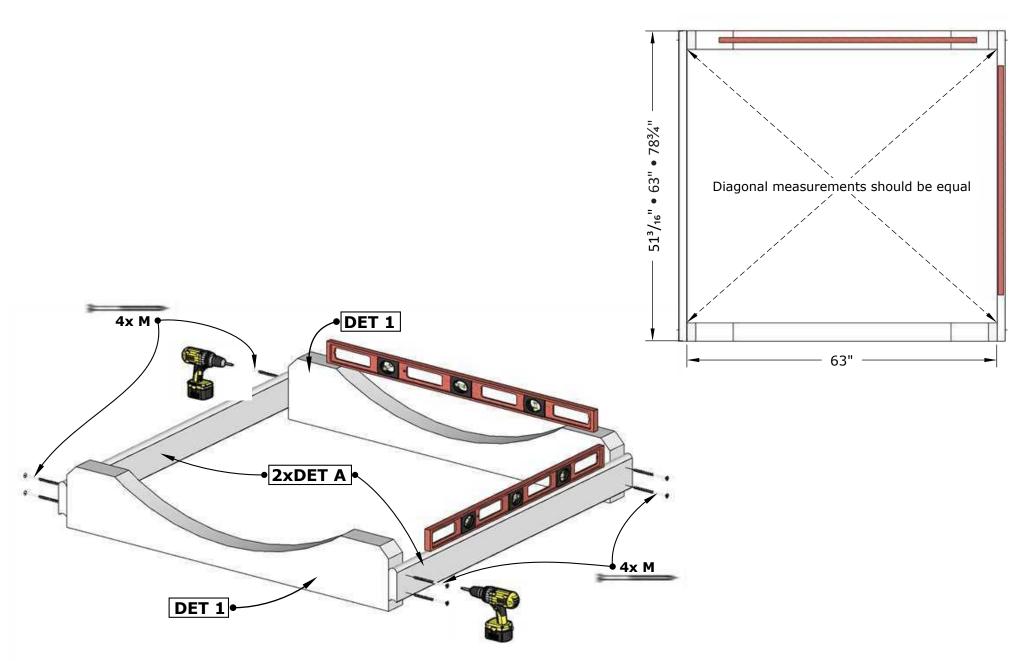


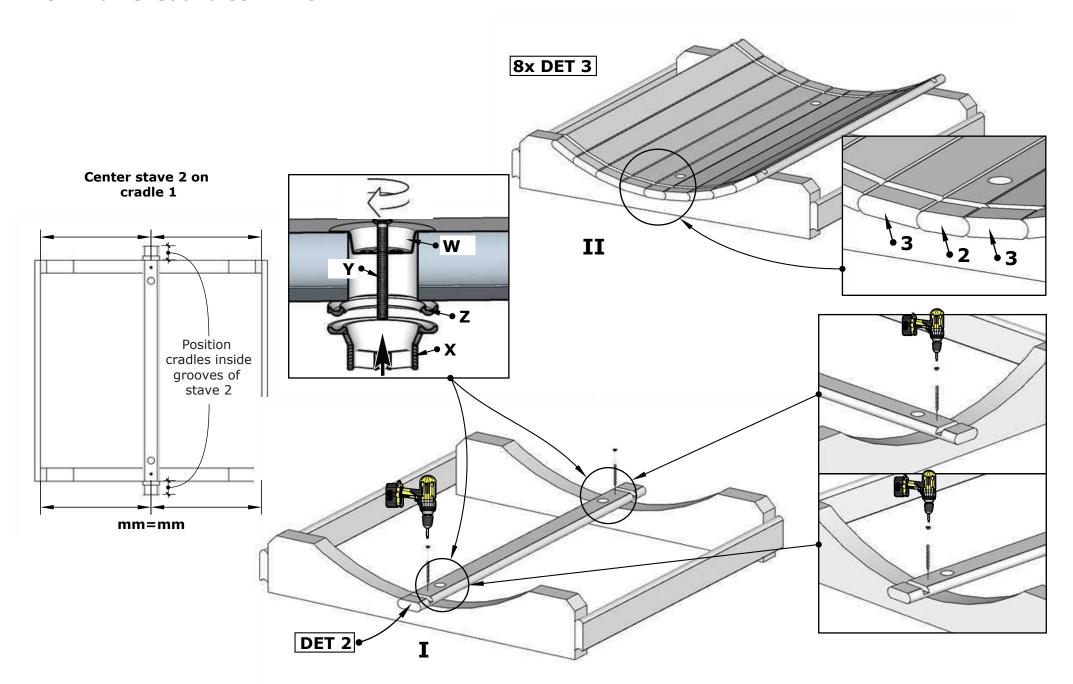


E6W Barrel Sauna 59D" x 81H"

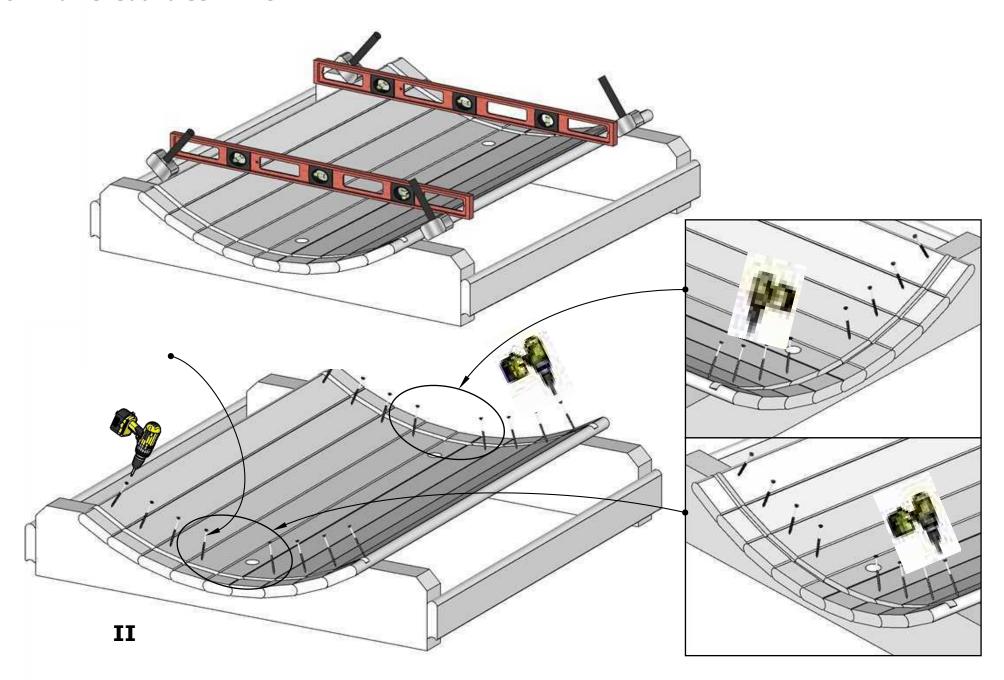

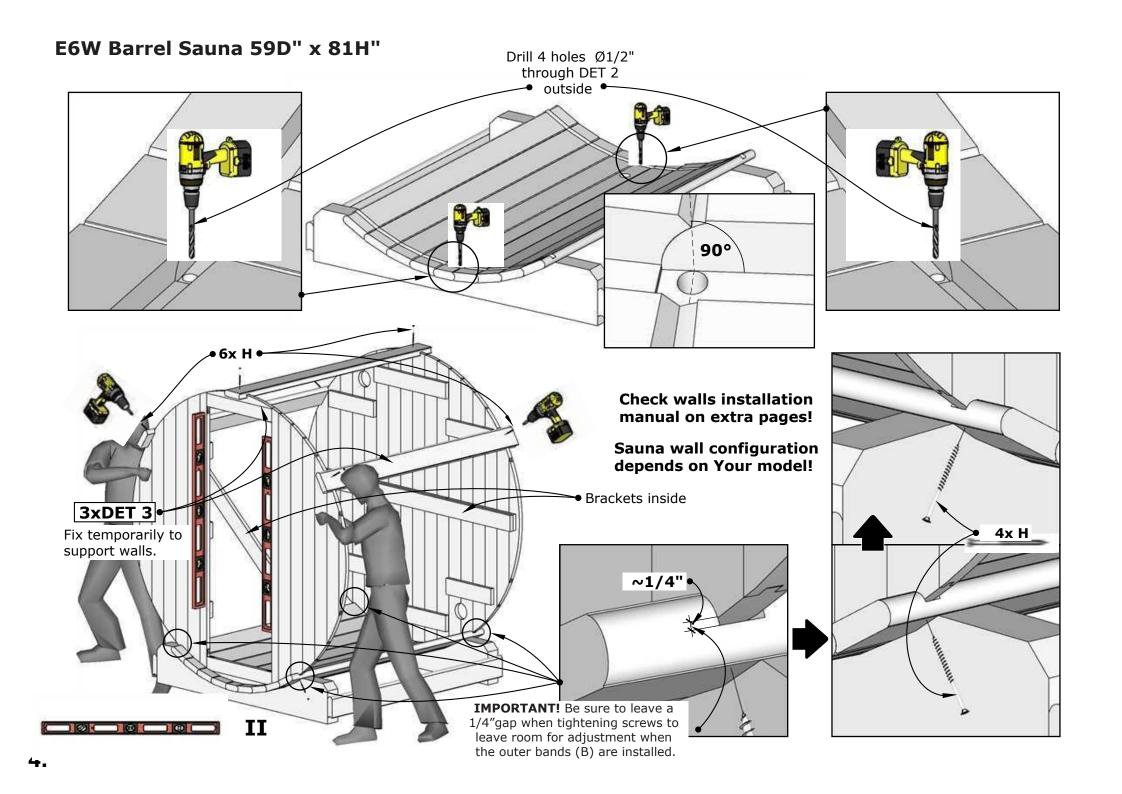


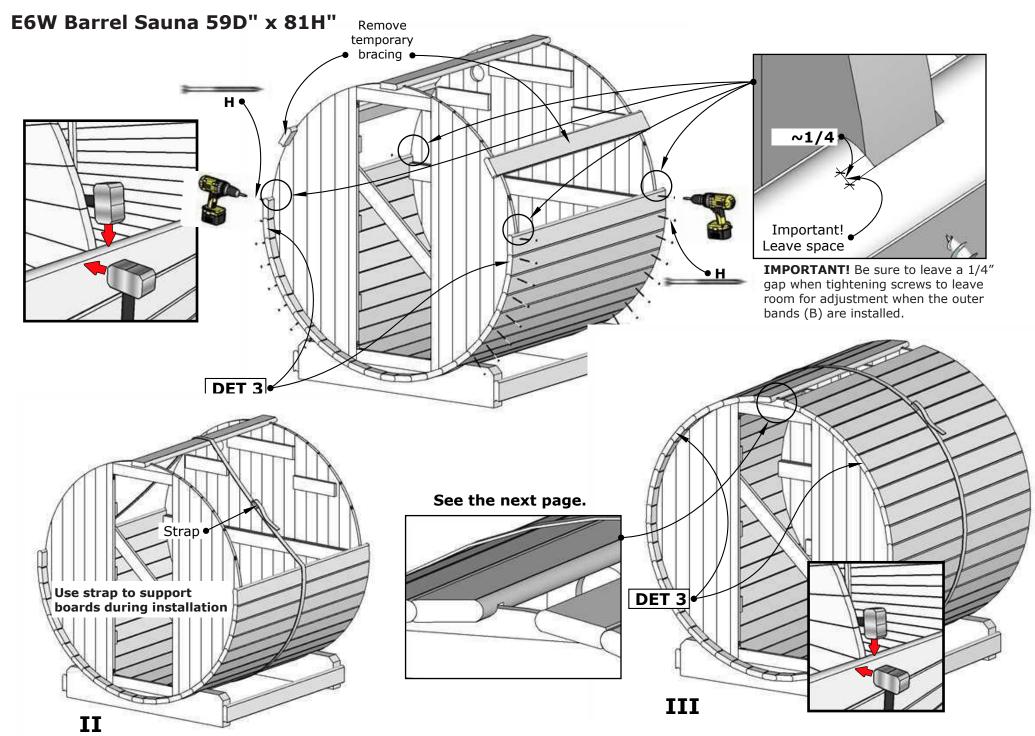

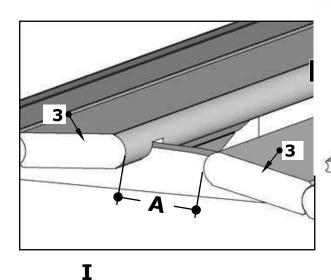



6 • 6a • 6b • 6c • 6d •

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

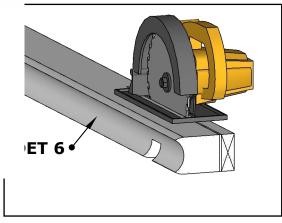


If needed, trim the flat edge of the board to create the desired width.

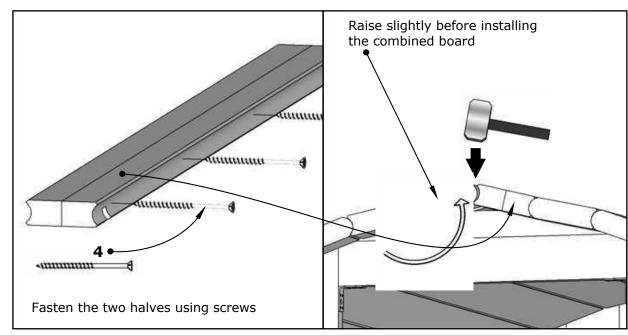


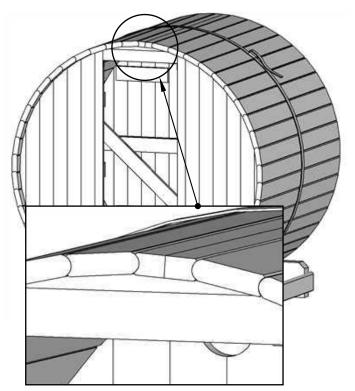



III


II

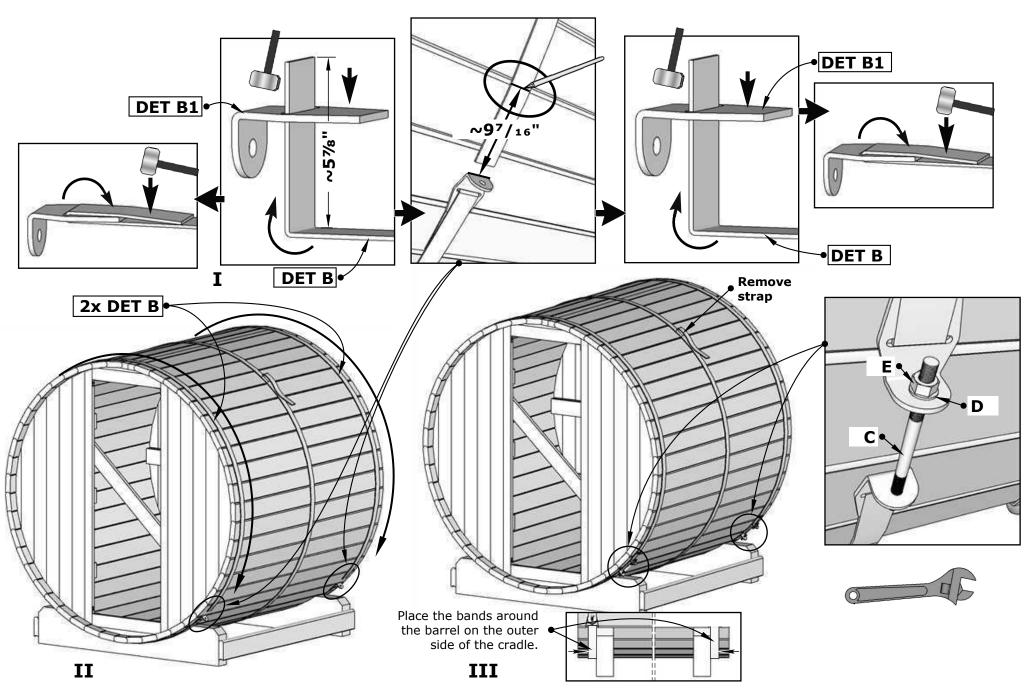


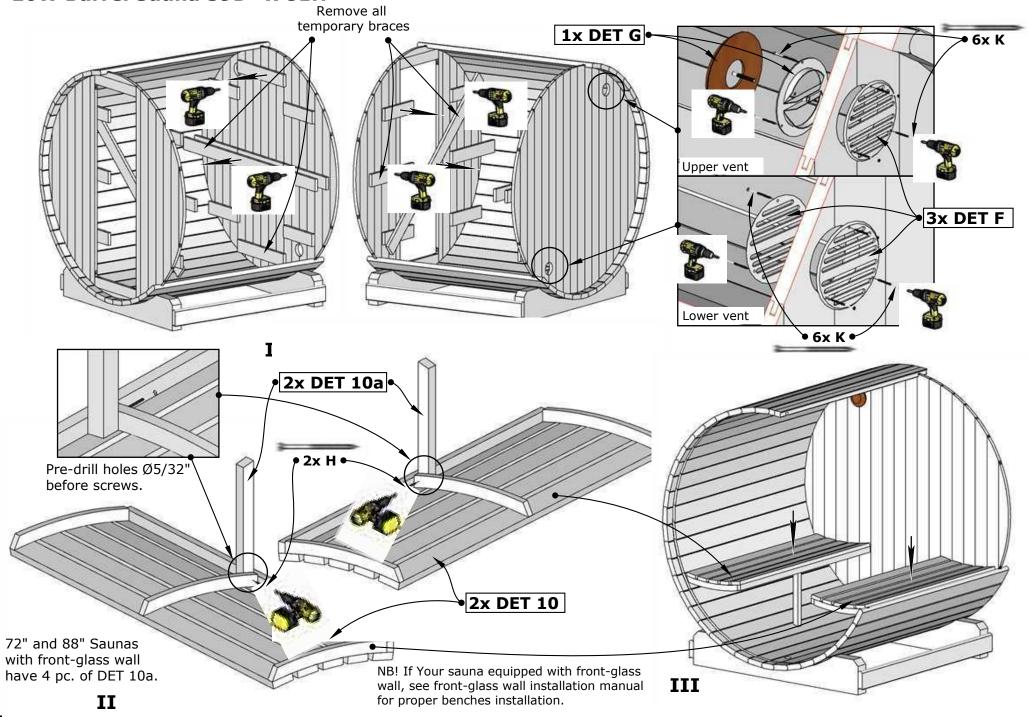

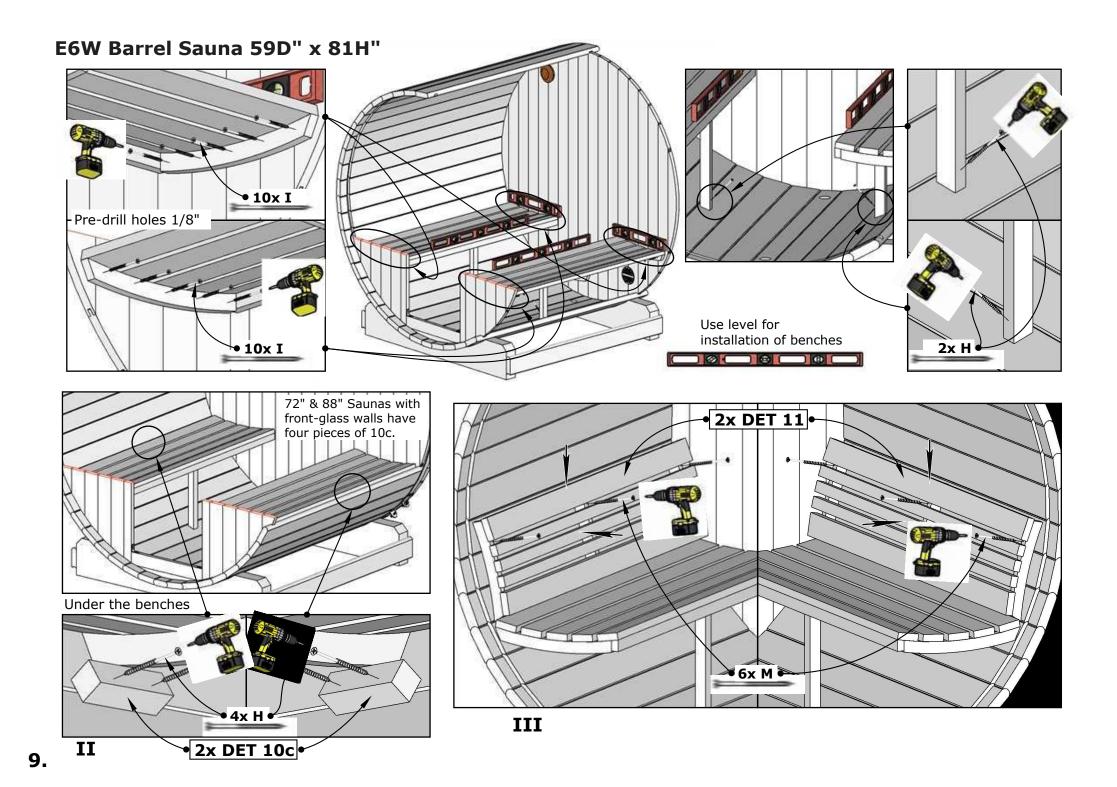

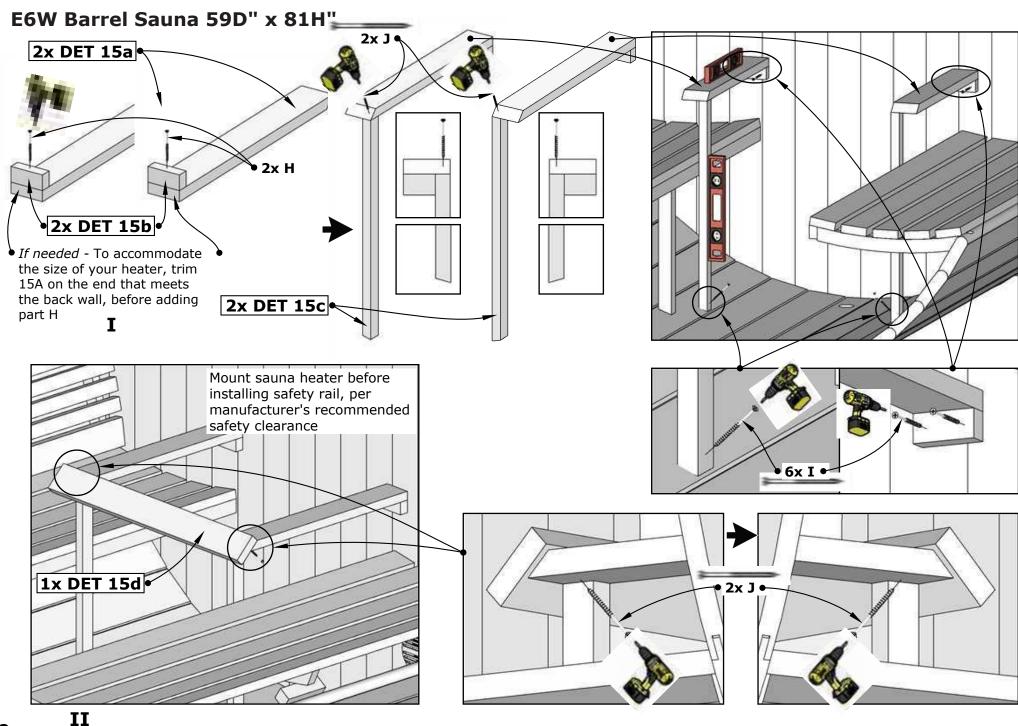

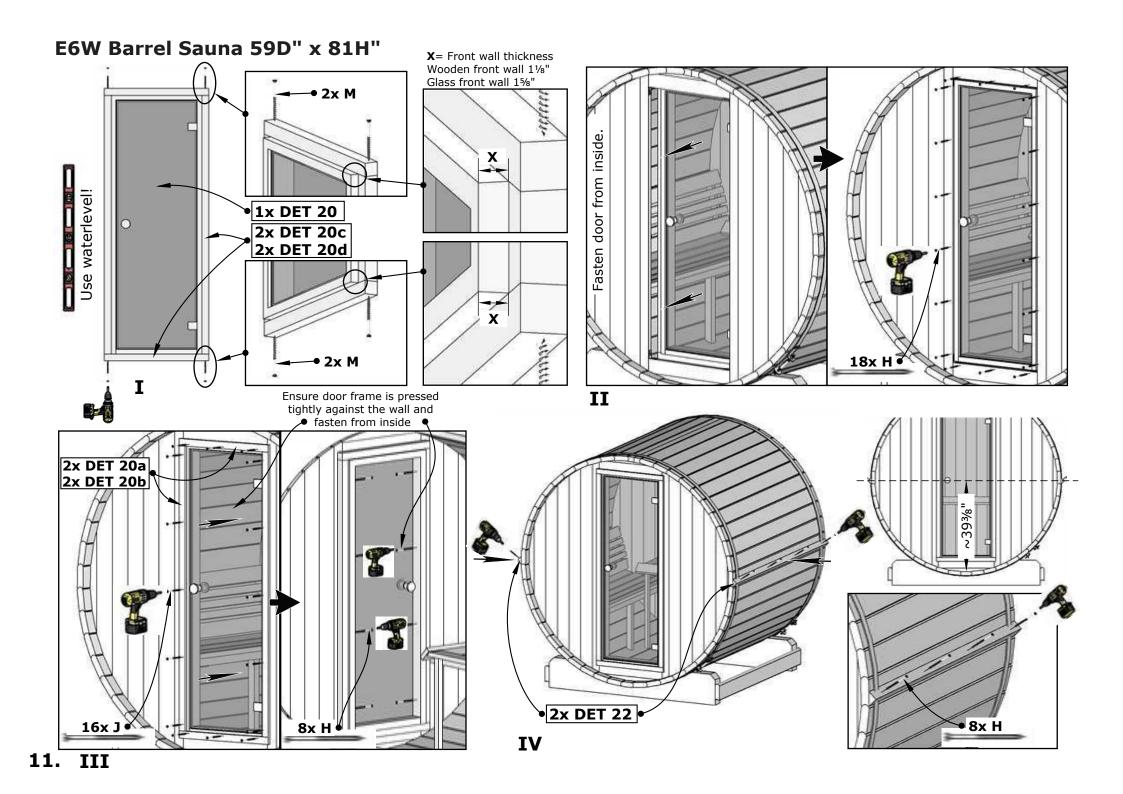

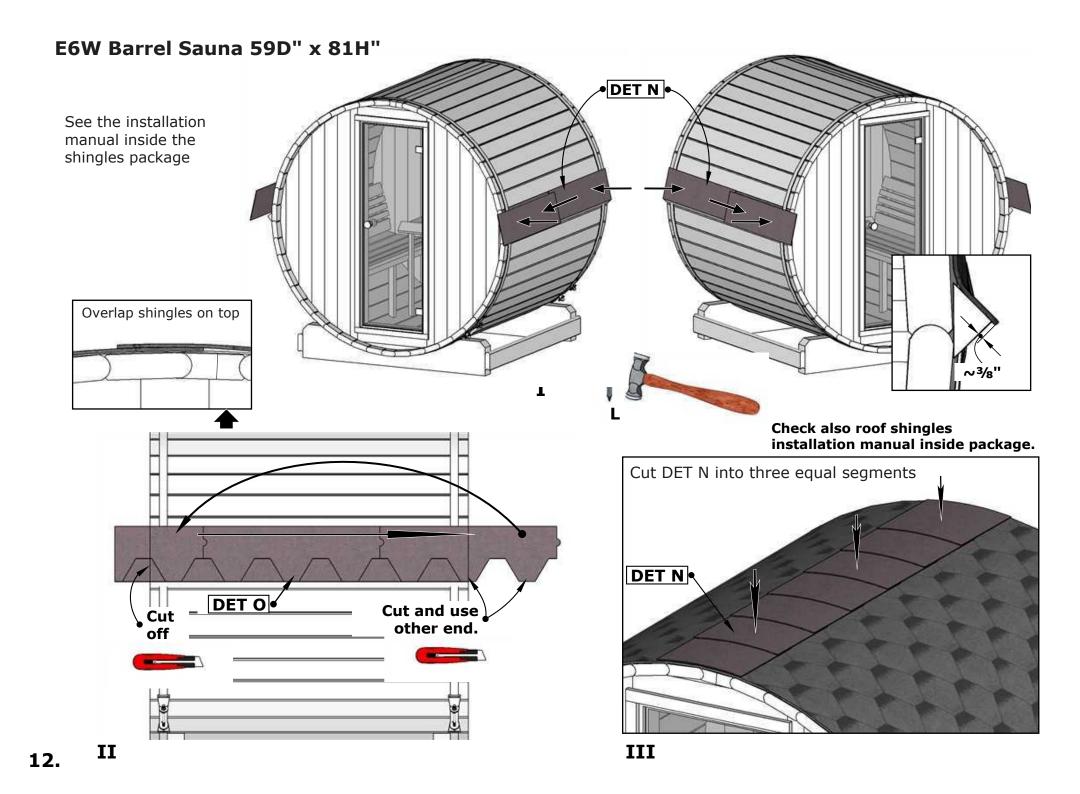

E6W Barrel Sauna 59D" x 81H"

