



Ergo-Series E8G Barrel Sauna Full Glass Front 87D" x 81H"




Note: Please read manual before construction

Front & Back Walls

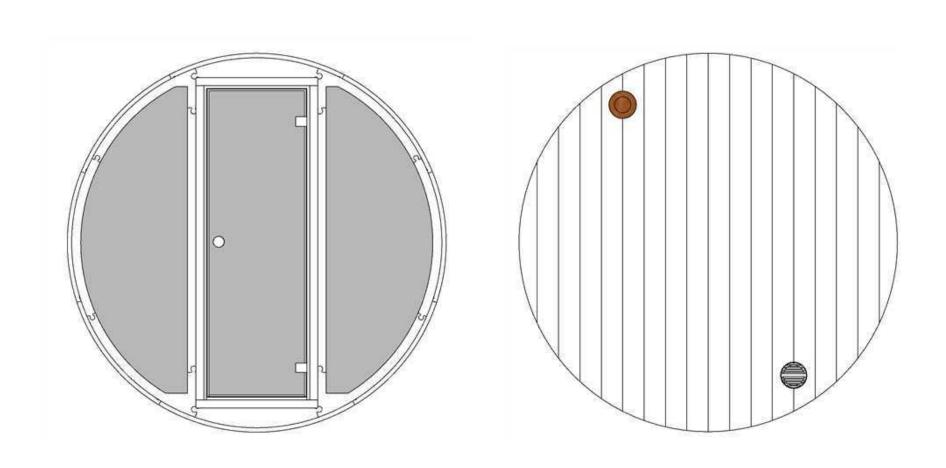


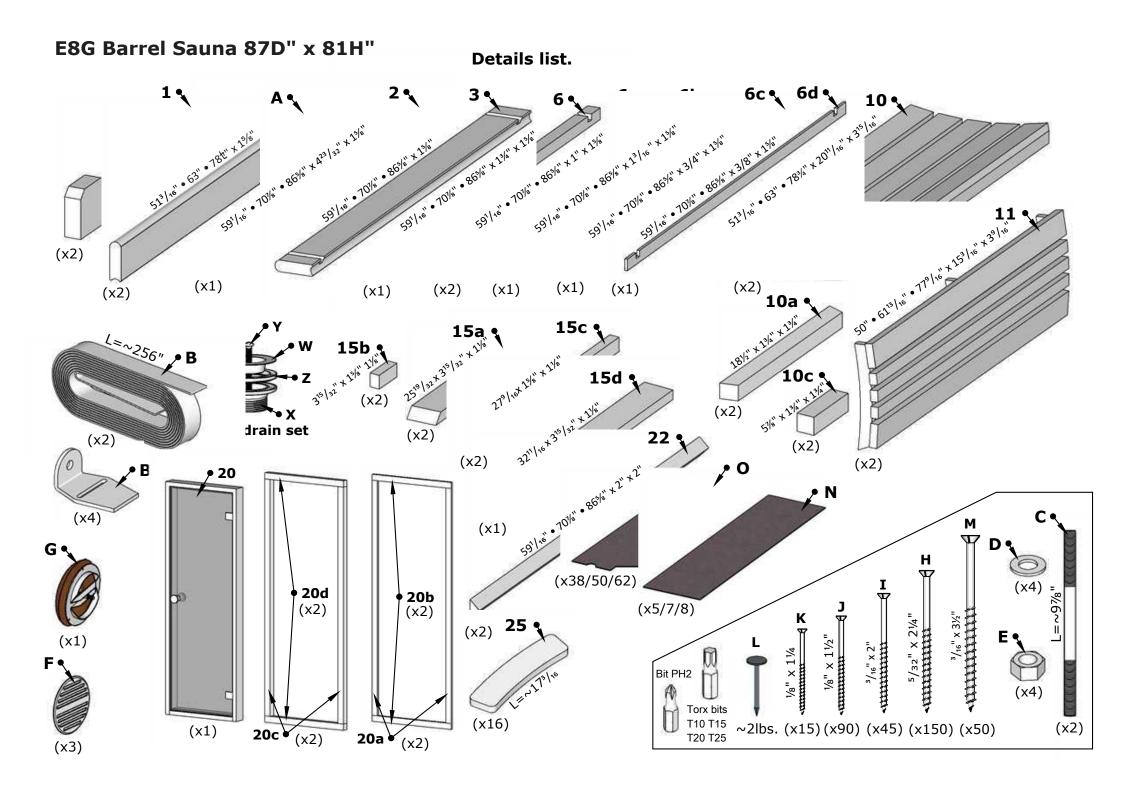


Tools needed

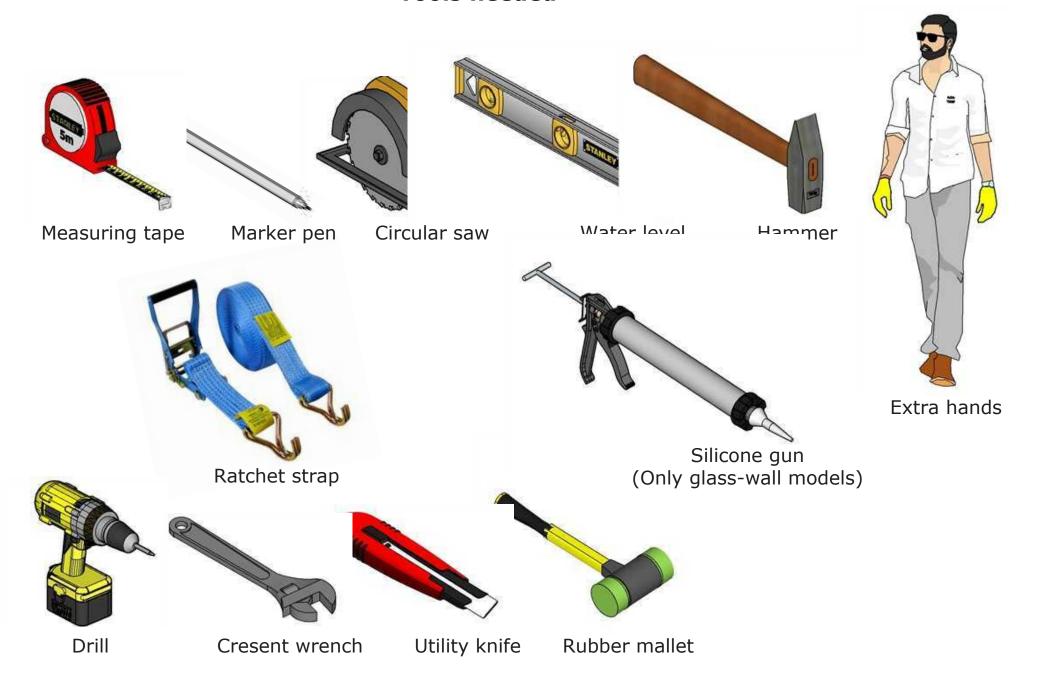


Front glass wall installation

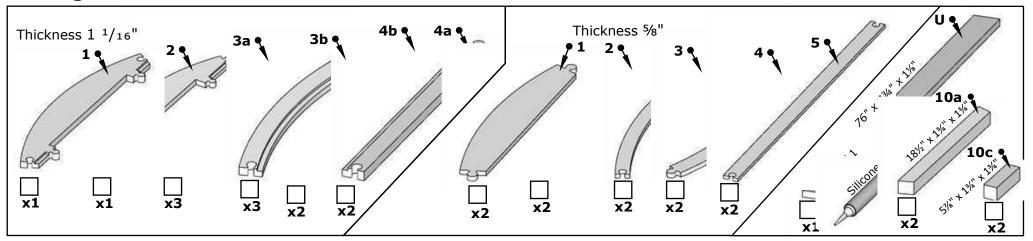


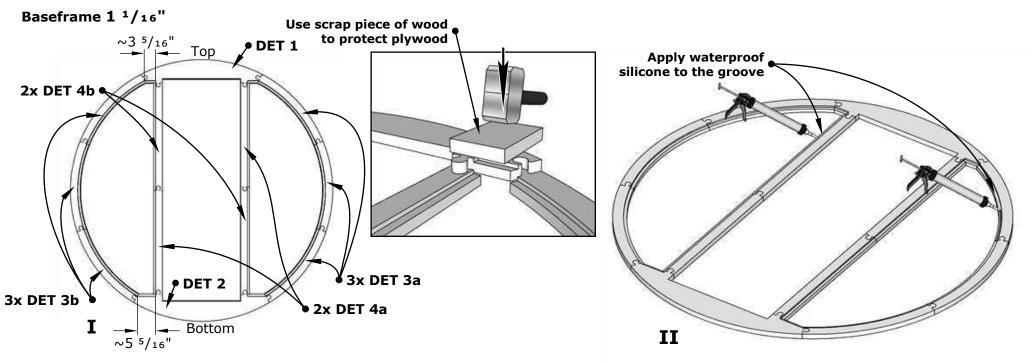


Front glass wall installation

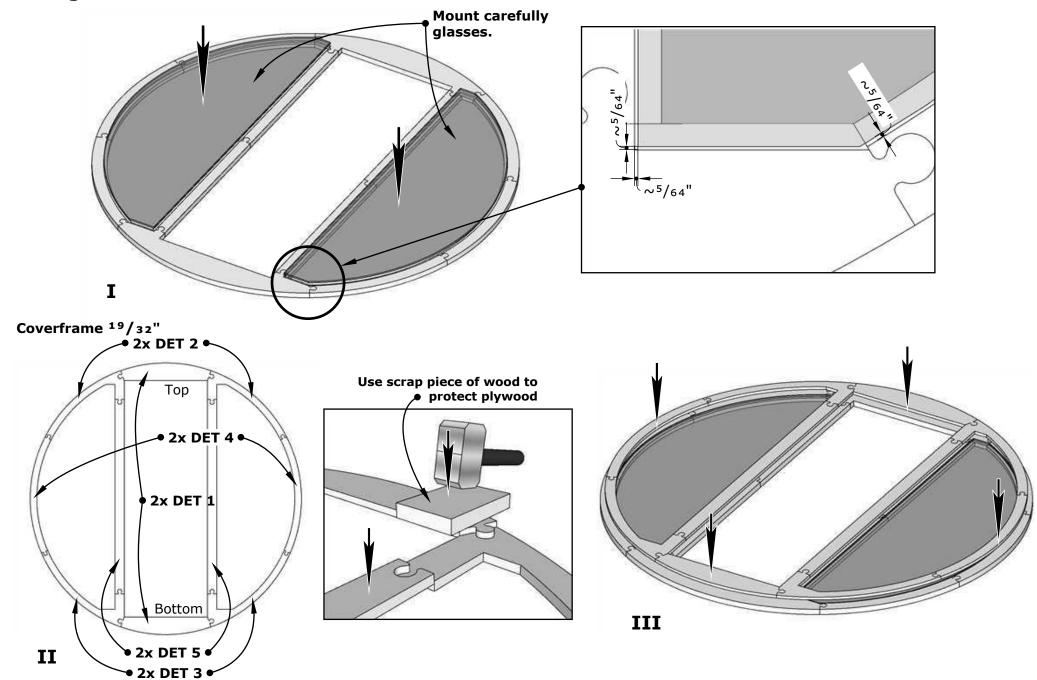



Front glass wall installation

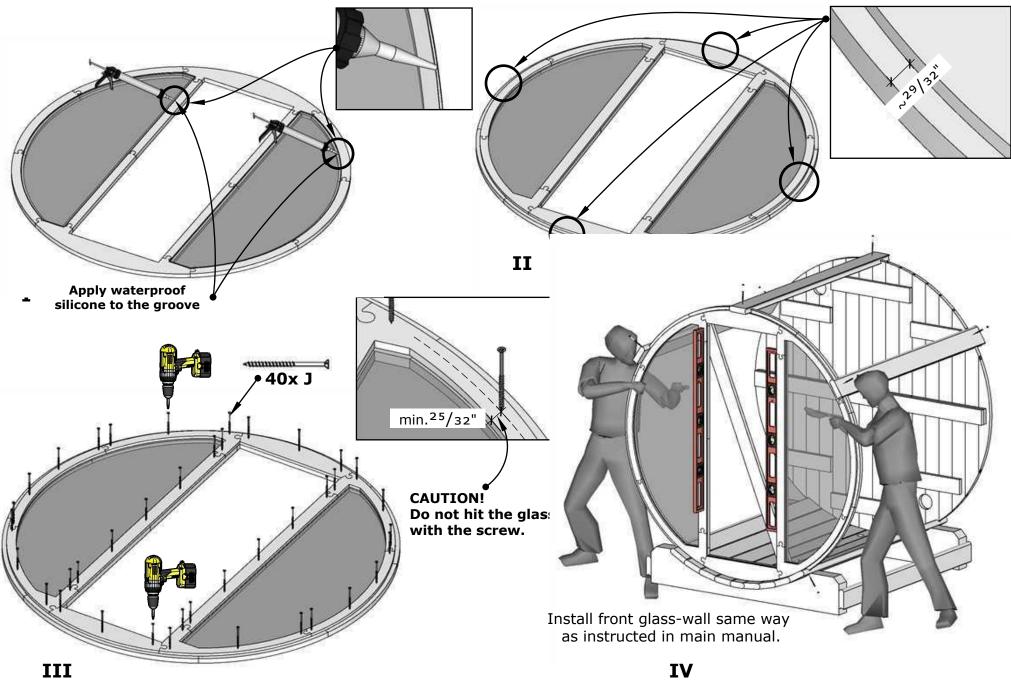


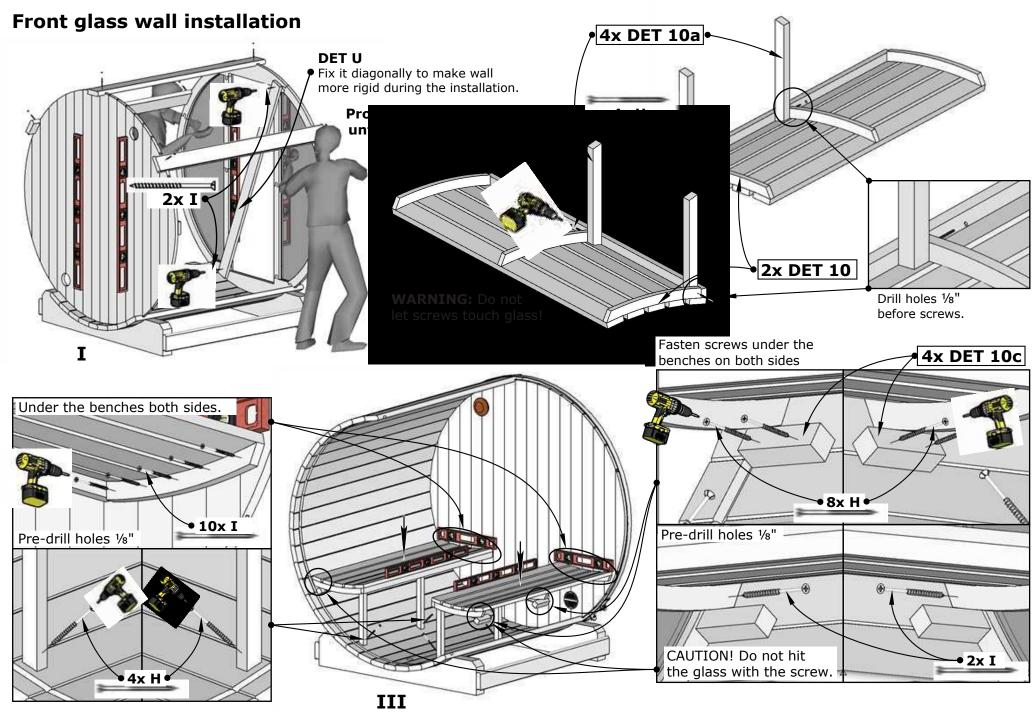



assembly **Details** DET U • 2x H • 4x I • II Pre-drill holes 5/32" before screws. Brackets inside. Install front glass-wall same way as instructed in main manual.

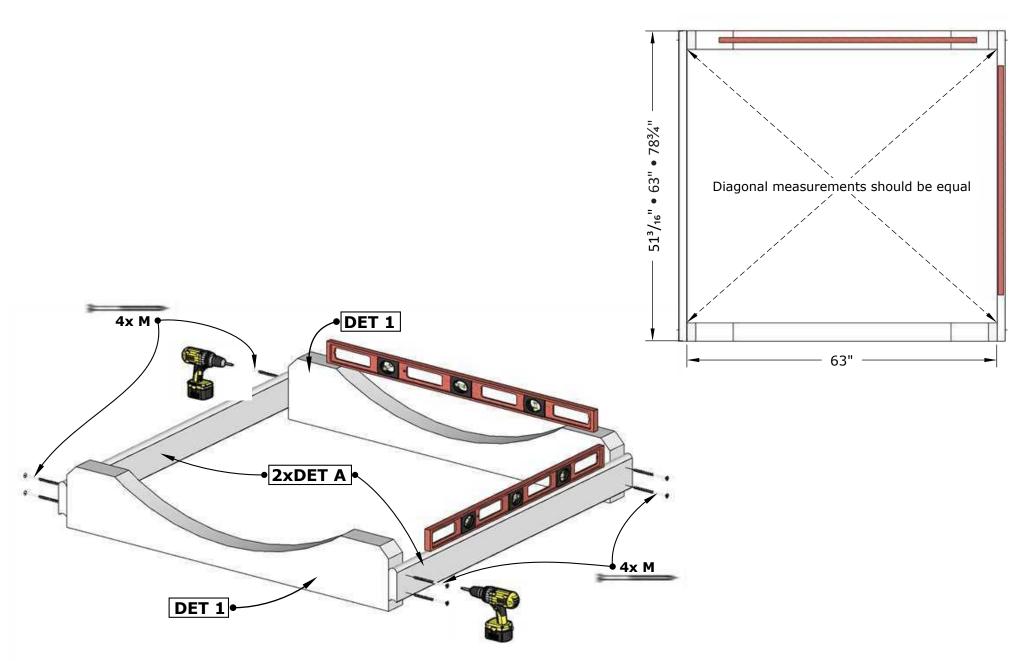


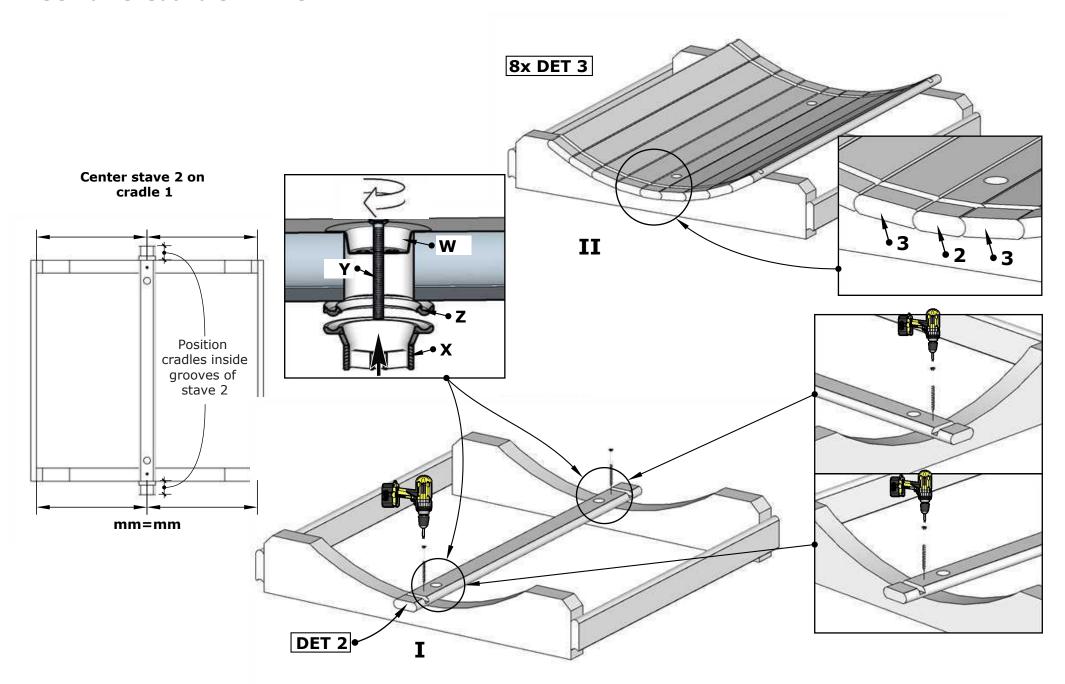

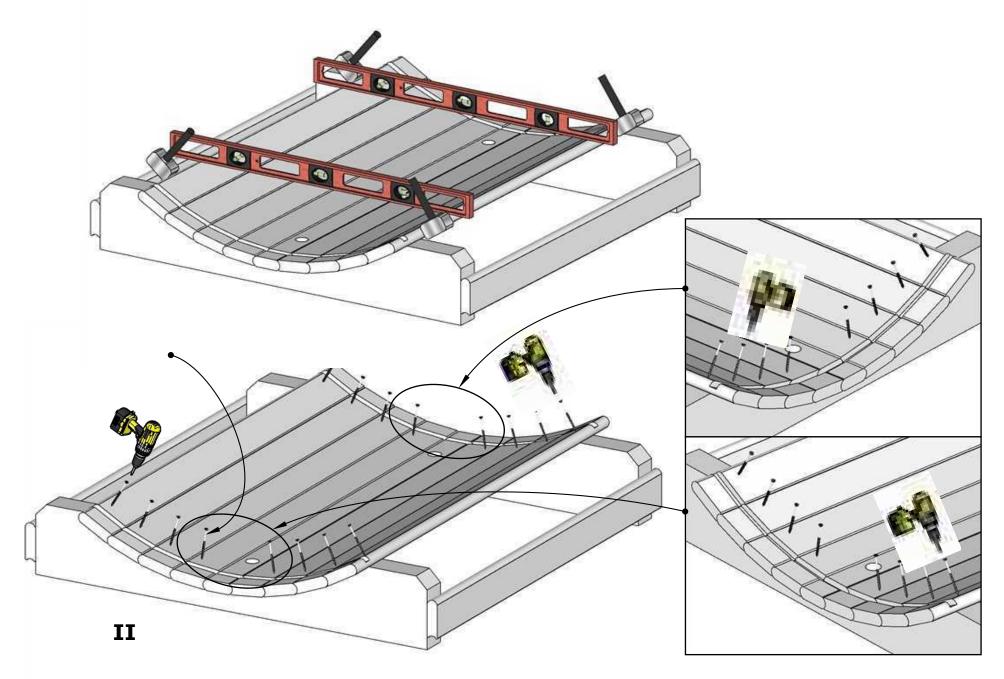

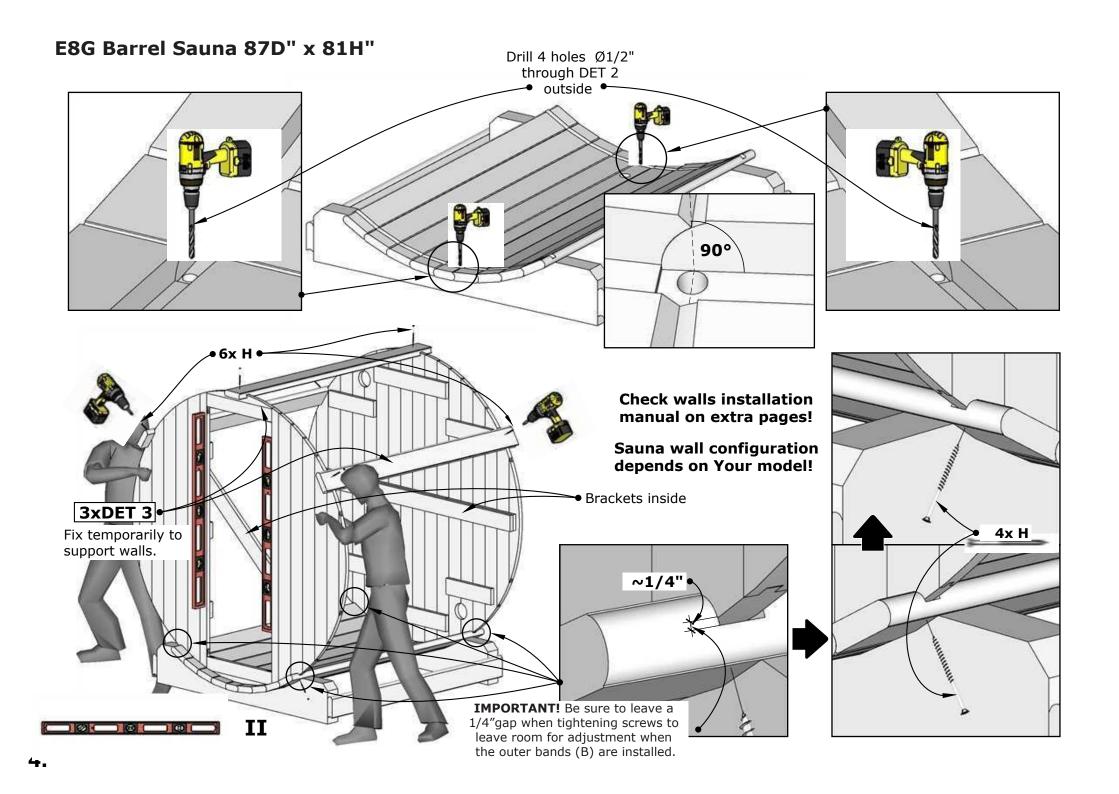


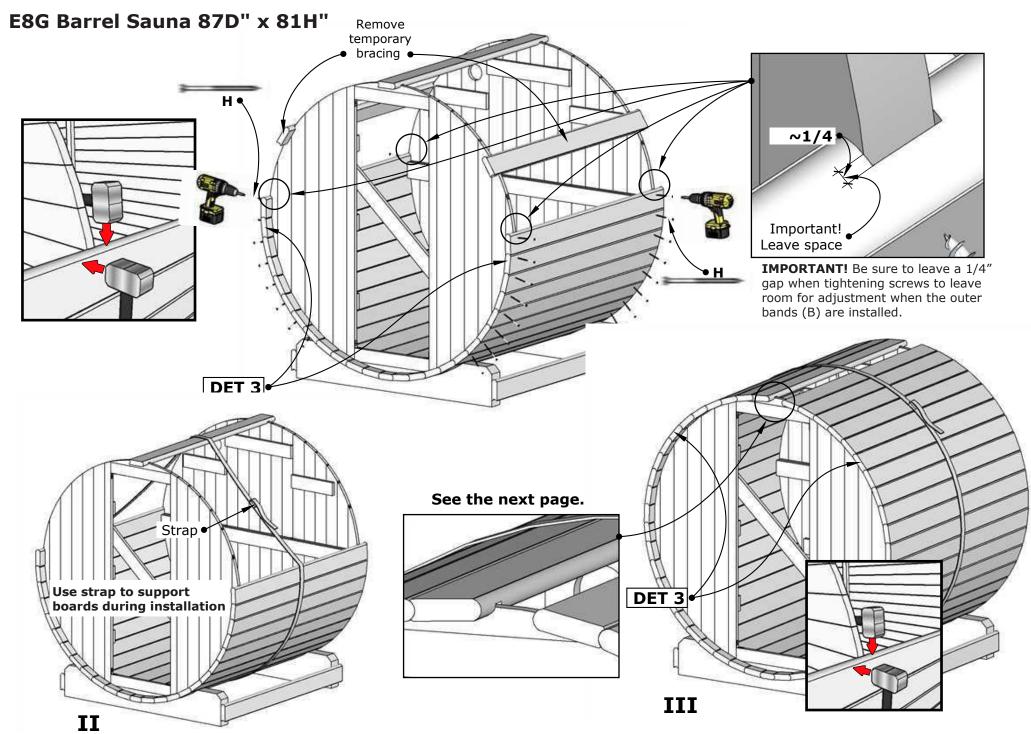

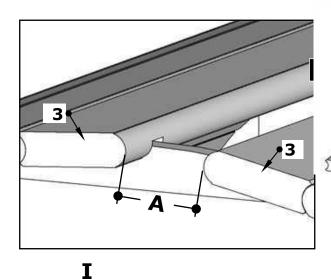



6 • 6a • 6b • 6c • 6d •

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

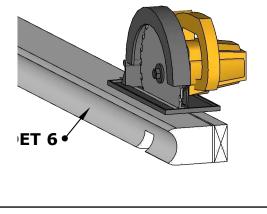


If needed, trim the flat edge of the board to create the desired width.

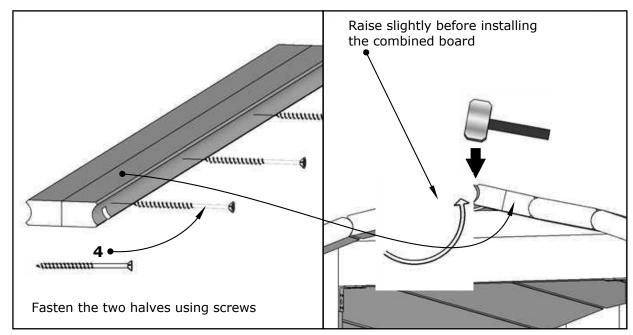


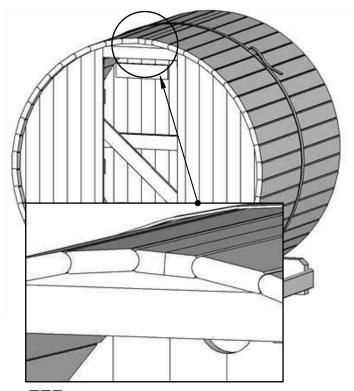



III


II

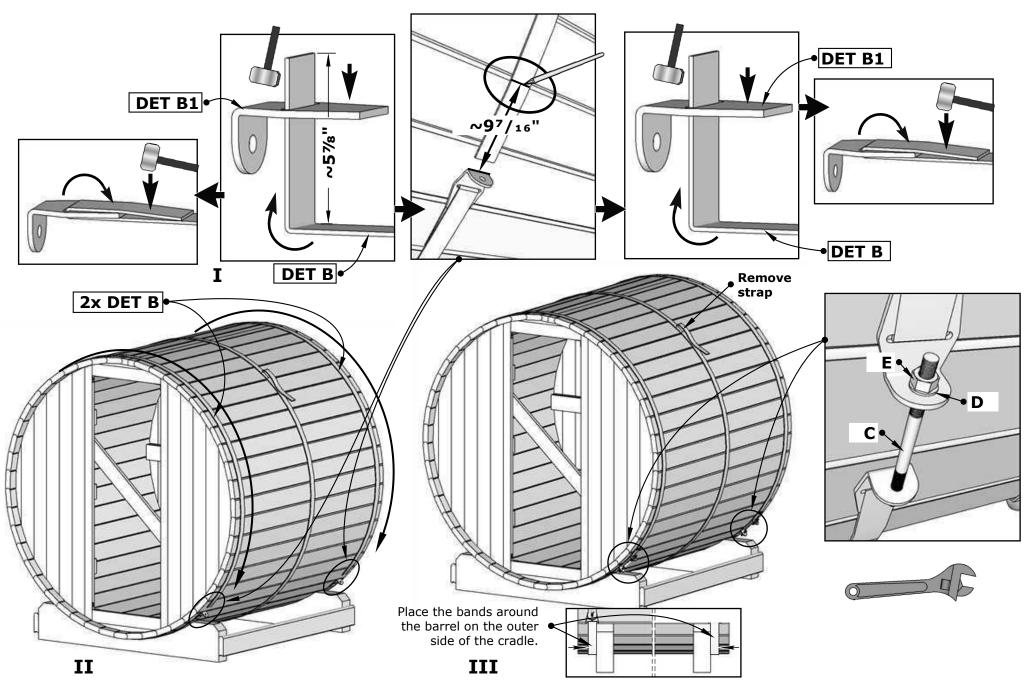


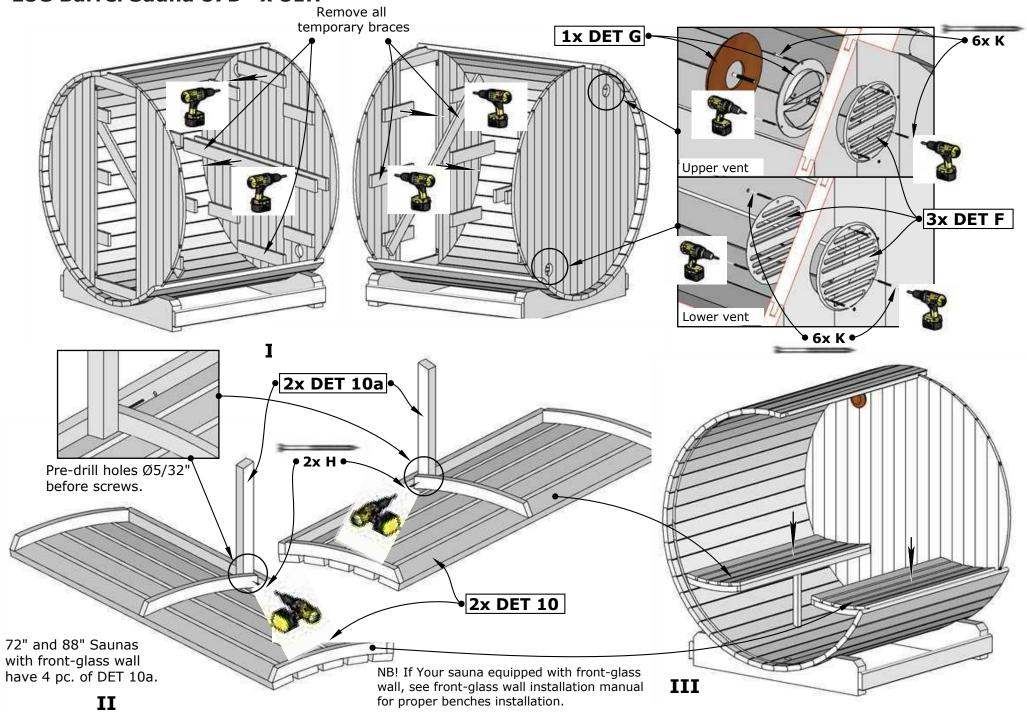

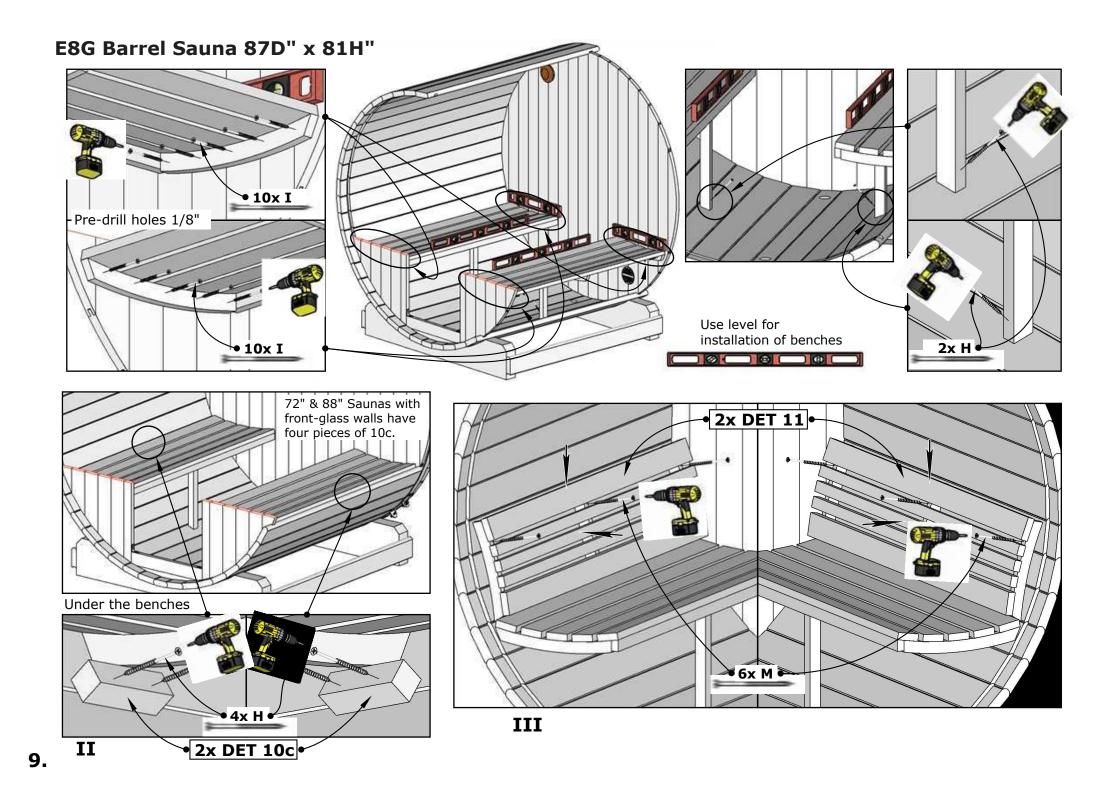

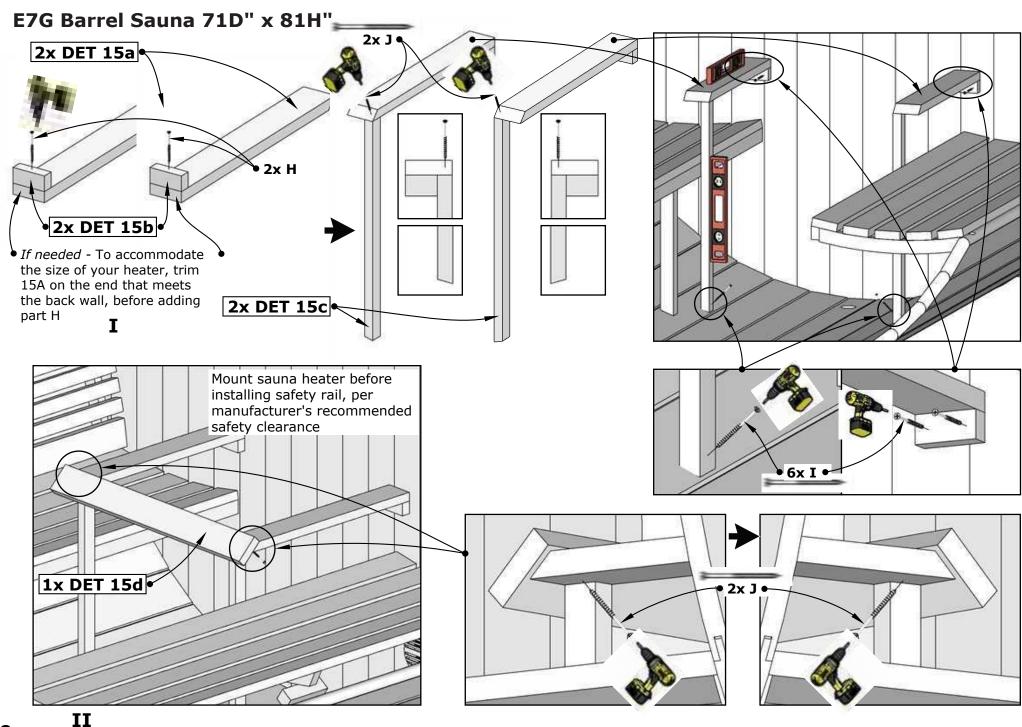

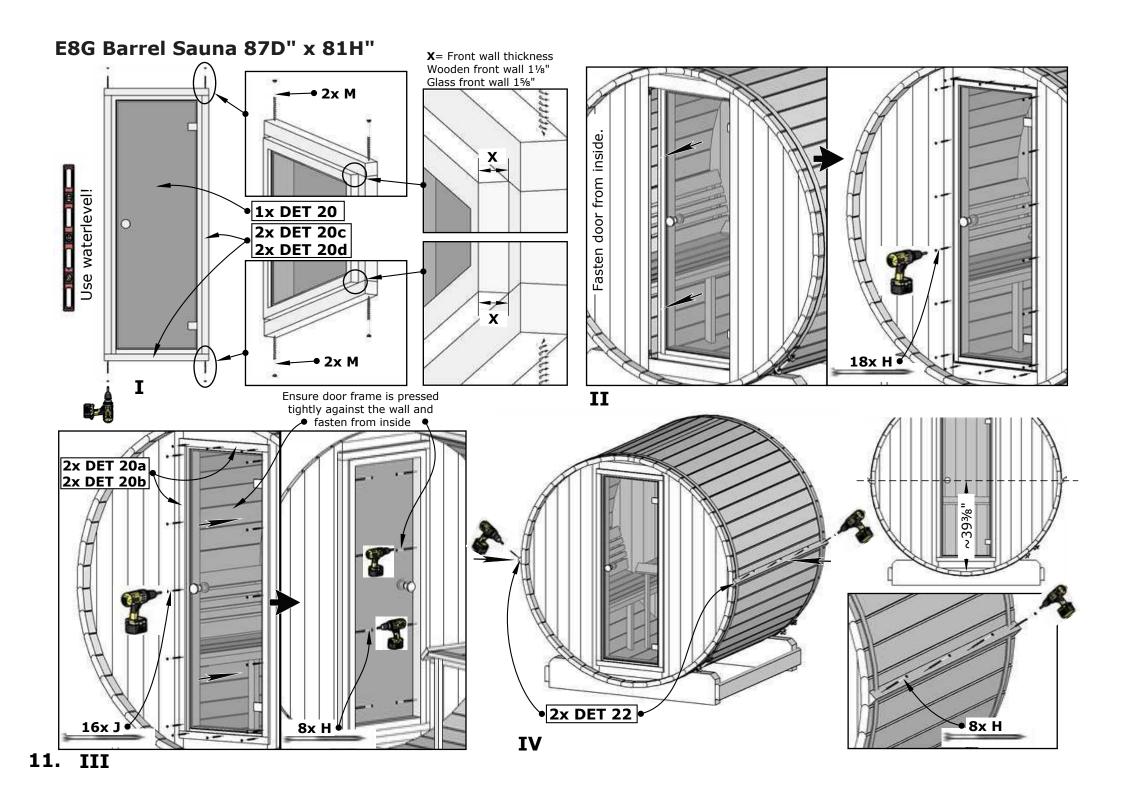

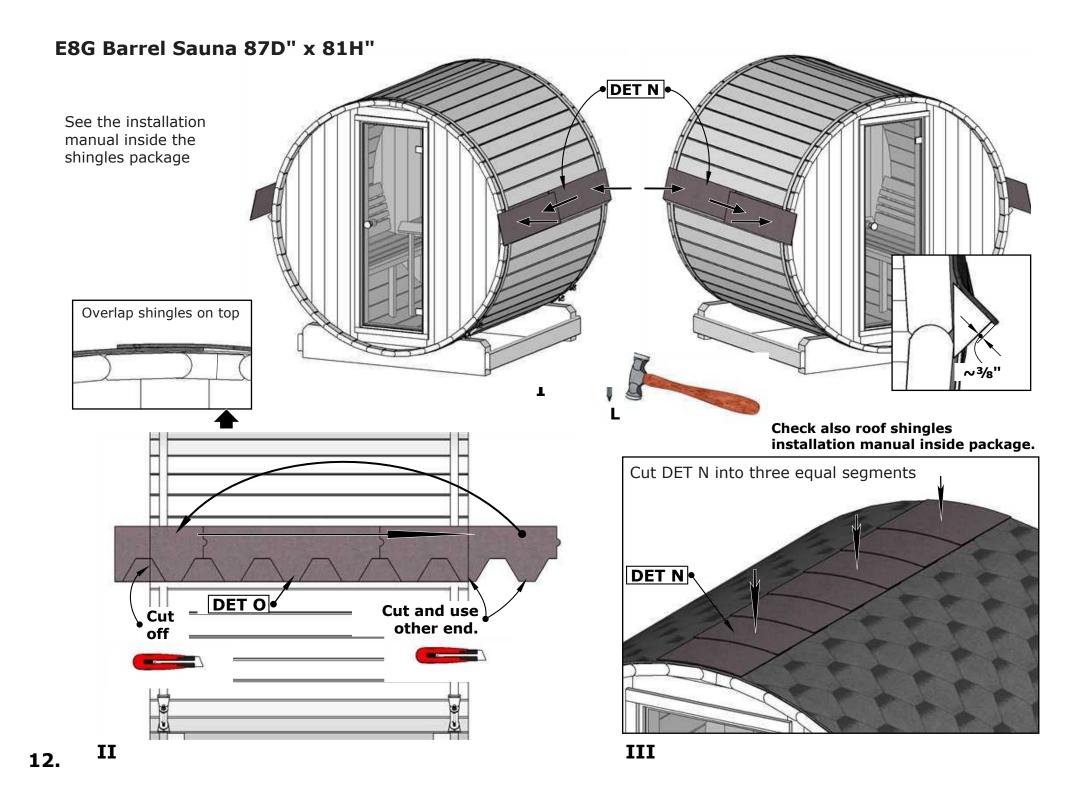

E8G Barrel Sauna 87D" x 81H"

