



Ergo-Series E8 Barrel Sauna 87D" x 81H"




Note: Please read manual before construction

Front & Back Walls

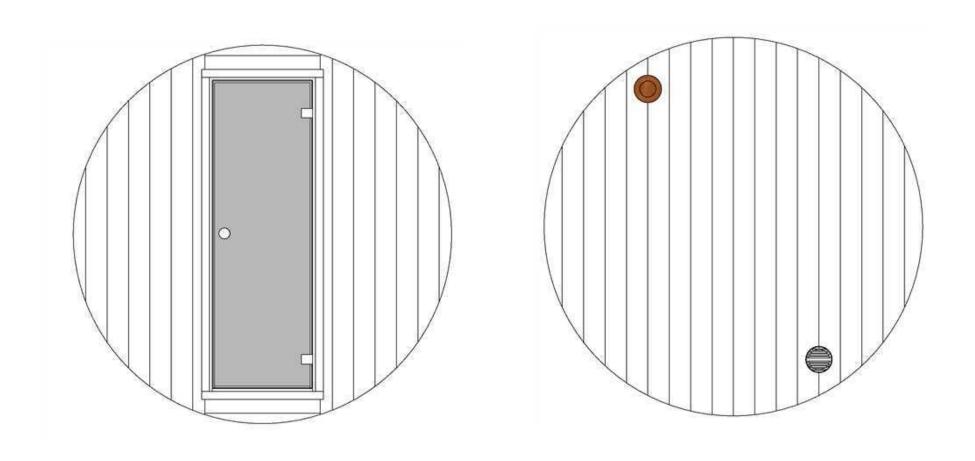


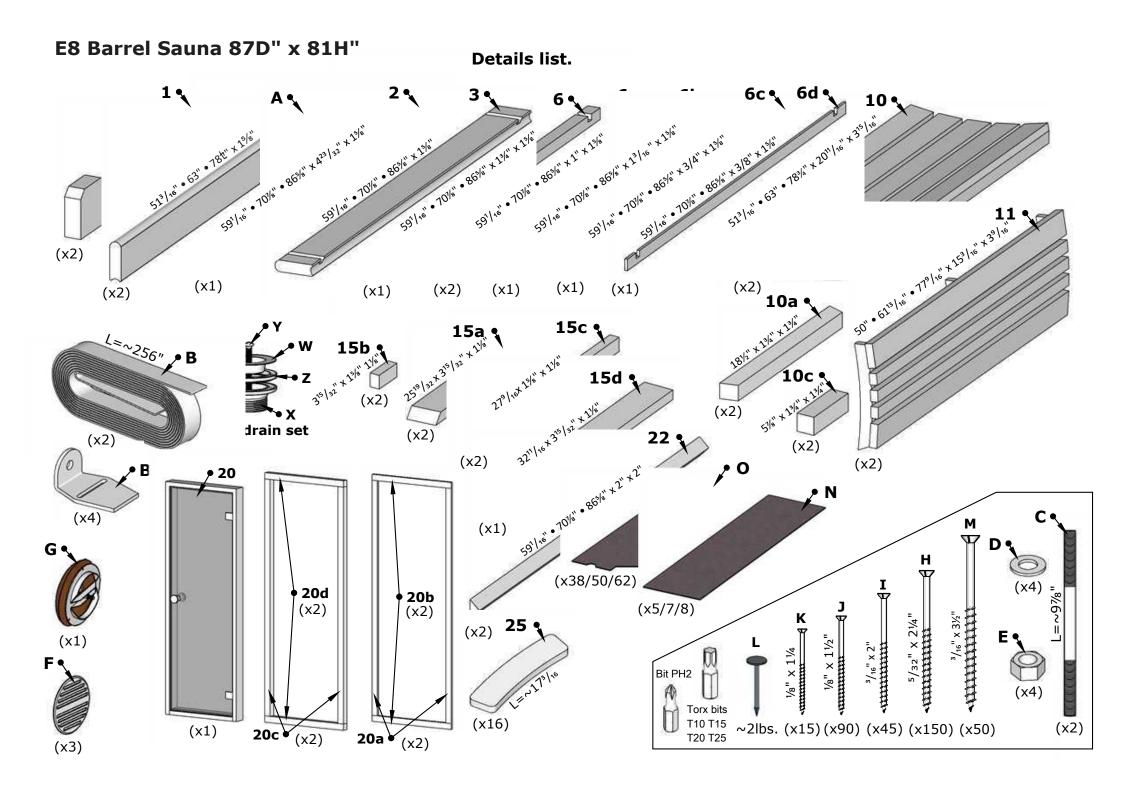



Tools needed

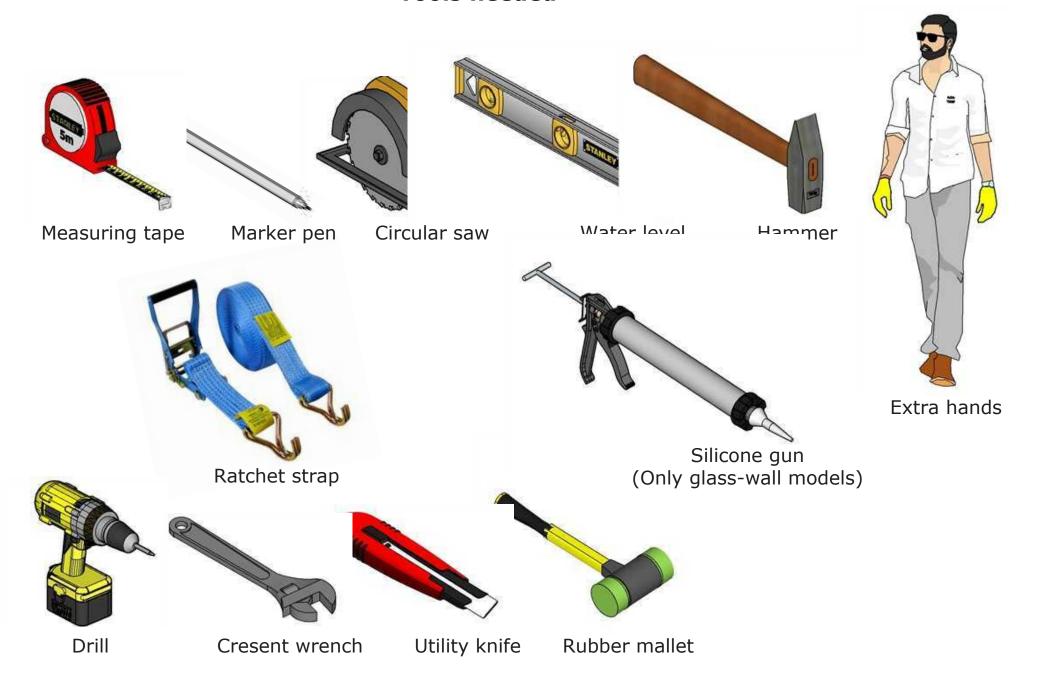


Wooden front wall installation

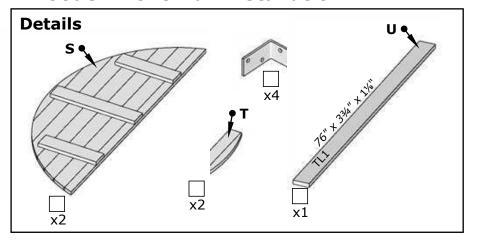


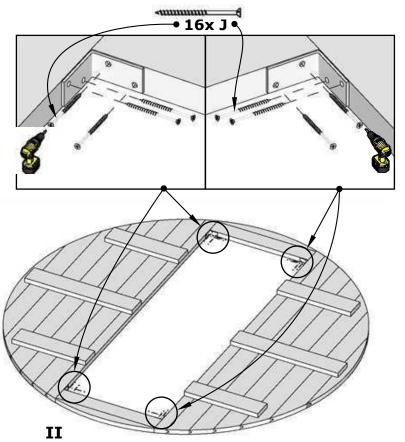


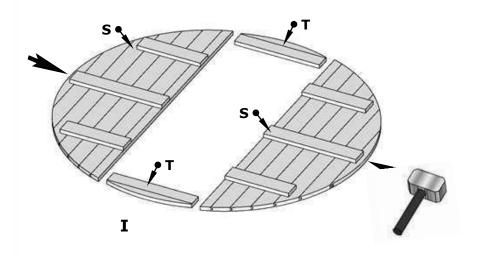

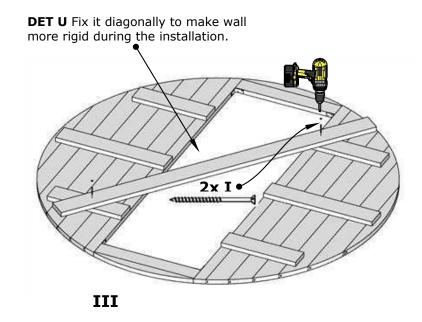



installation **Details** DET U • 2x H • 4x I Pre-drill holes 5/32" before screws. Brackets inside. III

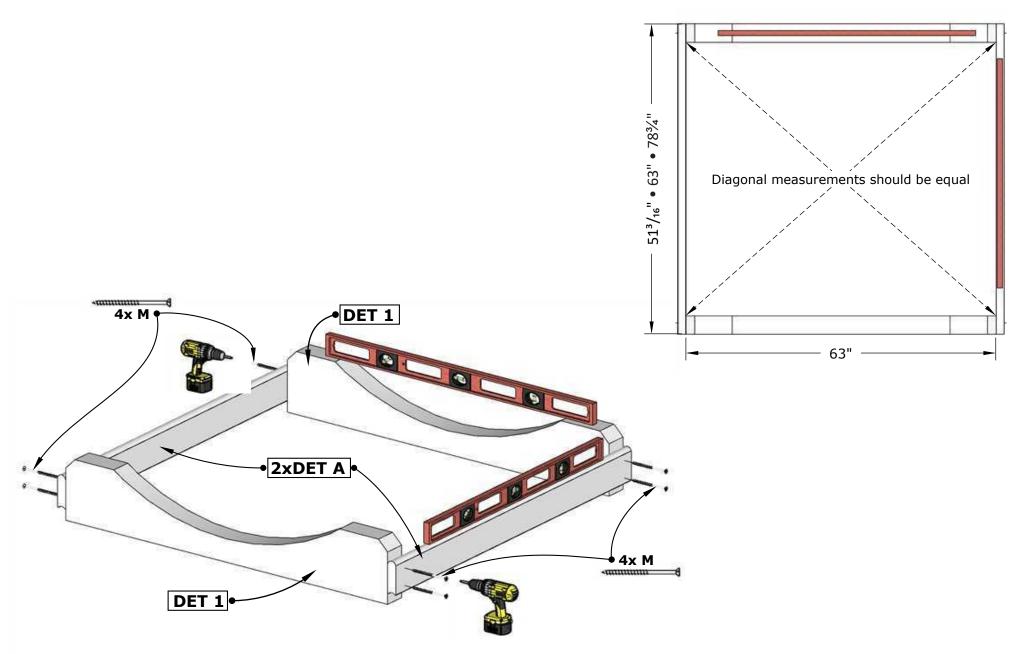


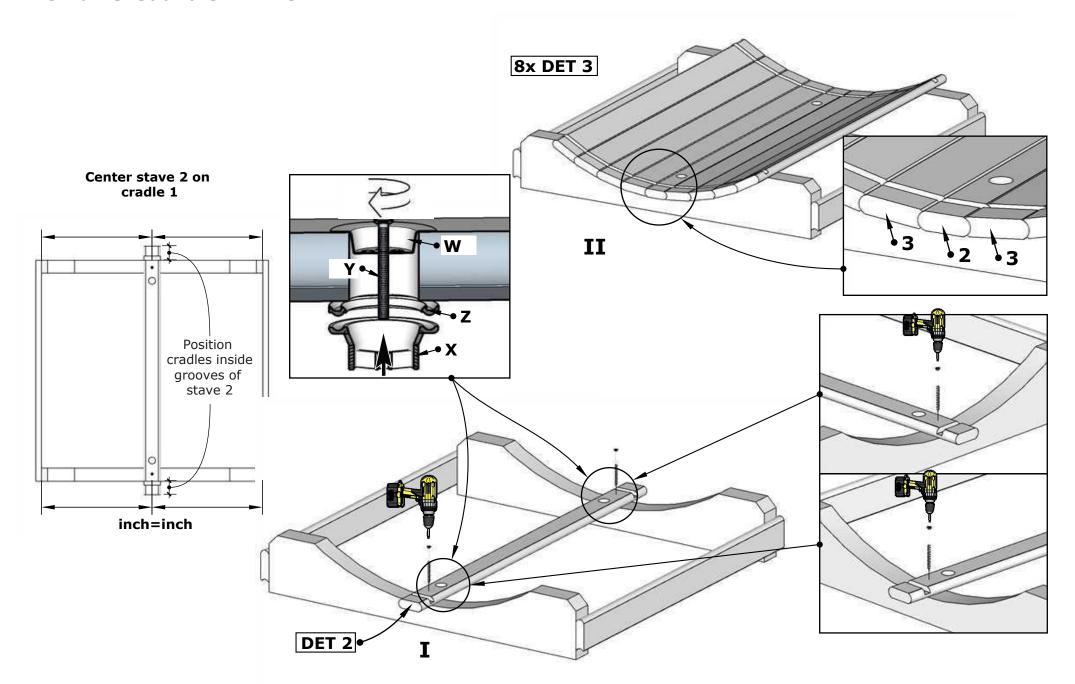


E8 Barrel Sauna 87D" x 81H"

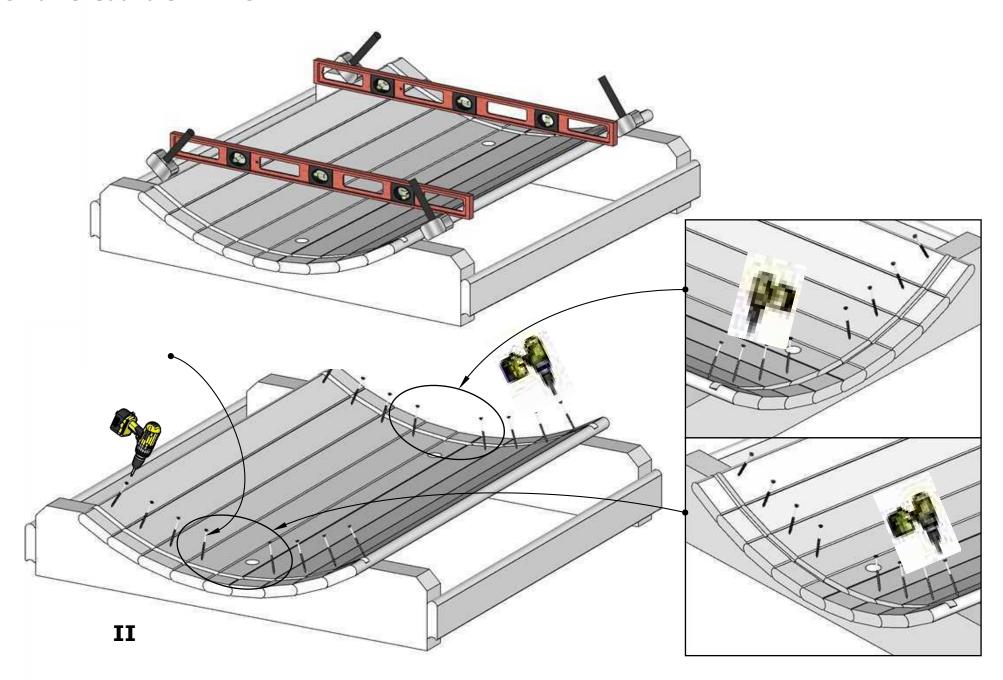

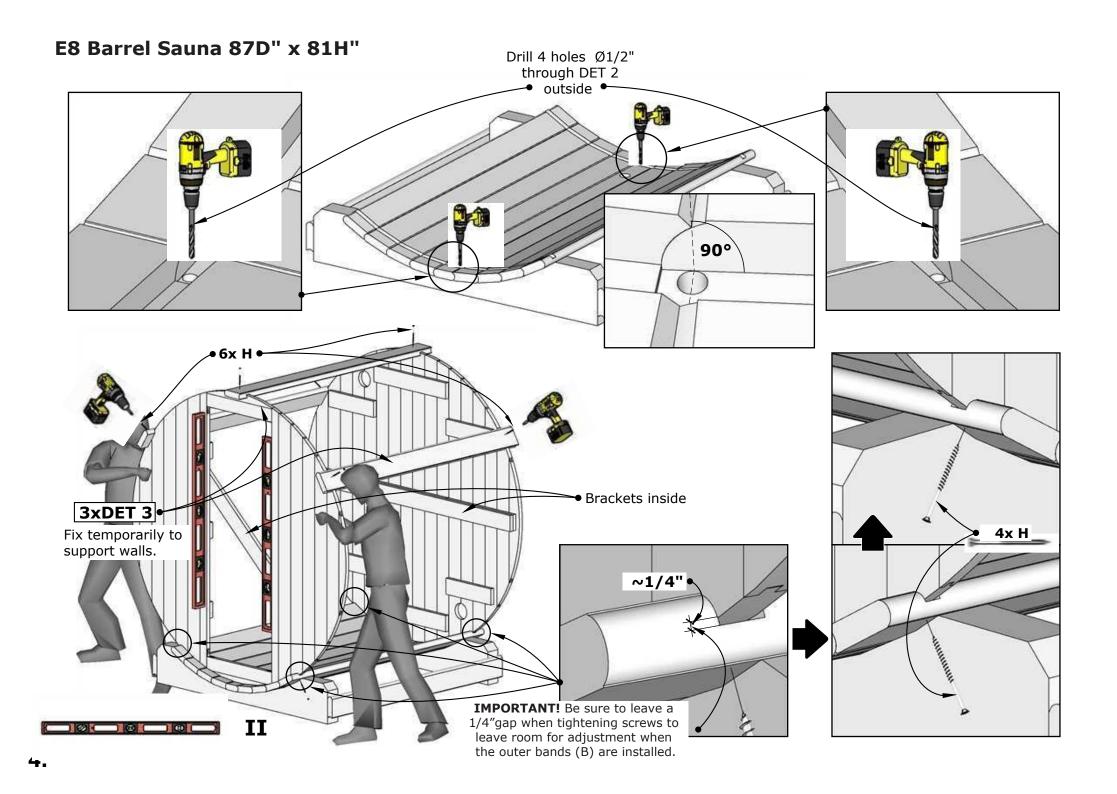

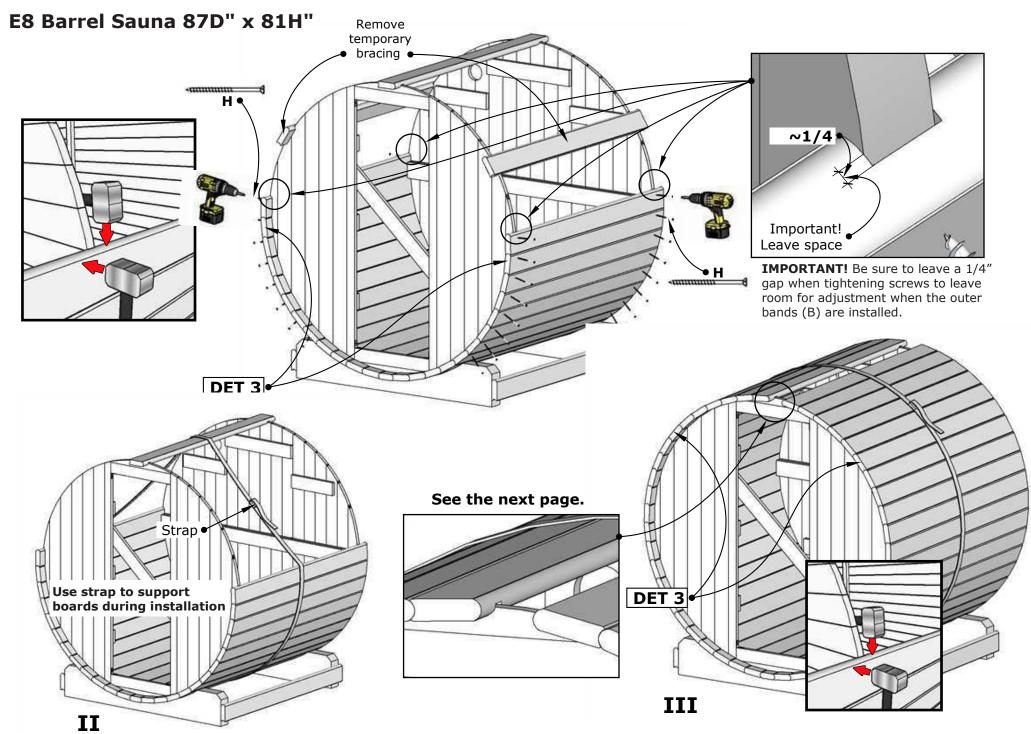


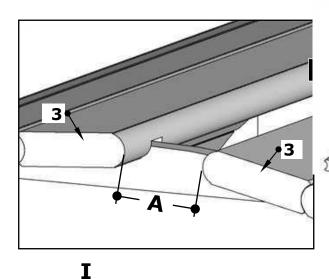


Join two boards together (as shown in


64 6a4 6b4 6c4 6d4

Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately 1/4" wider than the gap.

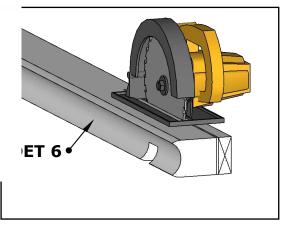



If needed, trim the flat edge of the board to create the desired width.

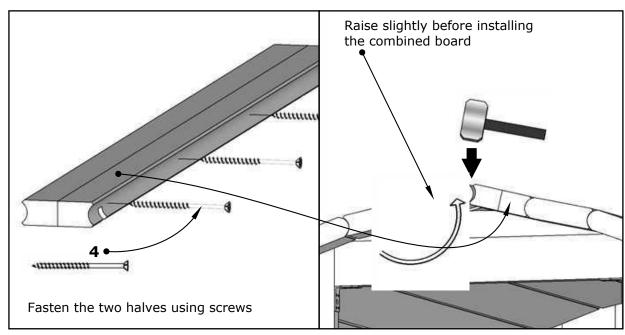


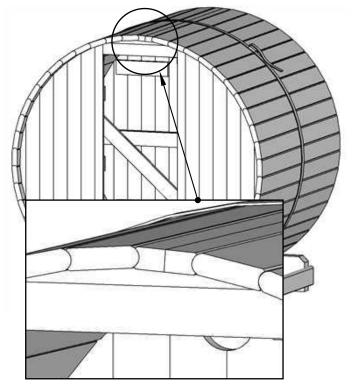



III

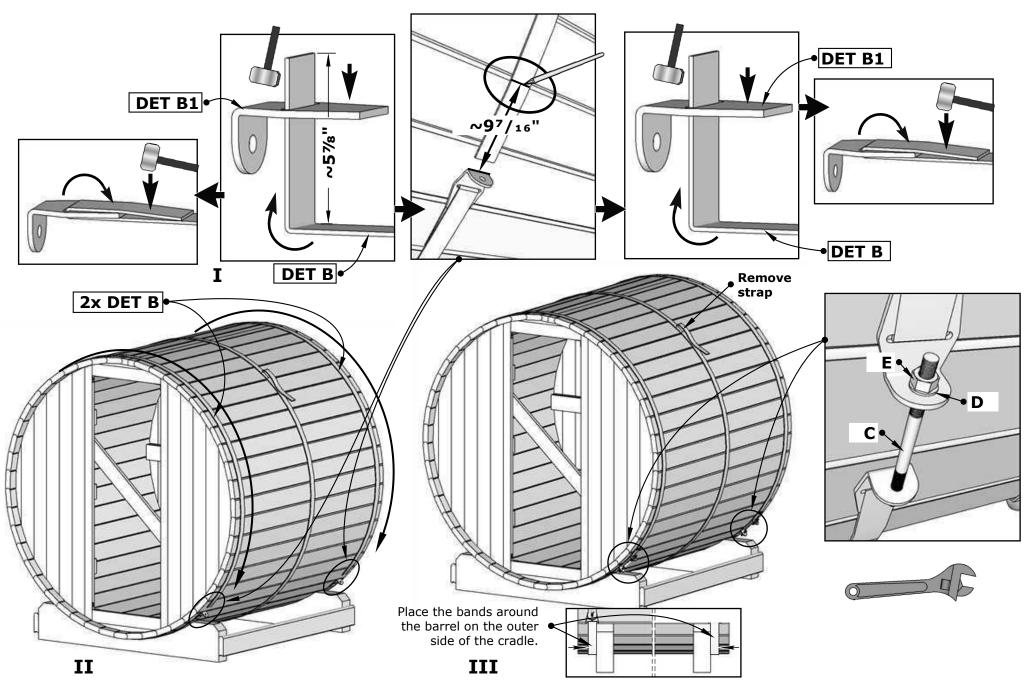


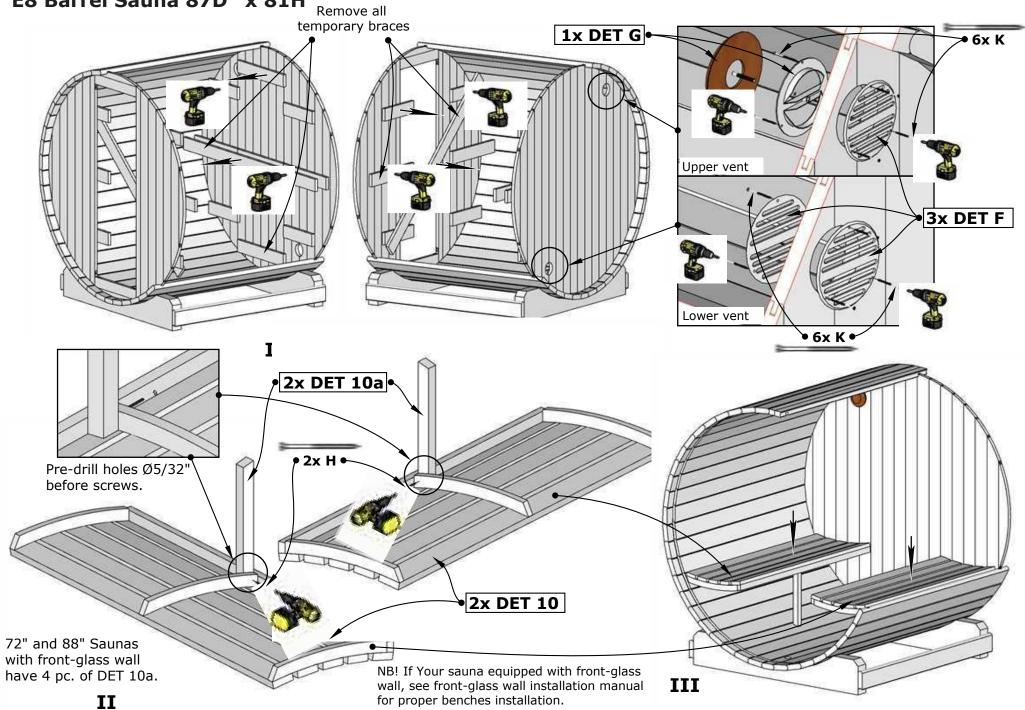

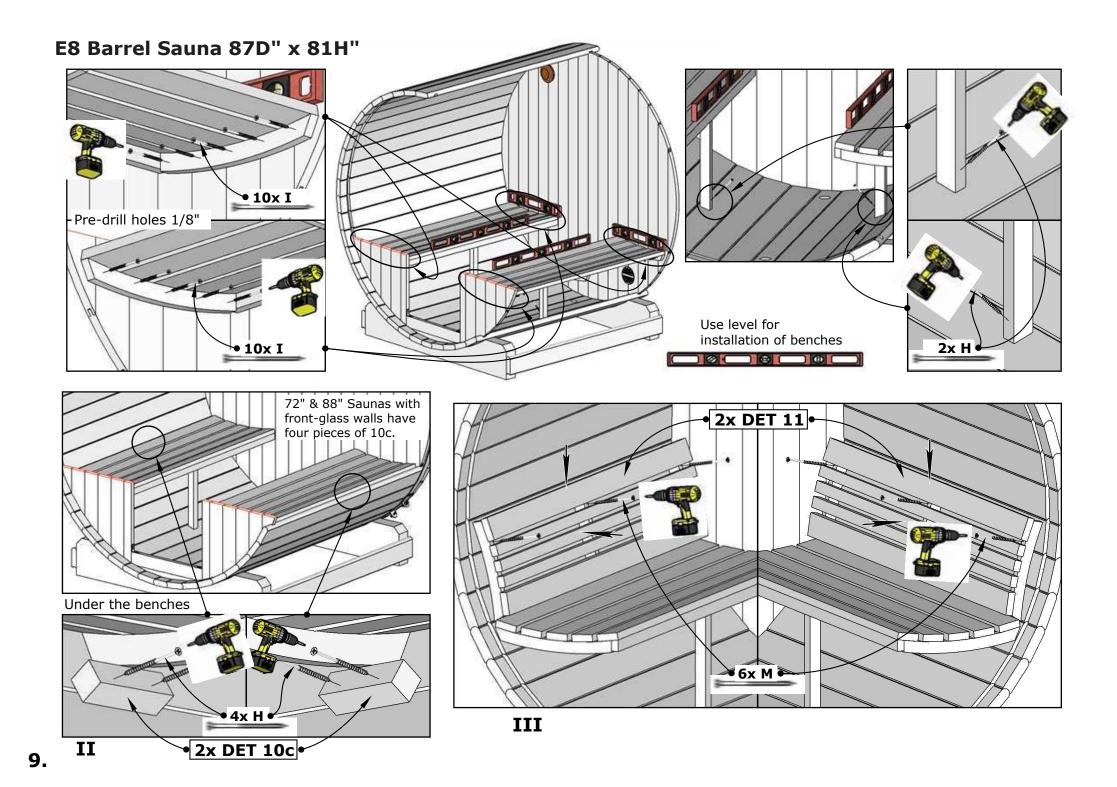

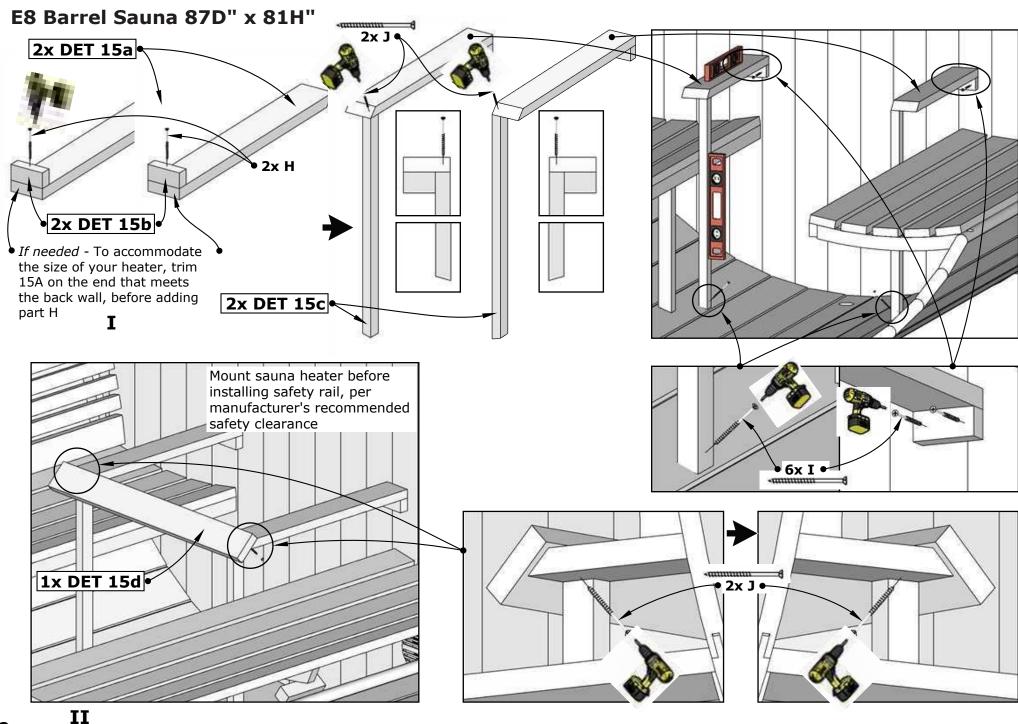

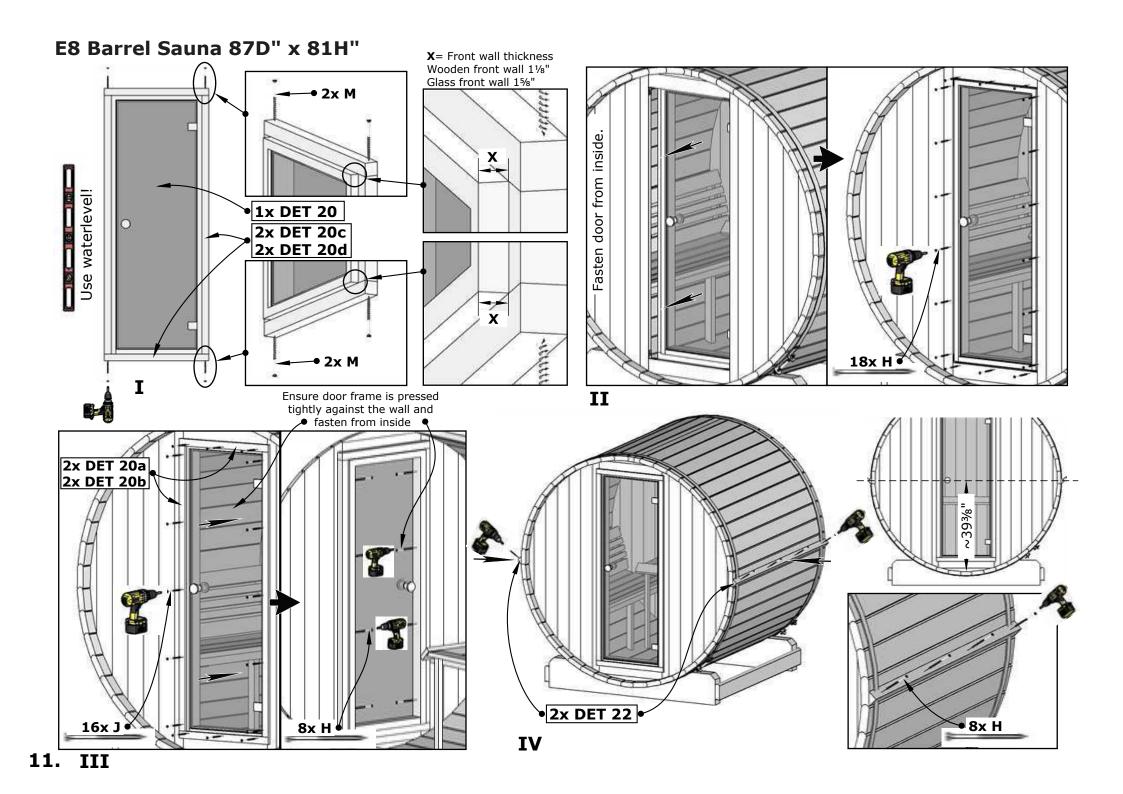

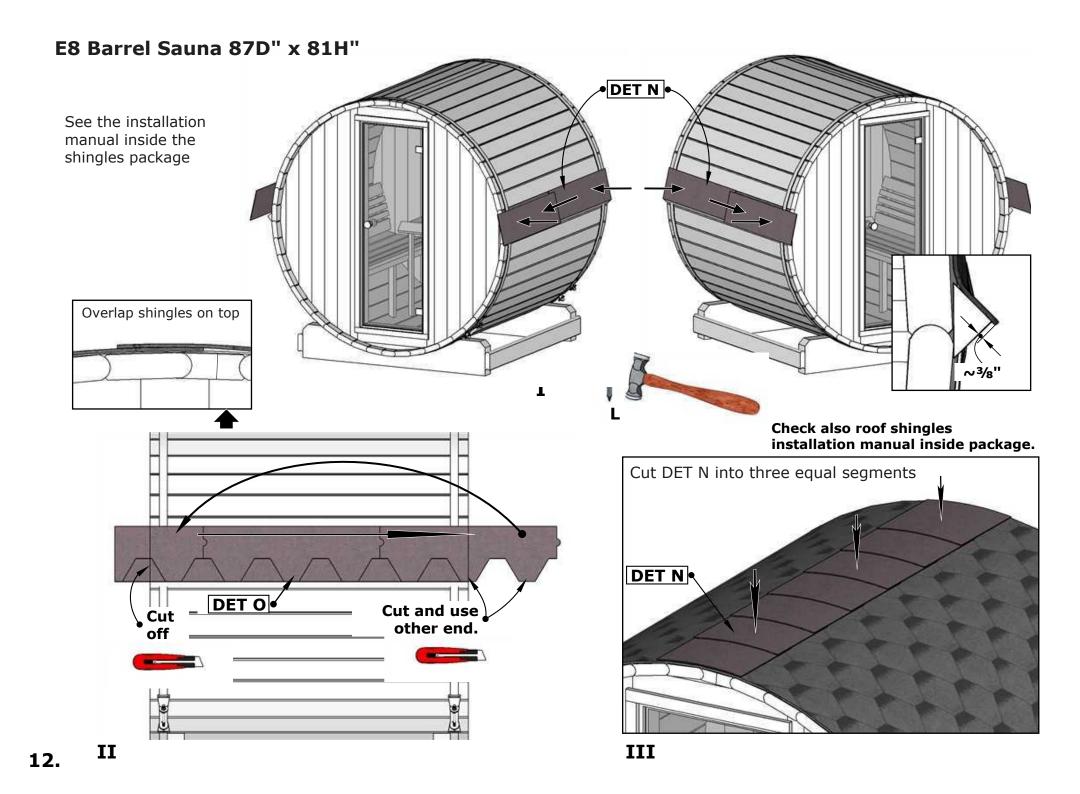

E8 Barrel Sauna 87D" x 81H"

