






Ergo-Series EE8G Barrel Sauna
Full Glass Front 79D" x 90H"

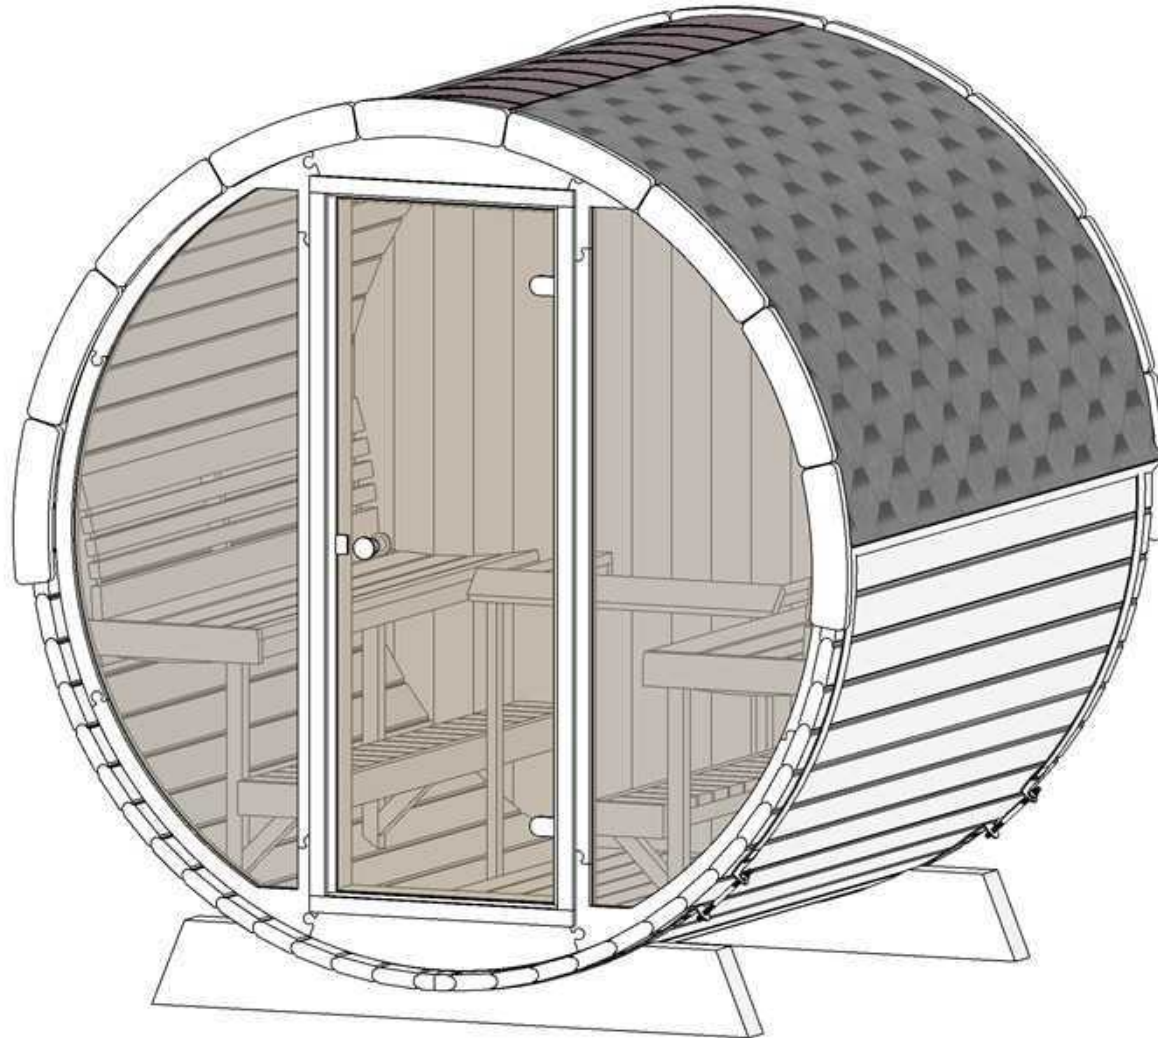

Note: Please read manual before construction


Rev: (1.0)7/2023

Front & Back Walls

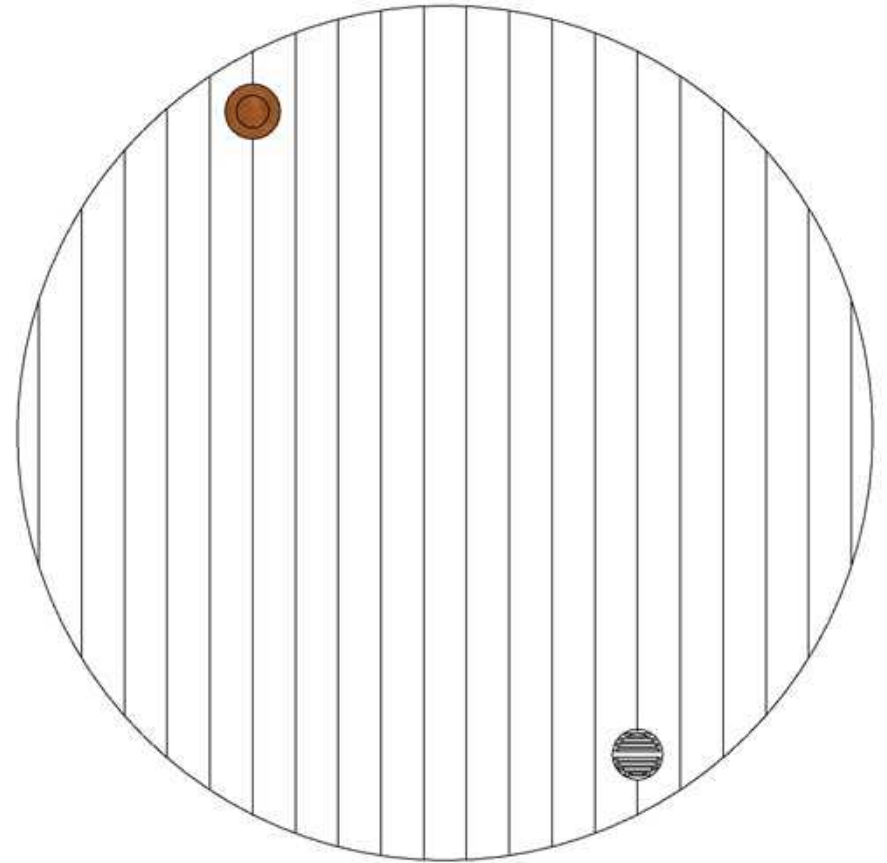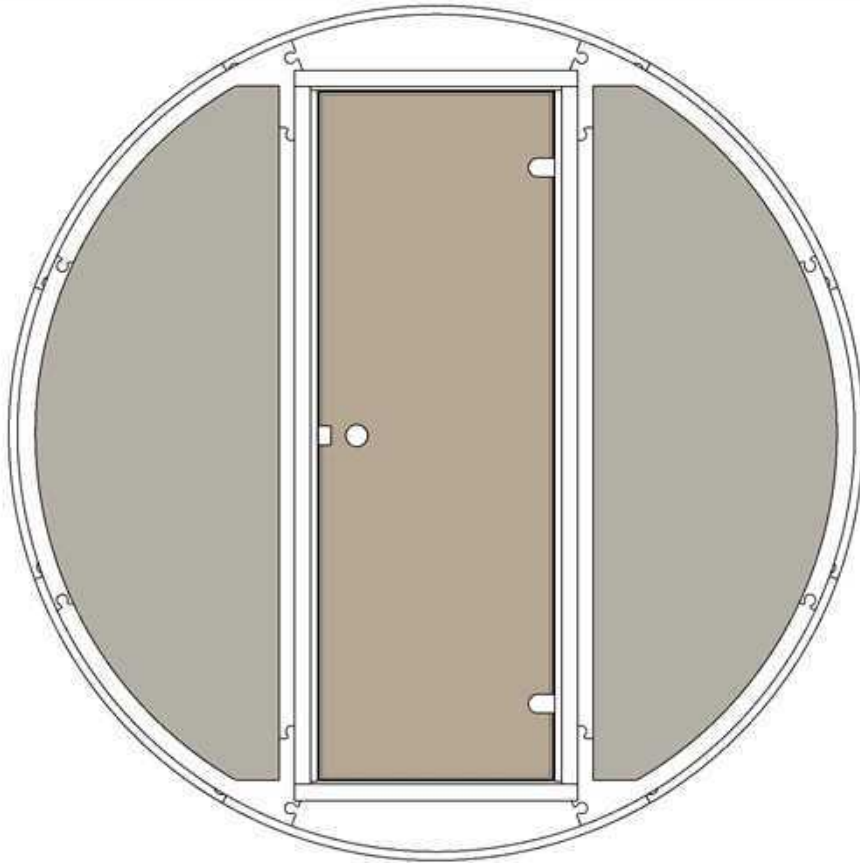


EE8G Barrel Sauna 79D" x 90H"

Details list. 1

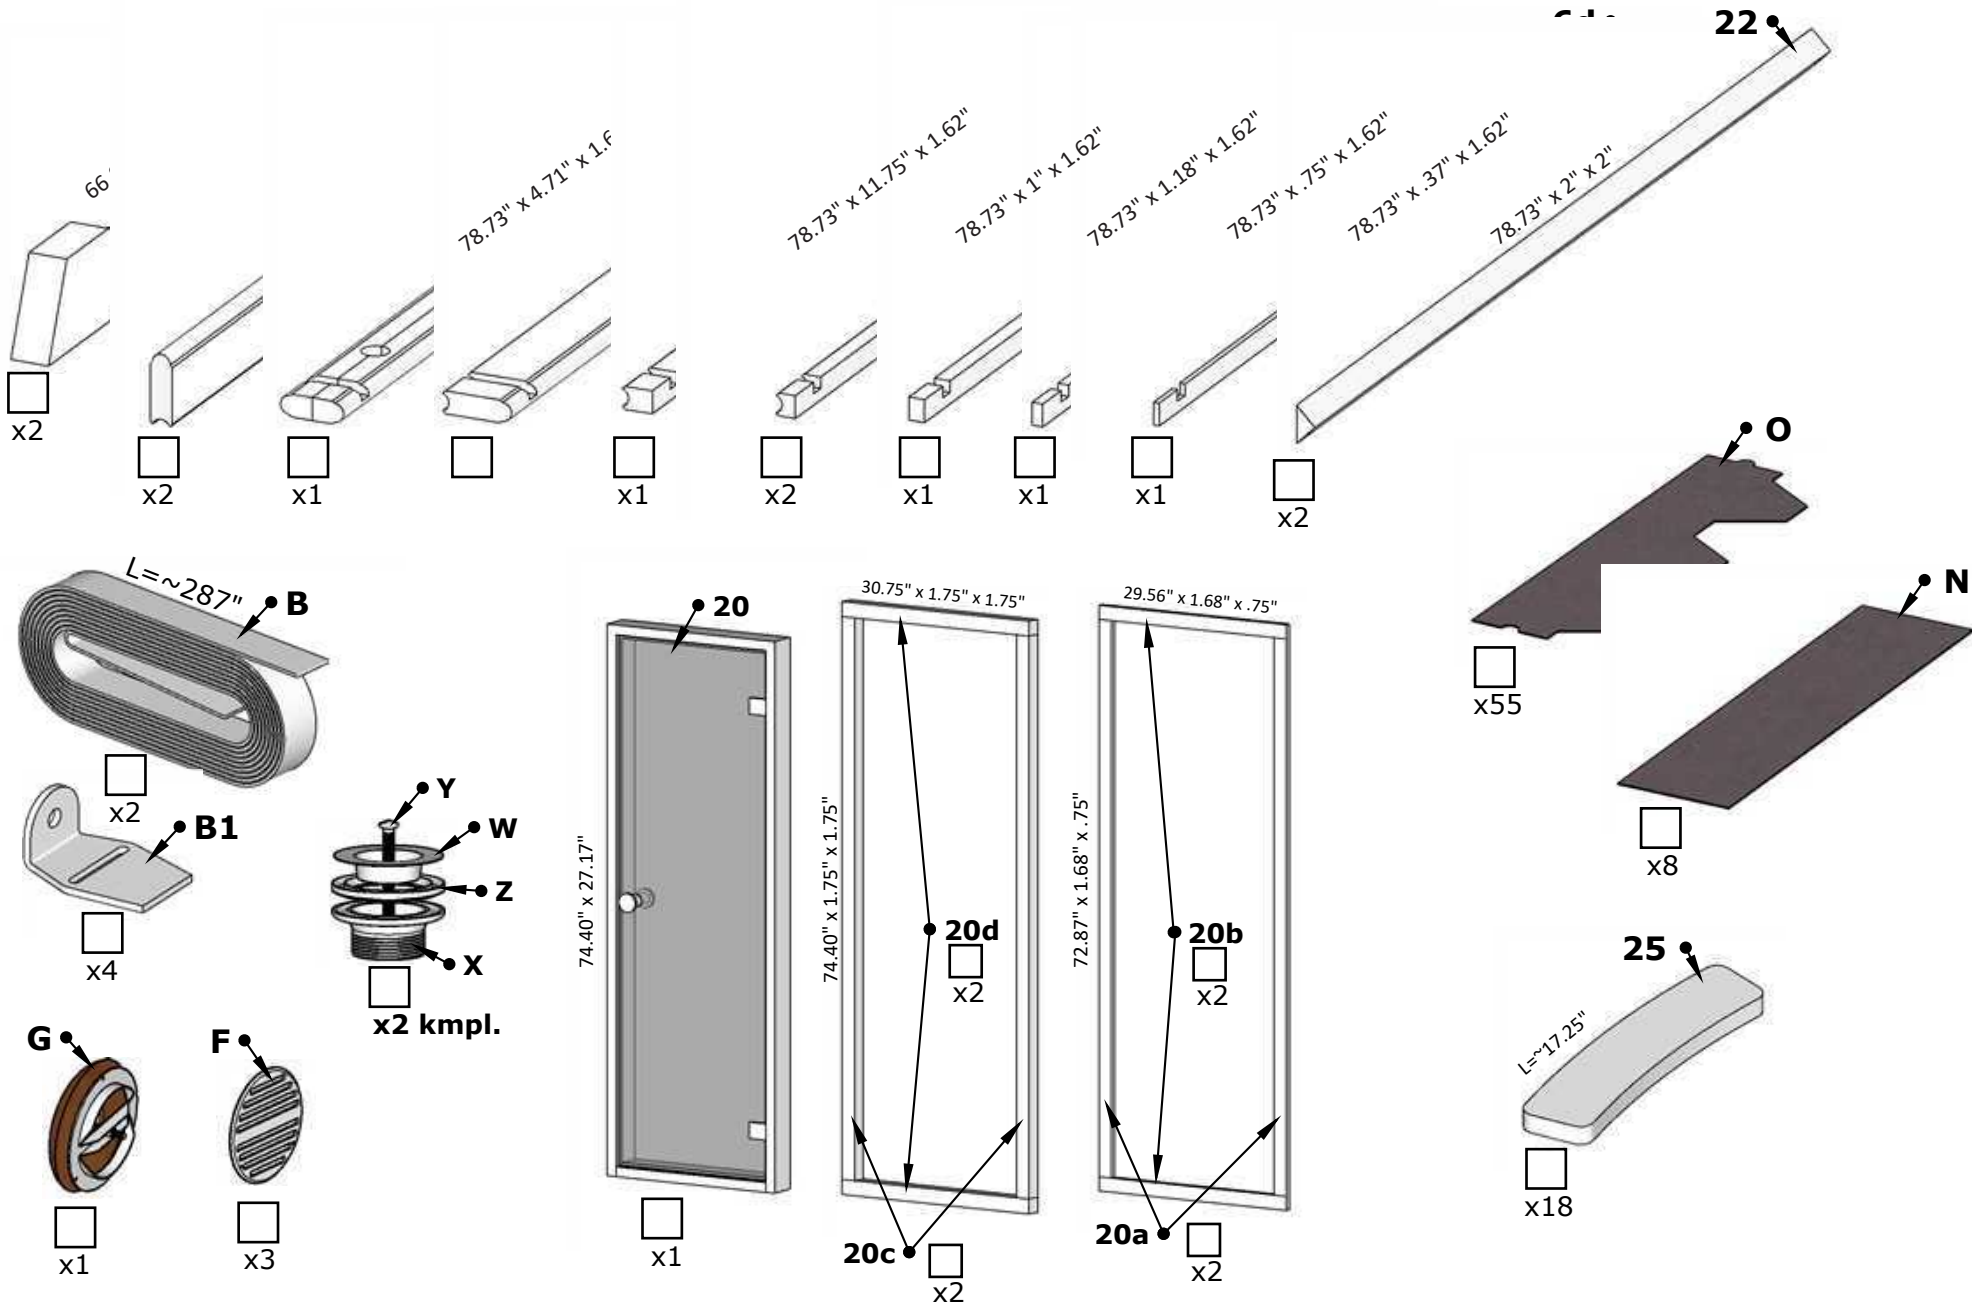

EE8G Barrel Sauna 79D" x 90H"


Details list. 2

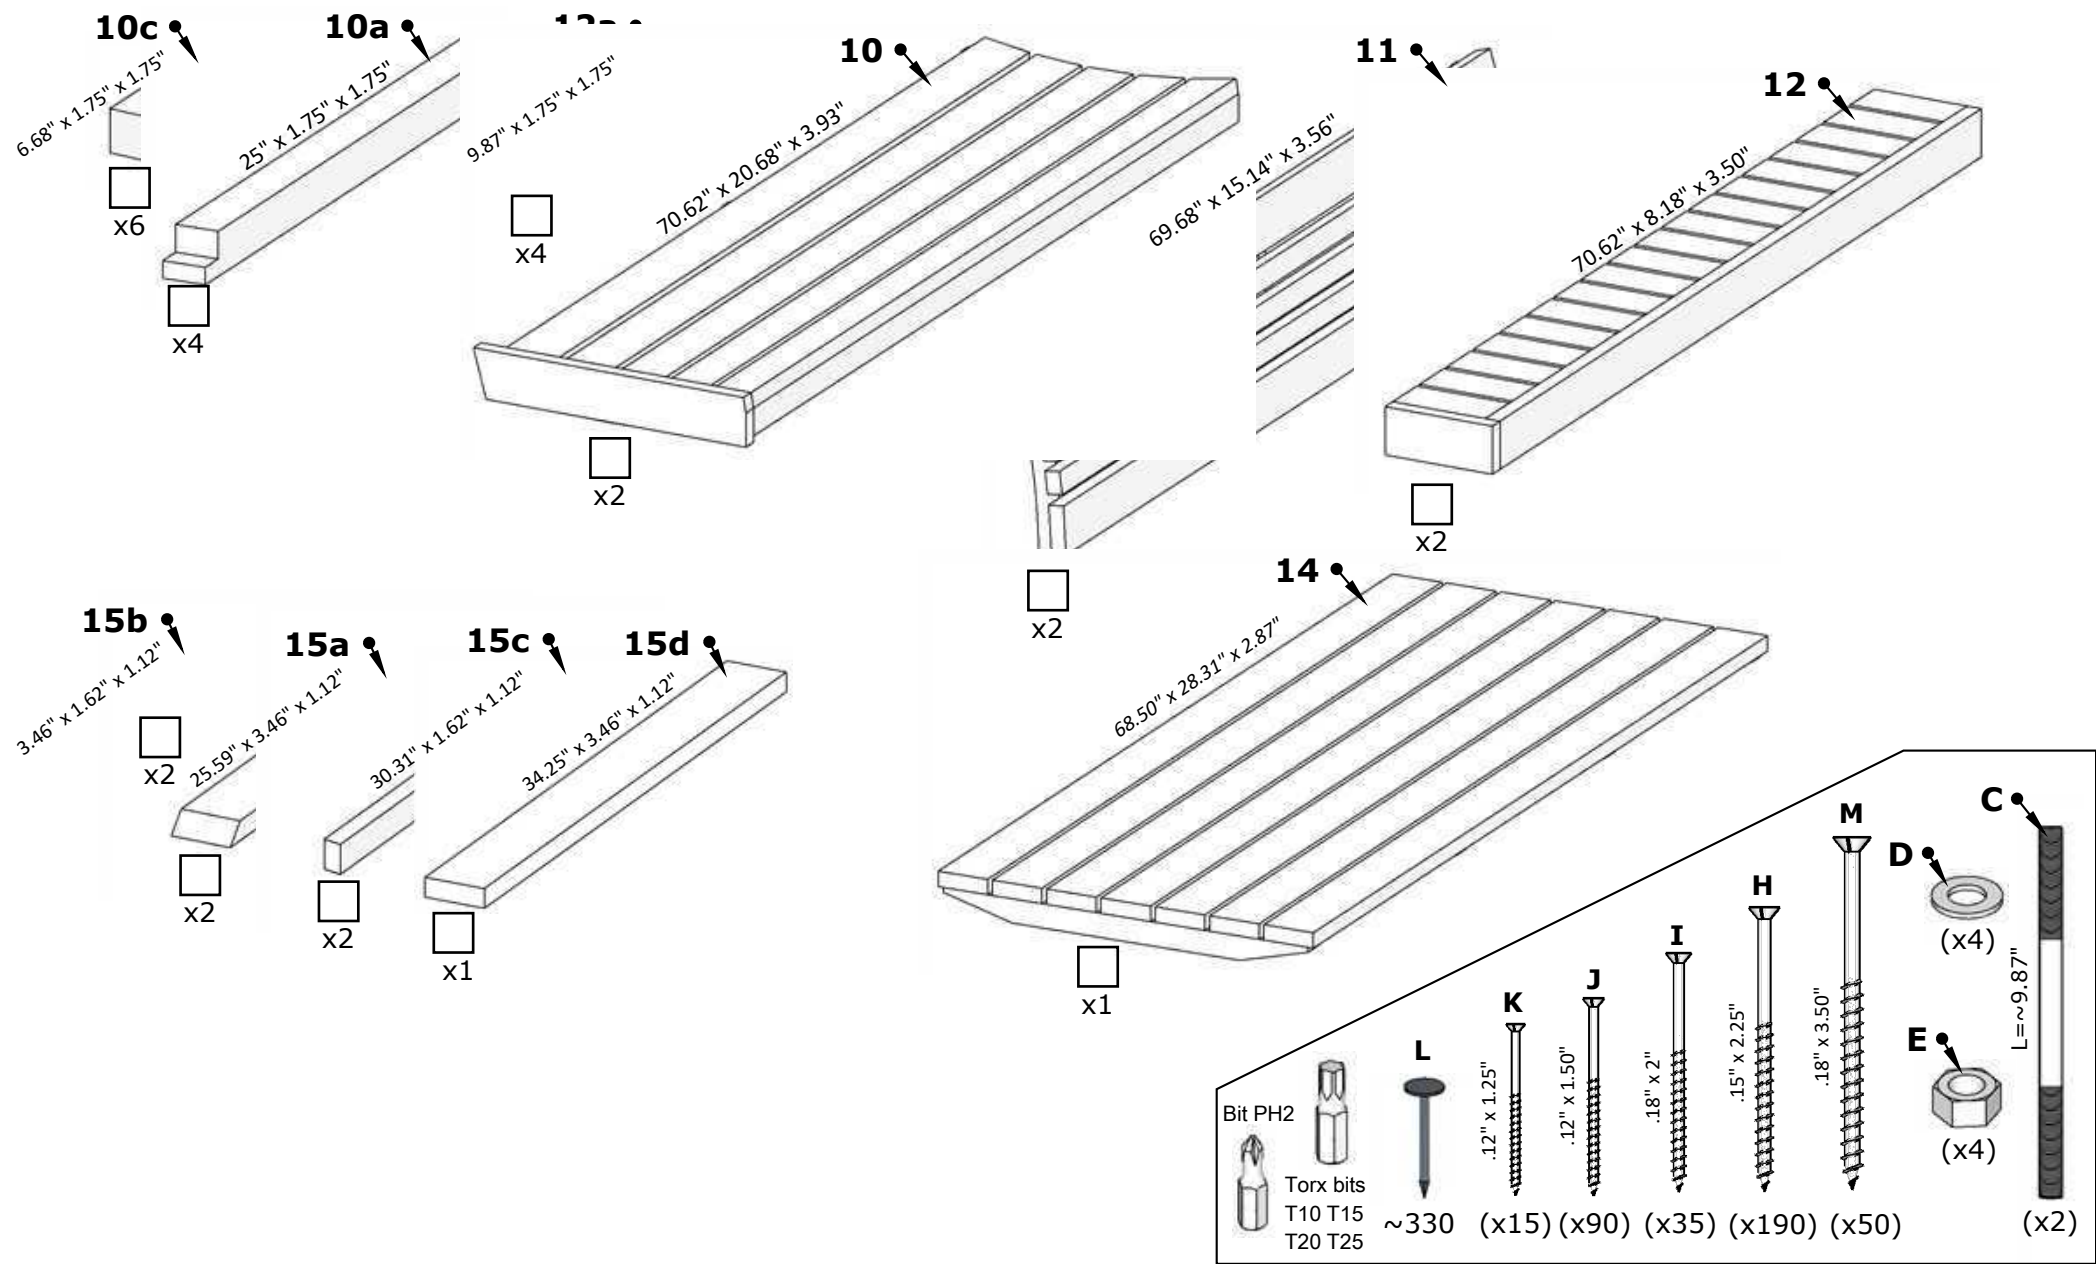

Tools needed




Measuring tape

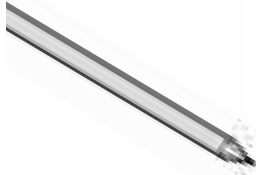

Marker pen



Circular saw

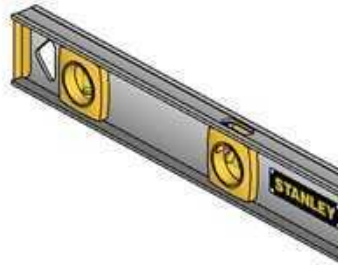

Water level



Hammer



Extra hands



Ratchet strap



Silicone gun
(Only glass-wall models)



Drill



Crescent wrench




Utility knife




Rubber mallet


Front glass wall installation

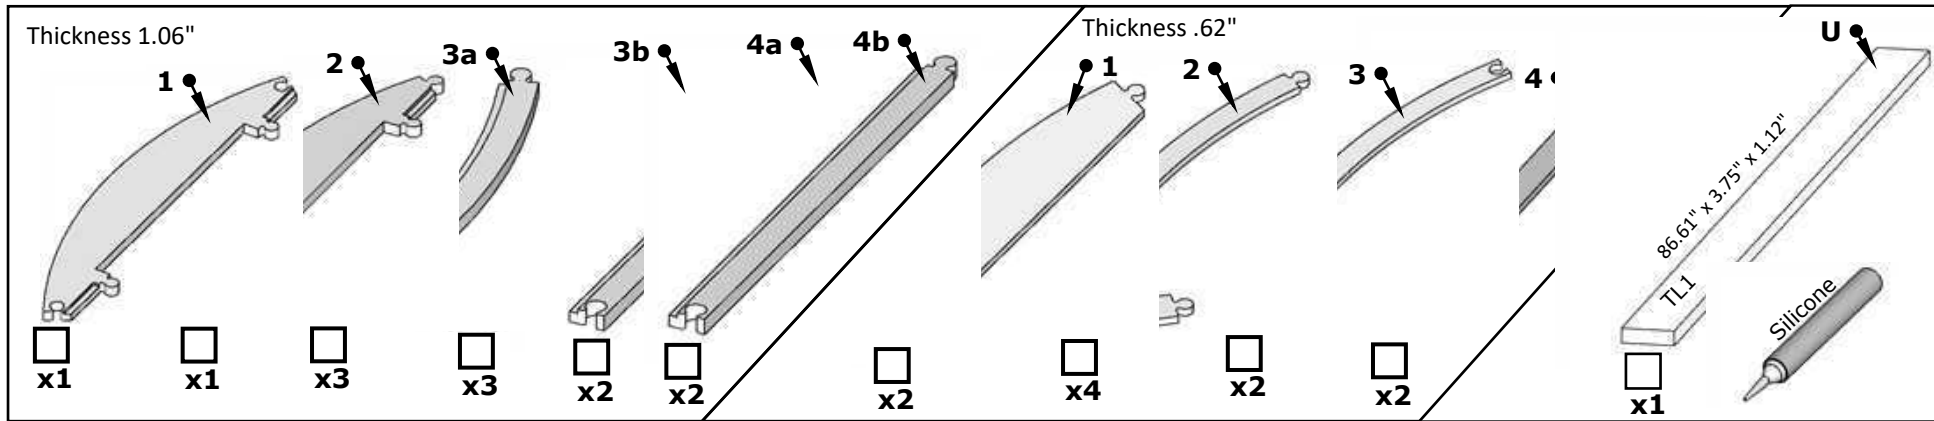


Baseframe 1.06"

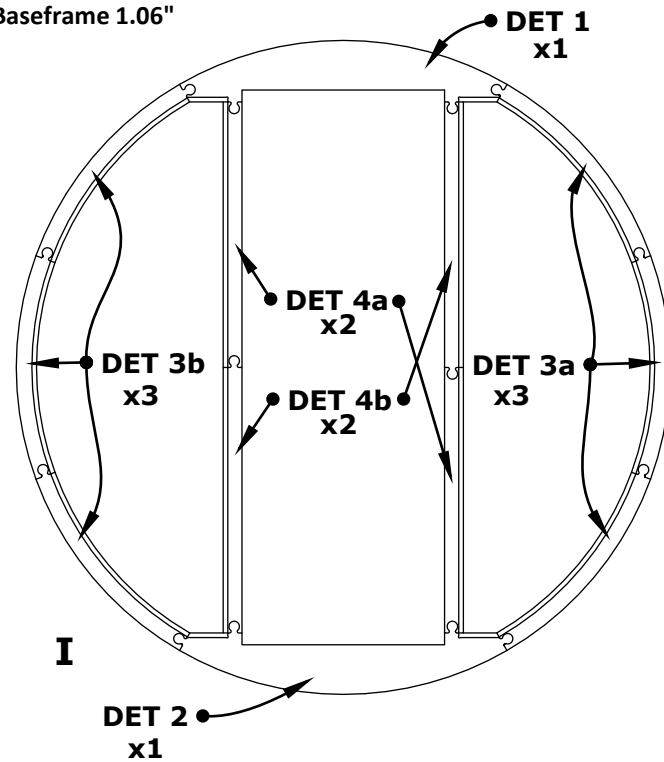

Use piece of wood to protect plywood


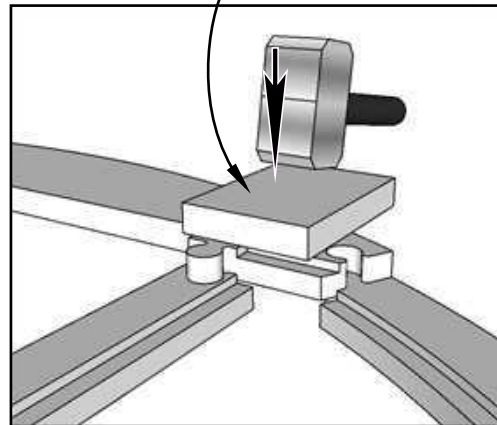


Apply waterproof silicone to the groove


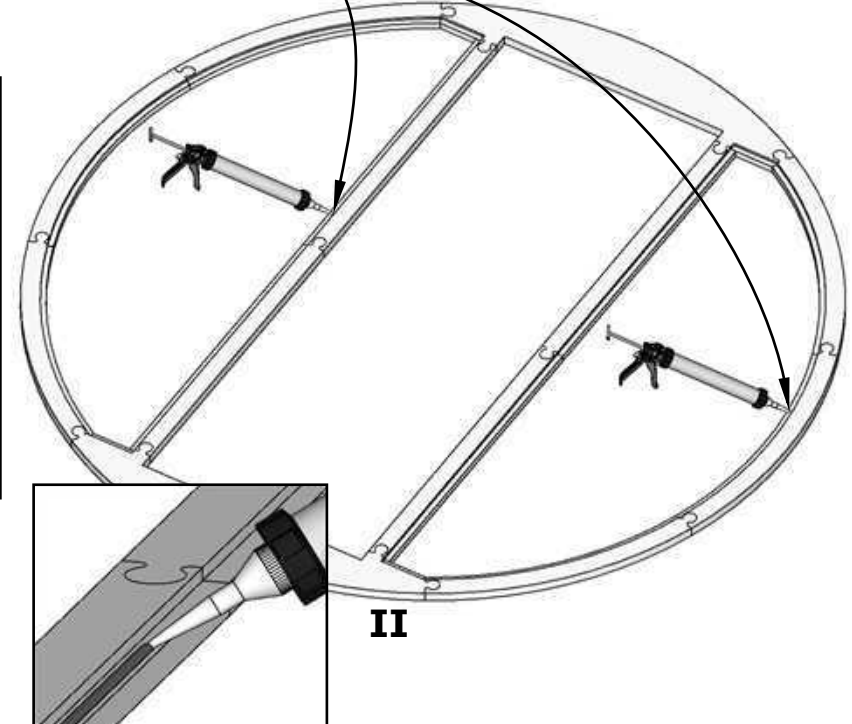


Front glass wall installation


2

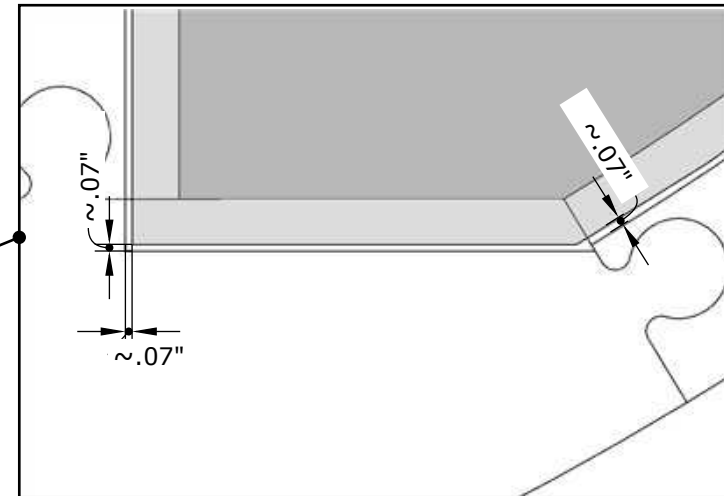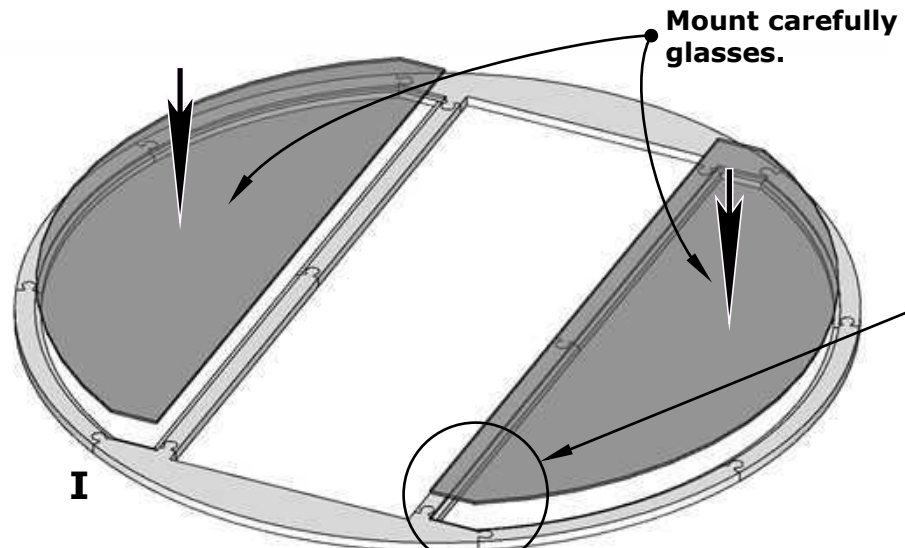


Coverframe .62"

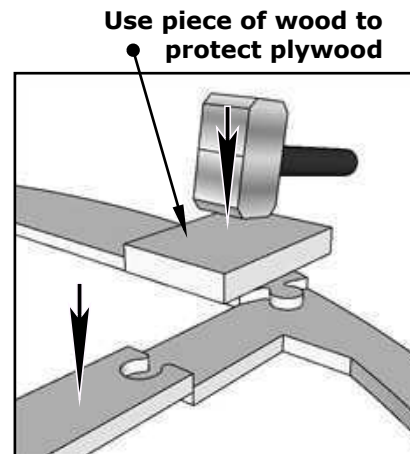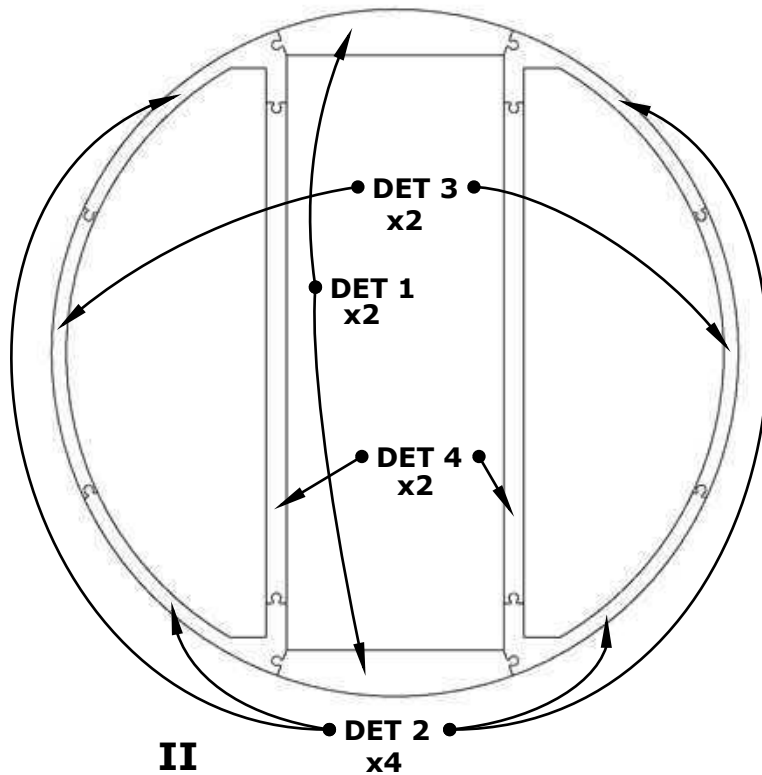


Apply waterproof silicone

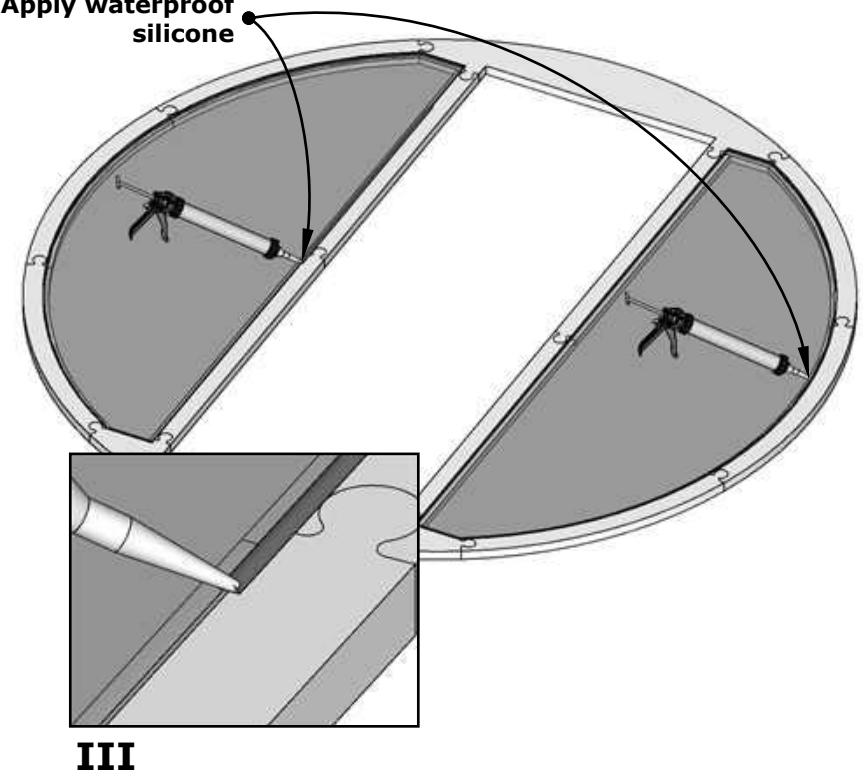

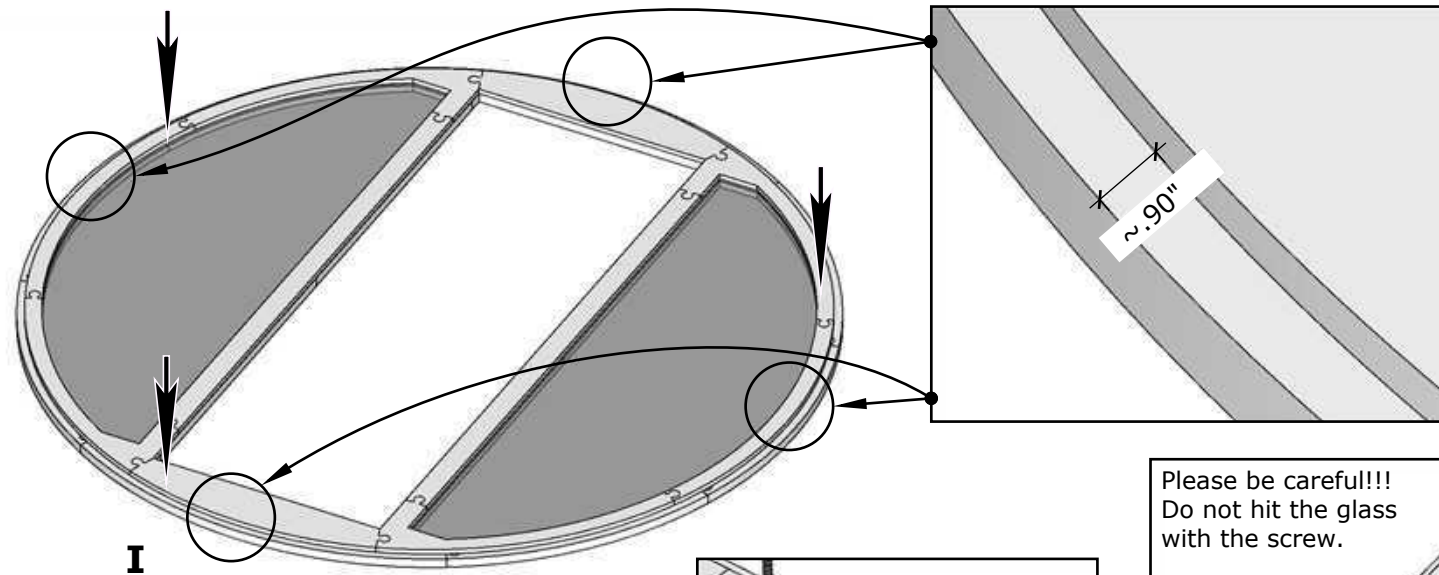


DET U

- Fix it diagonally to make wall more rigid during the installation.

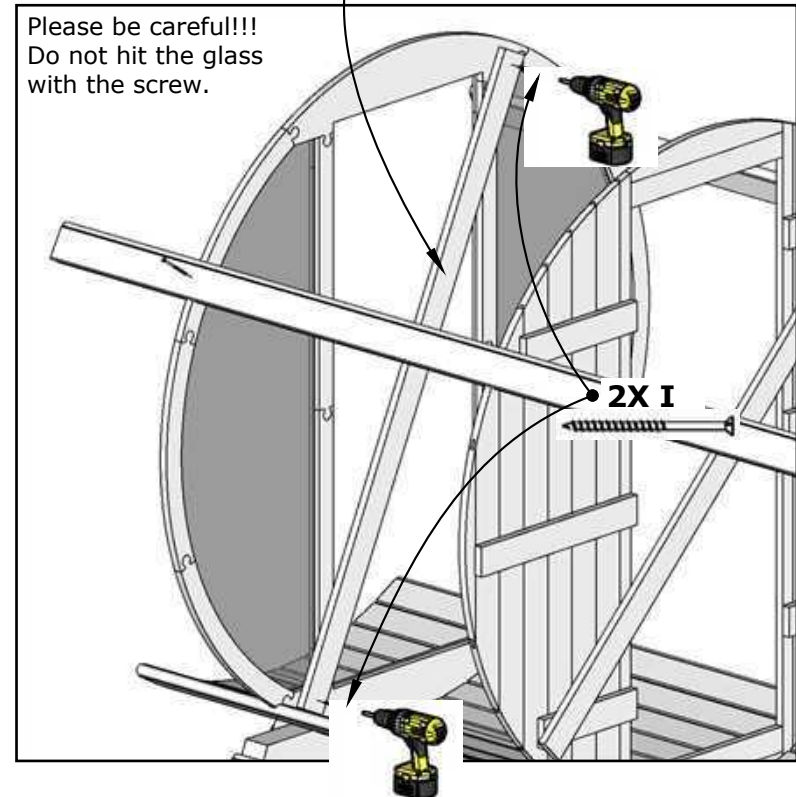

III




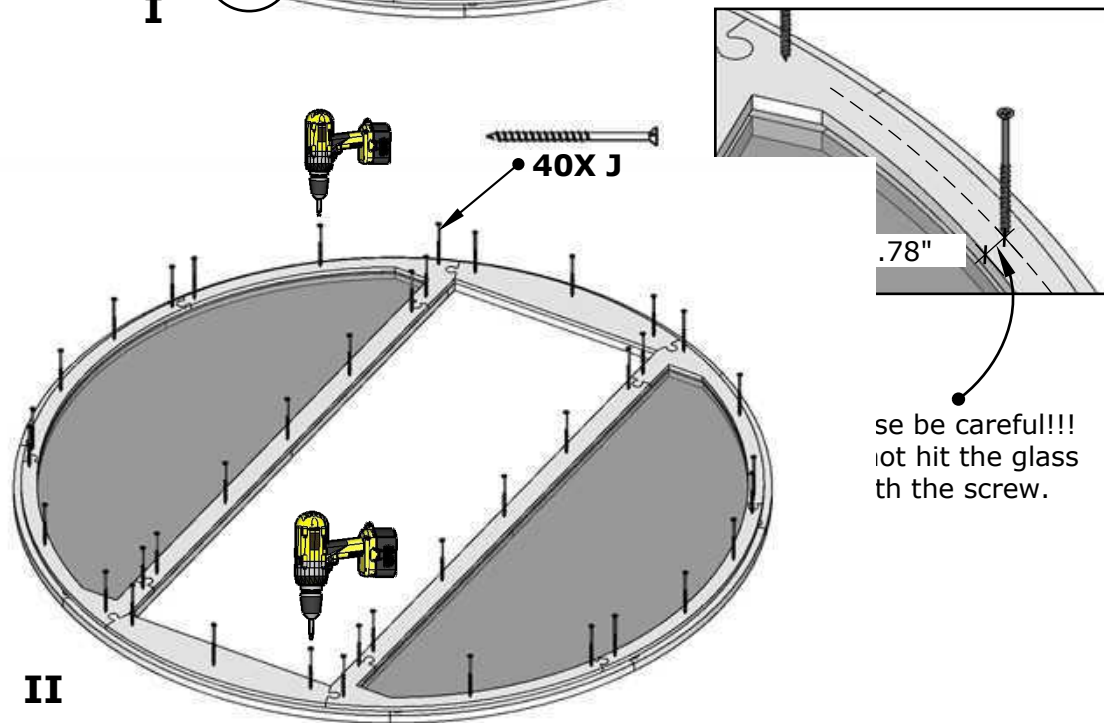


II

Wooden back wall assembly

4



Details

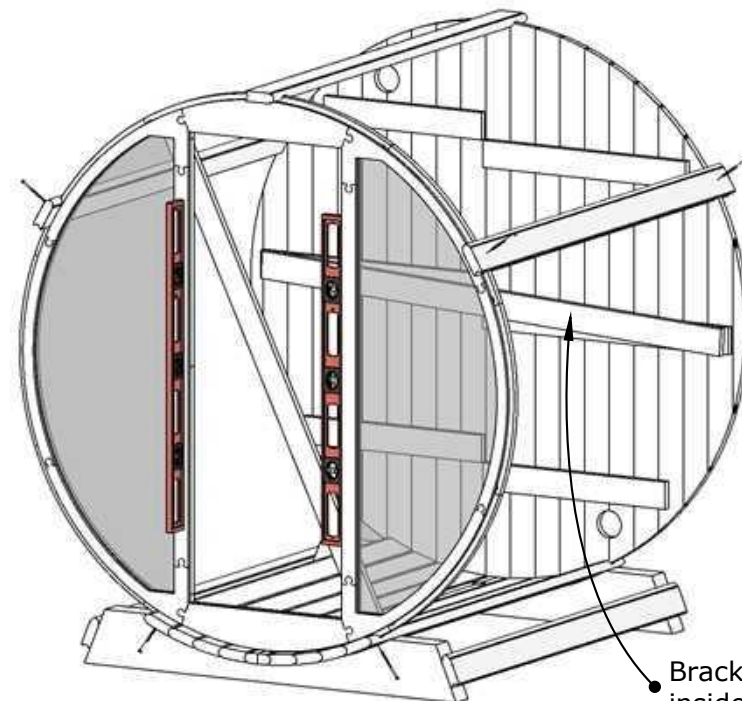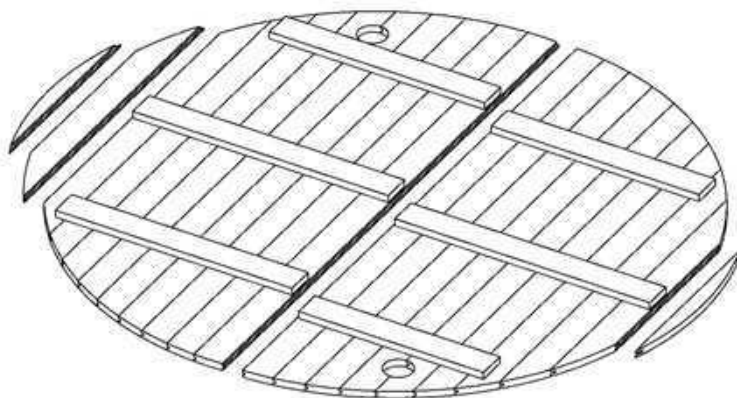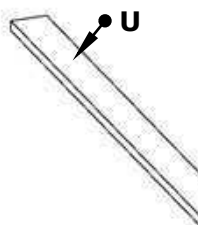


Brackets inside.





Pre-drill holes .15" before screws.

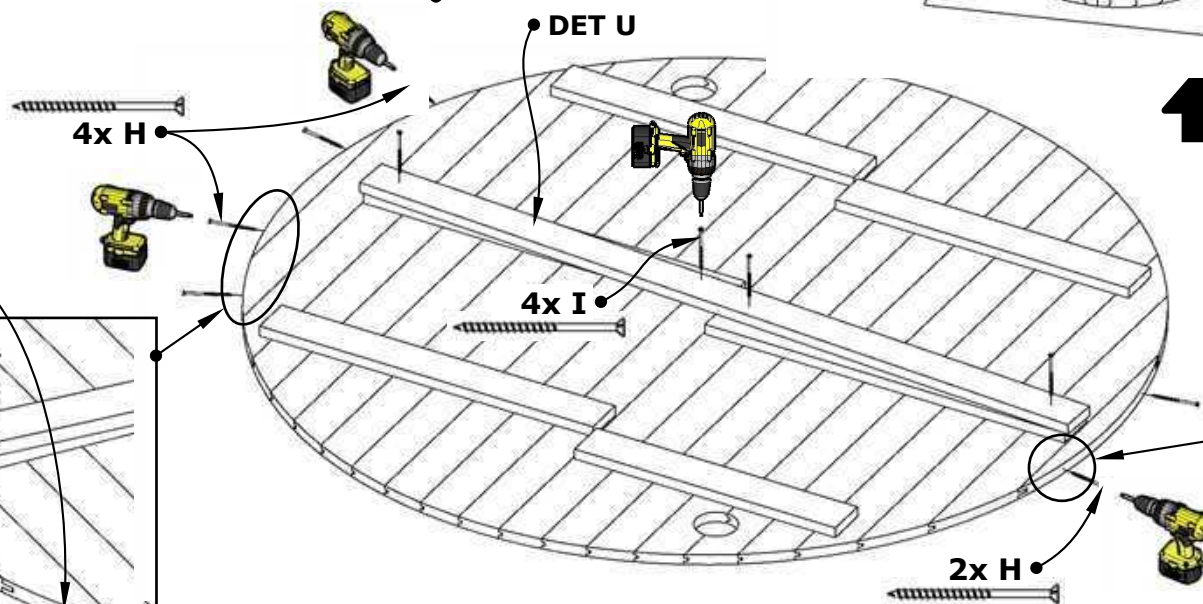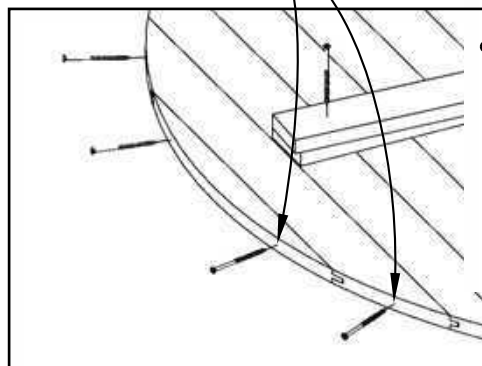


Pre-drill holes .15" before screws.





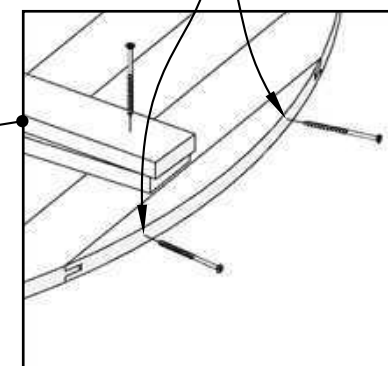


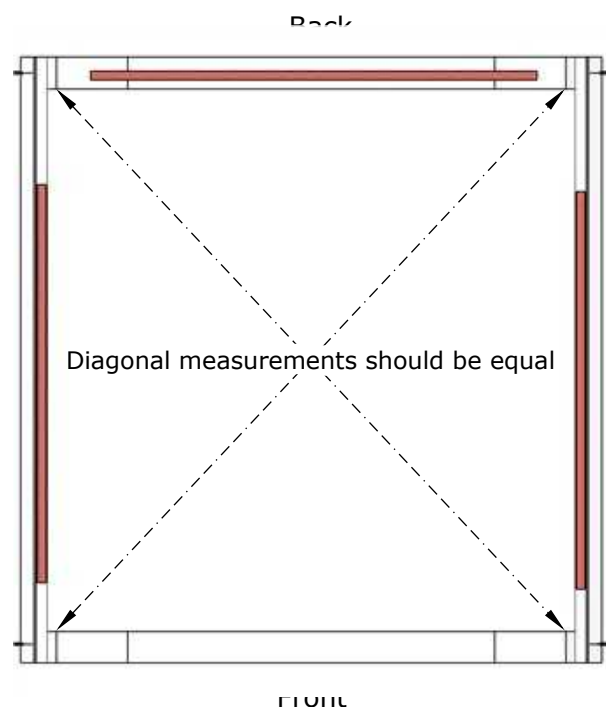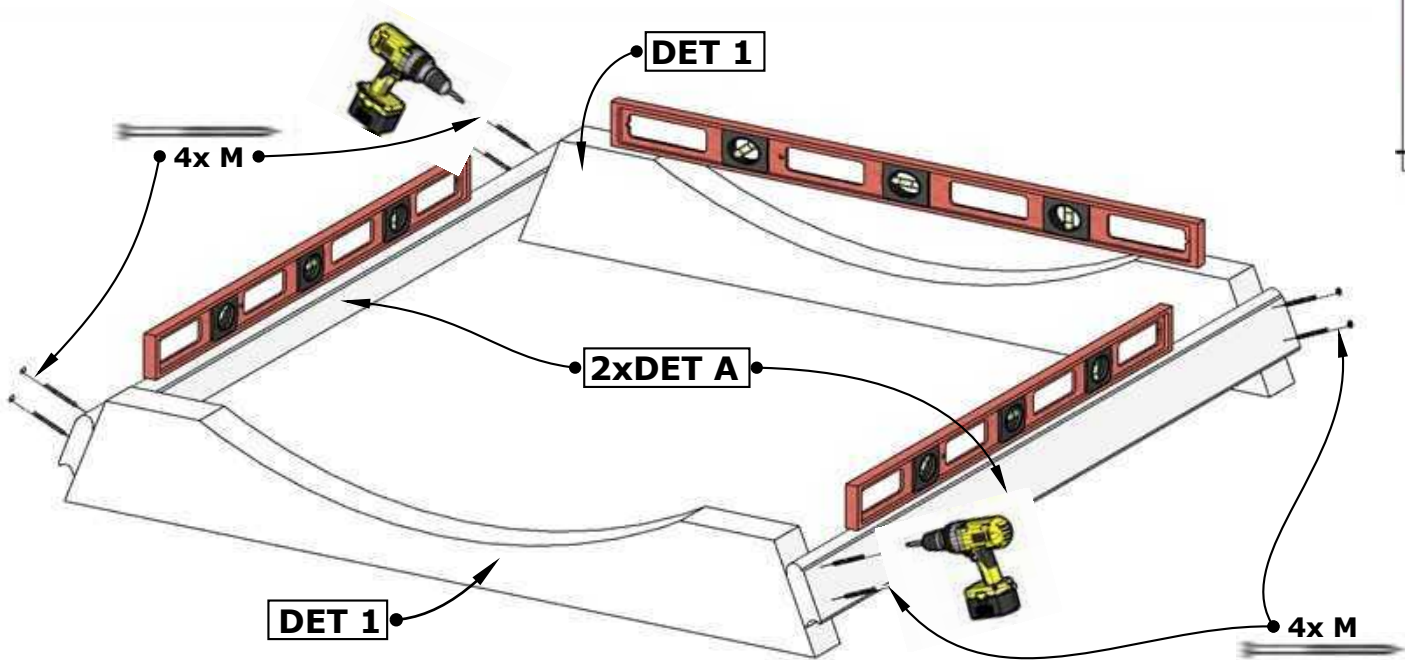


EE8G Barrel Sauna 79D" x 90H"

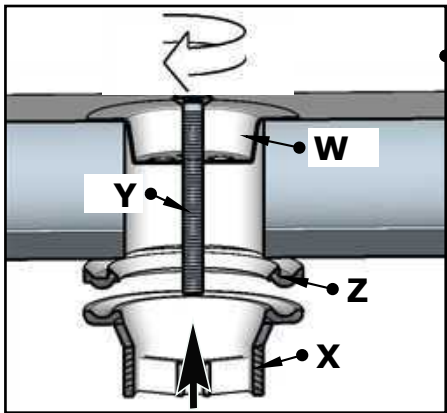


Center stave 2 on
cradle 1

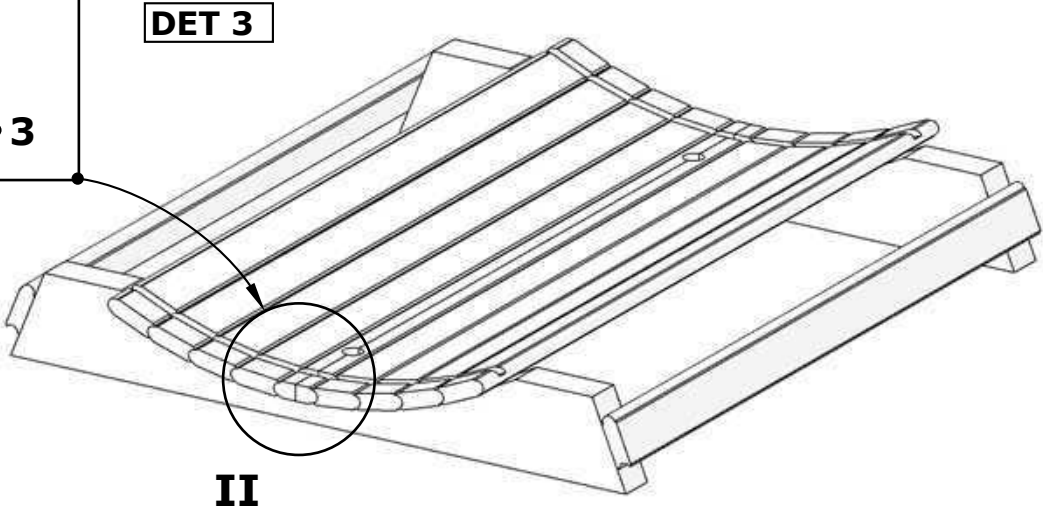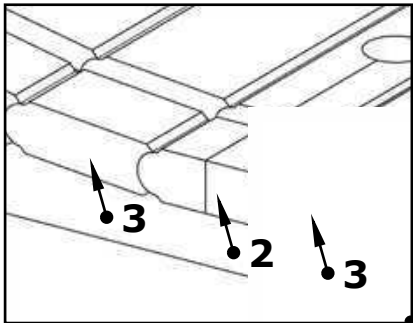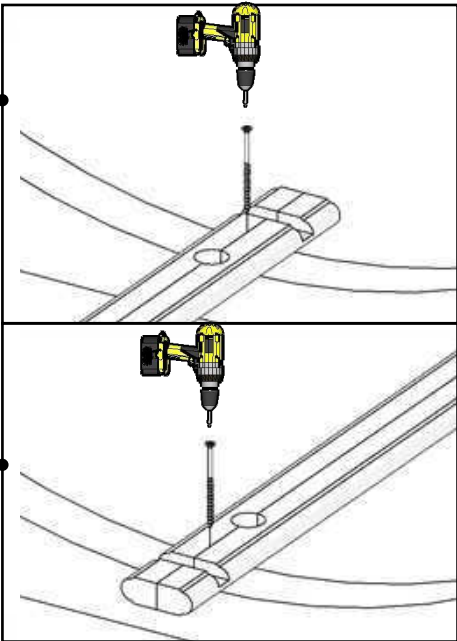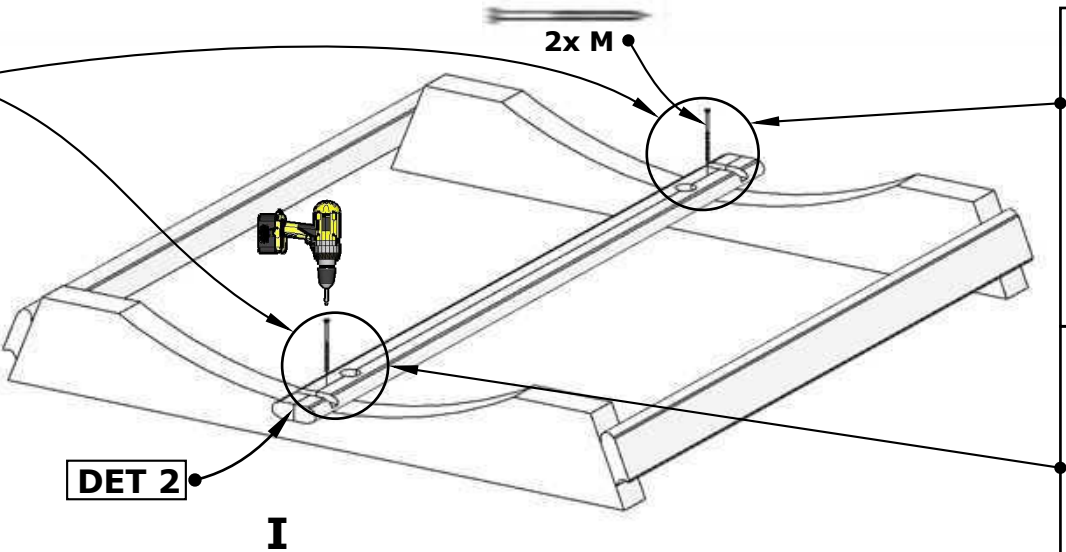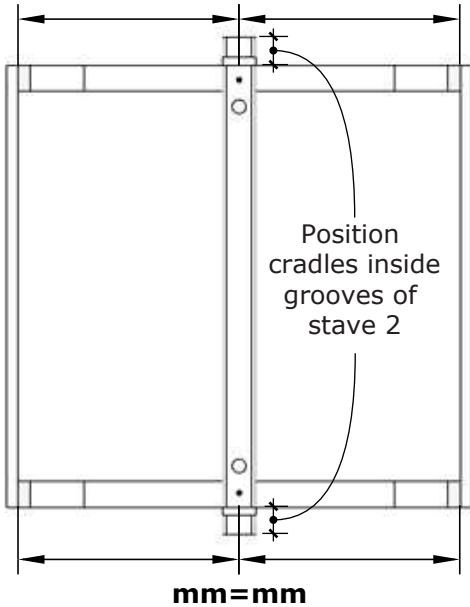


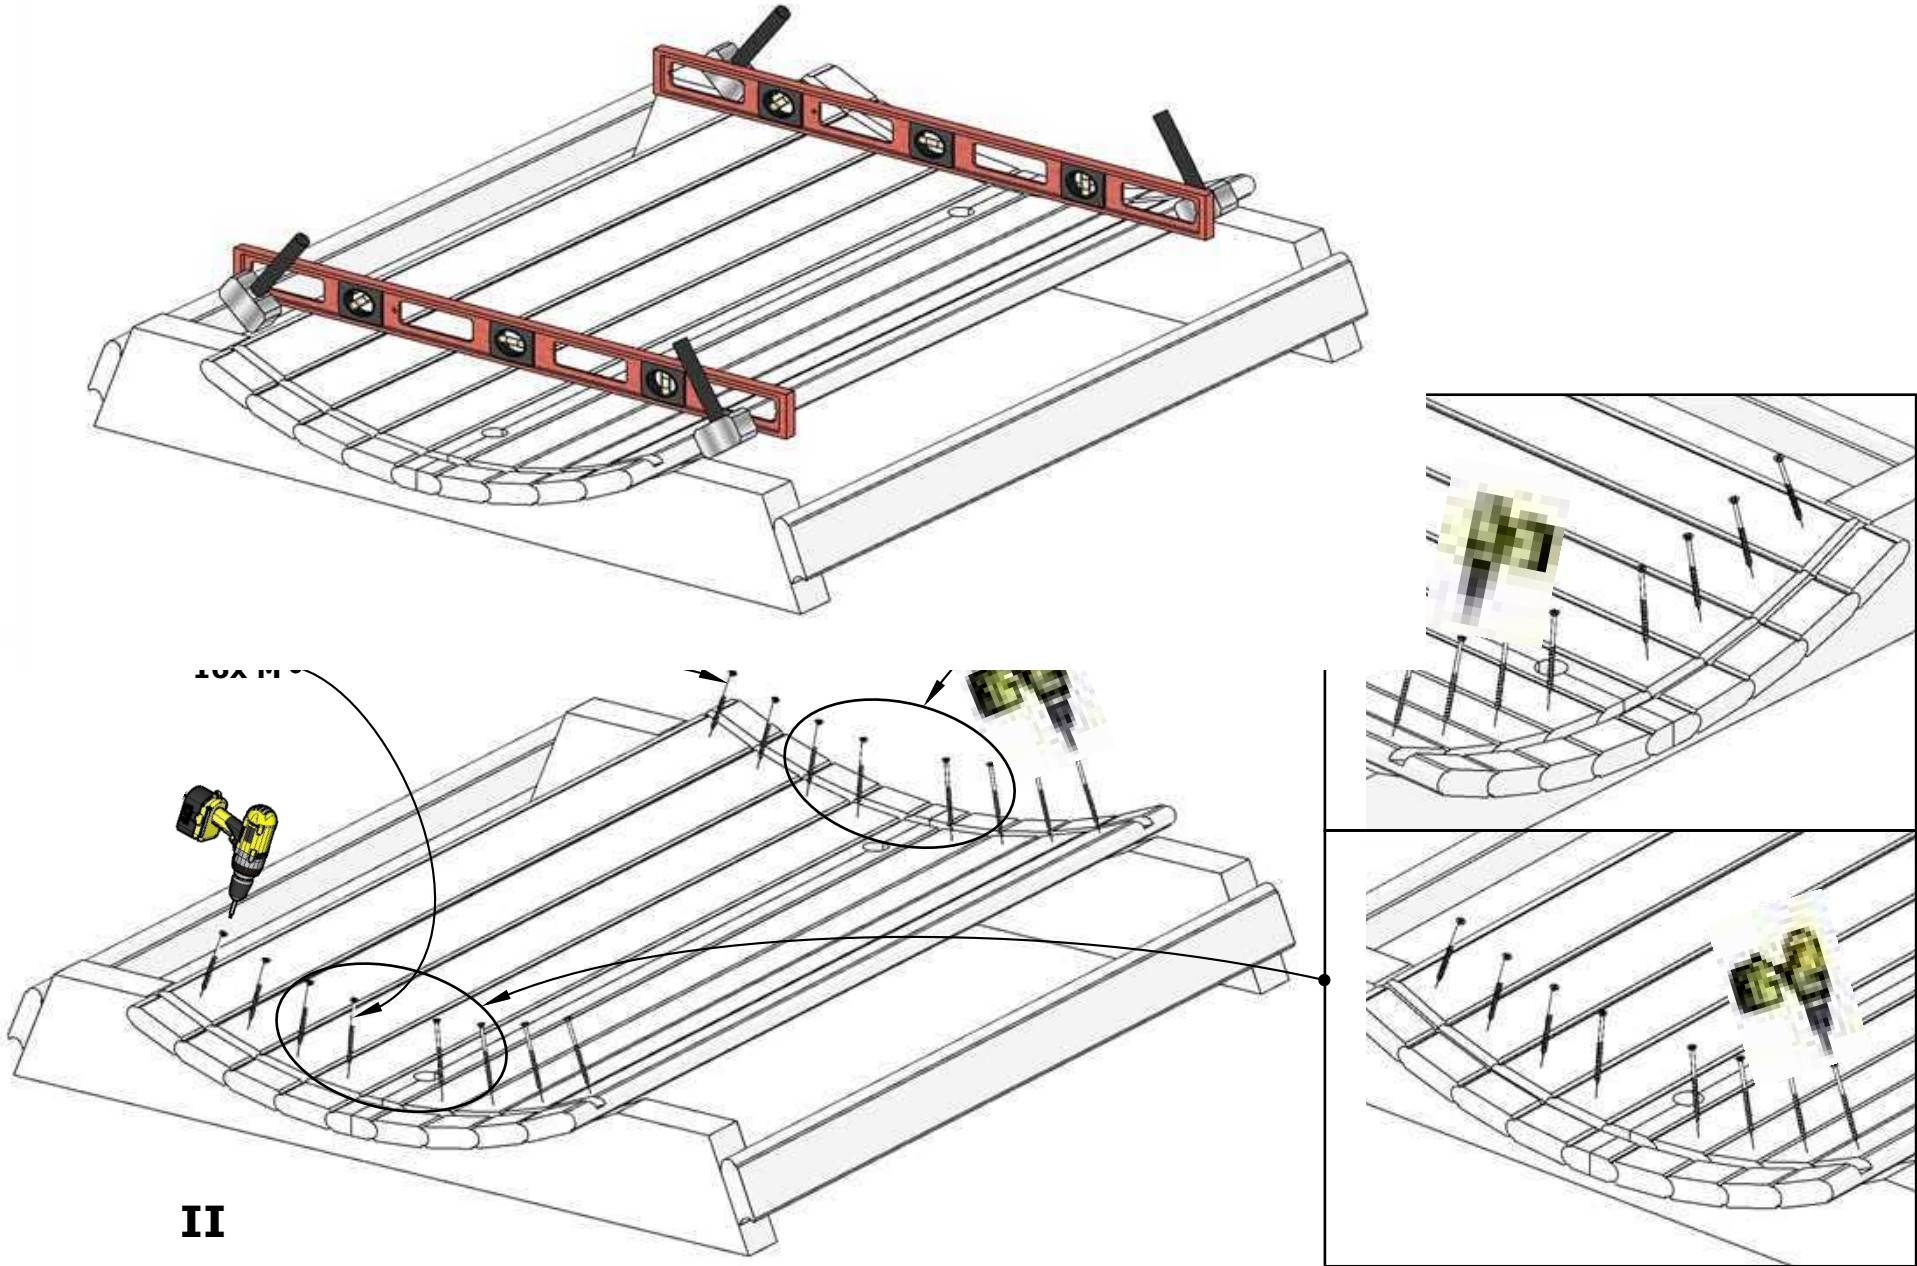


EE8G Barrel Sauna 79D" x 90H"

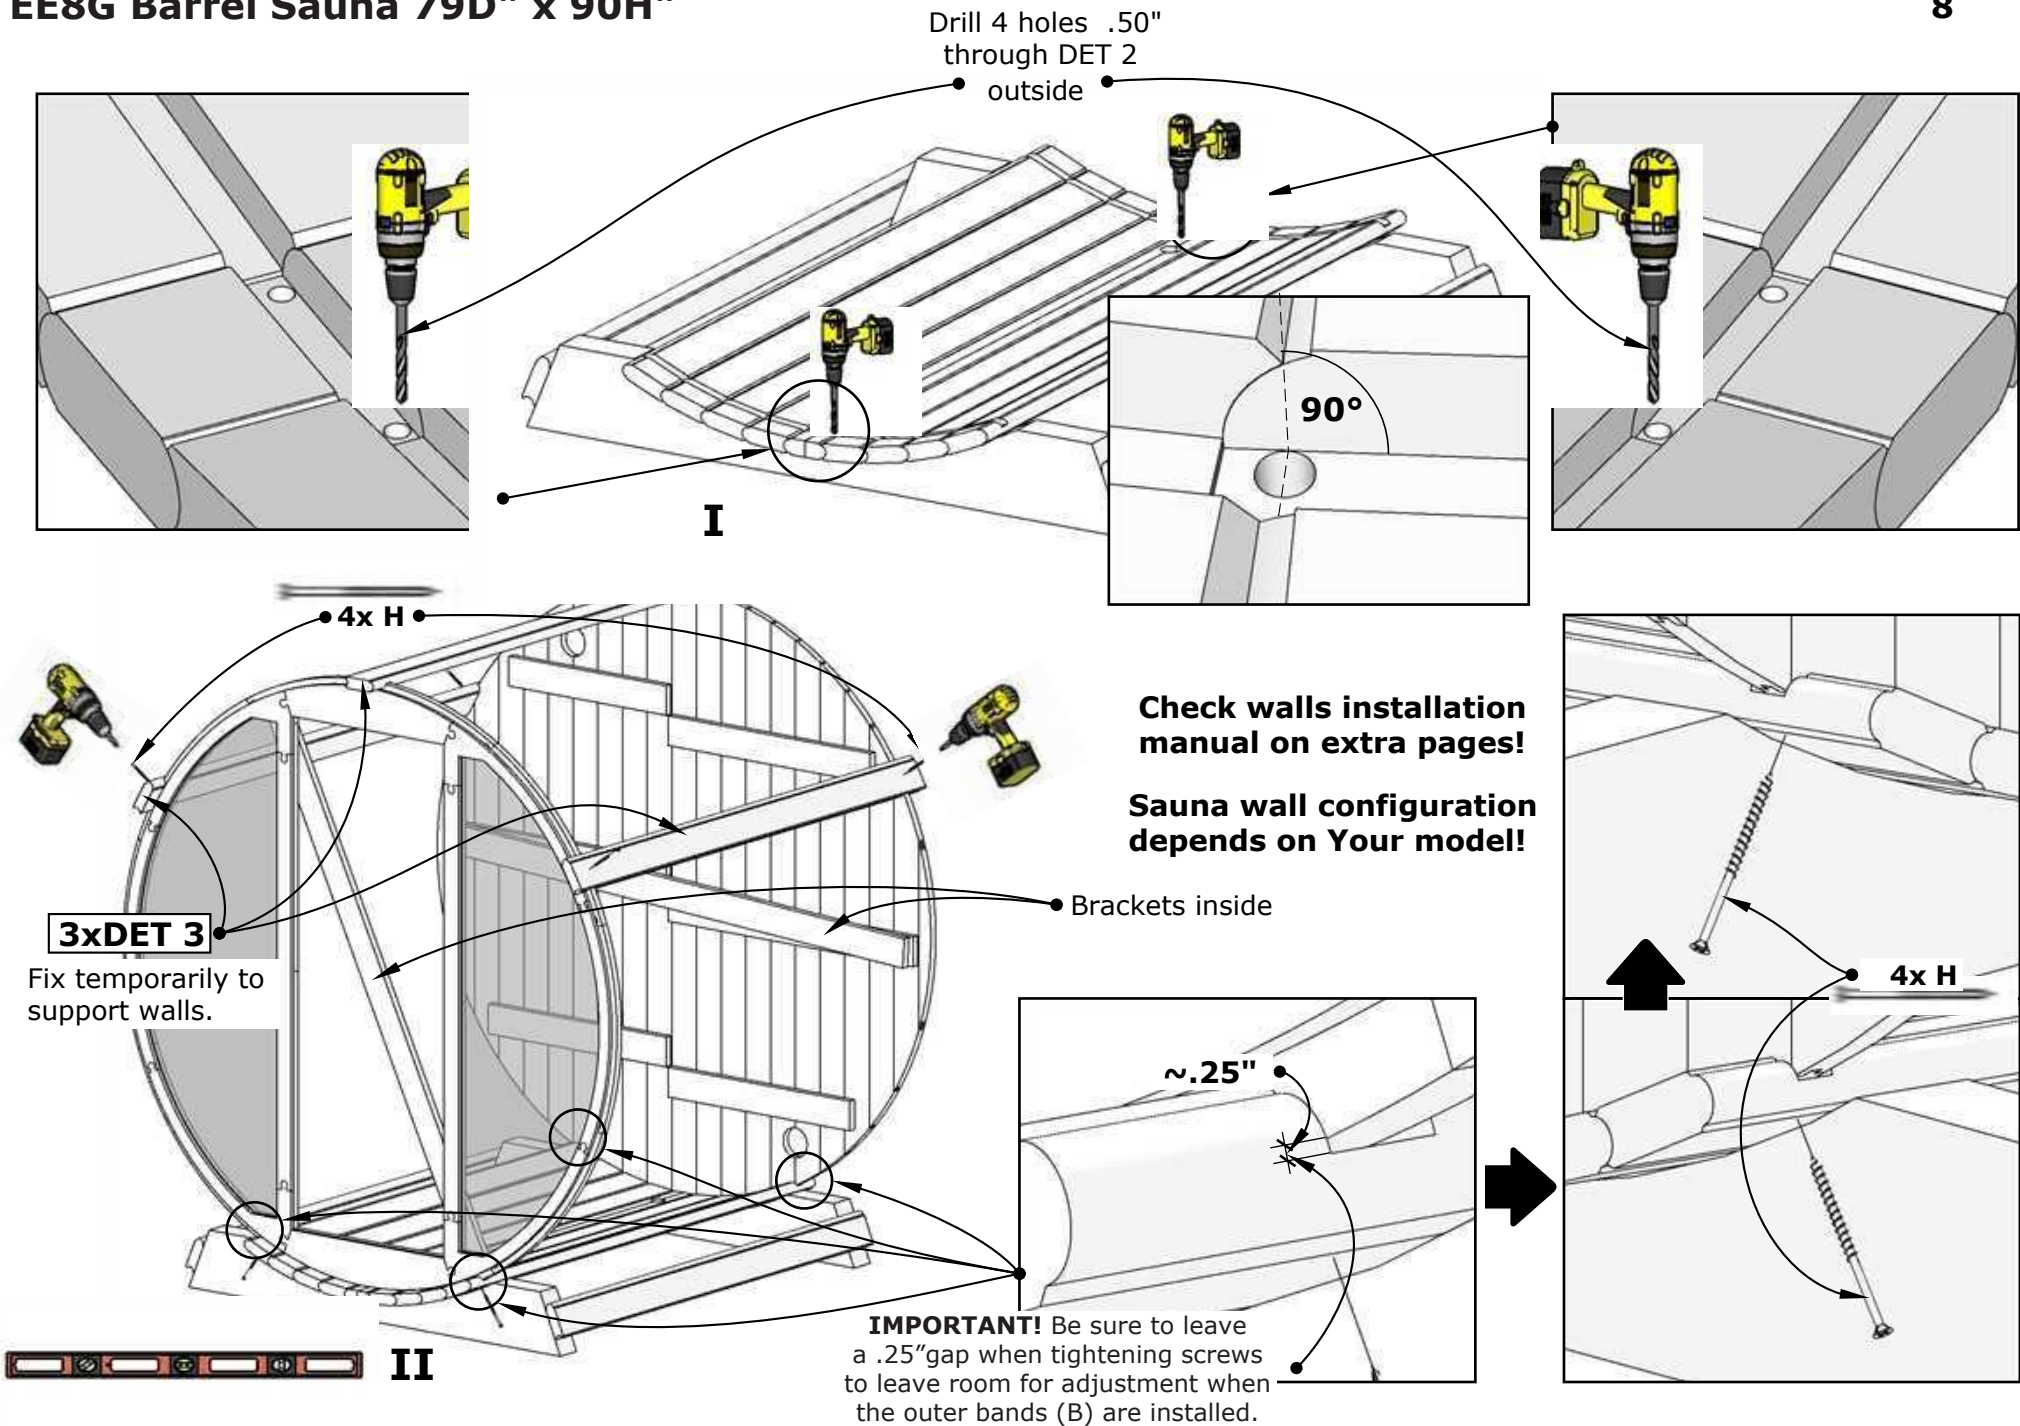


EE8G Barrel Sauna 79D" x 90H"

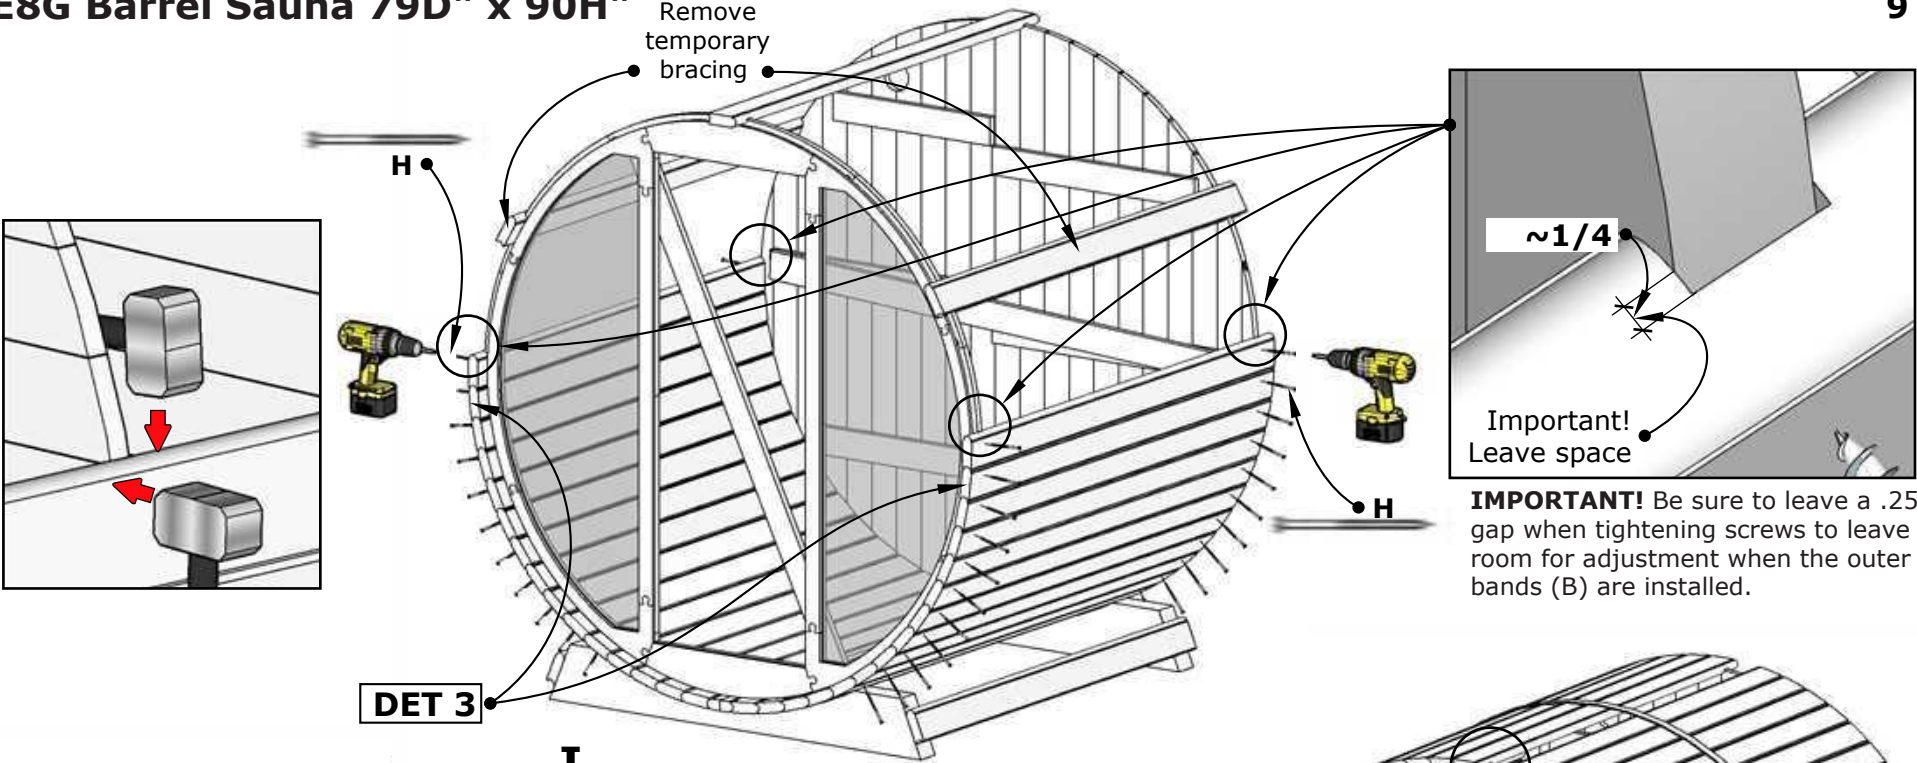


IMPORTANT! Be sure to leave a .25" gap when tightening screws to leave room for adjustment when the outer bands (B) are installed.

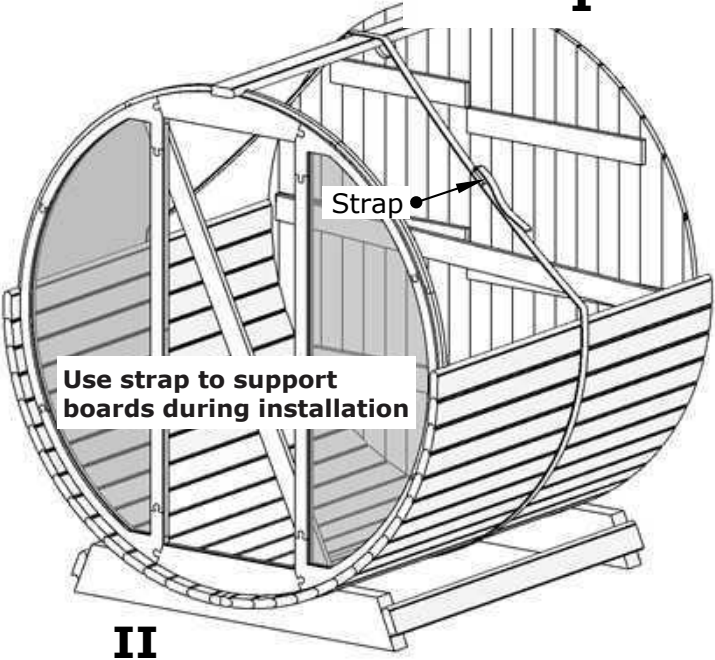


See the next page.

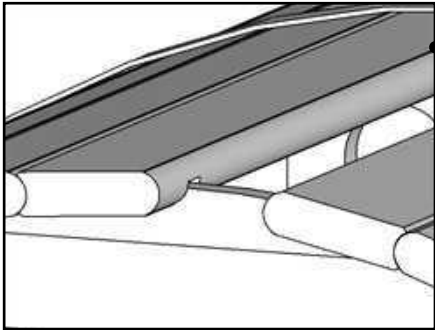


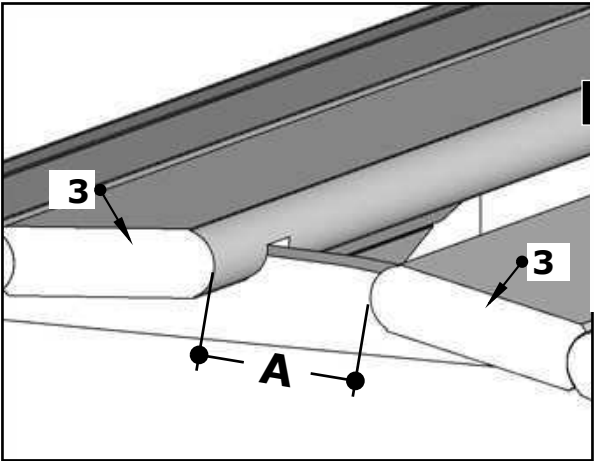


I

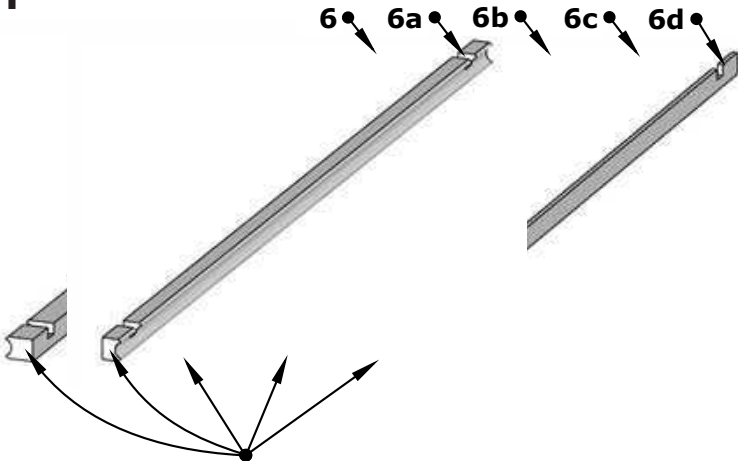


Join two boards together (as shown in diagram II) that will bridge the width of the "A" gap. It is recommended that the combined boards are approximately .25" wider than the gap.

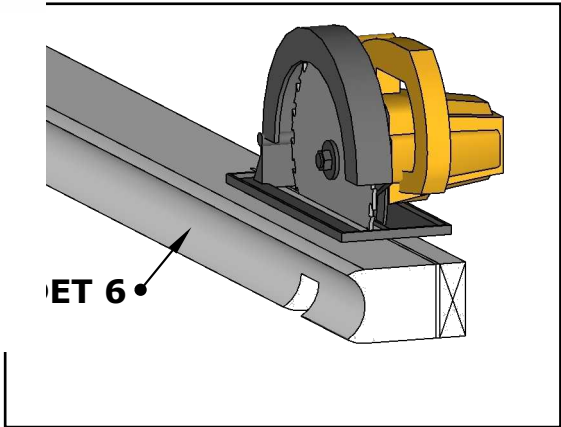


If needed, trim the flat edge of the board to create the desired width.

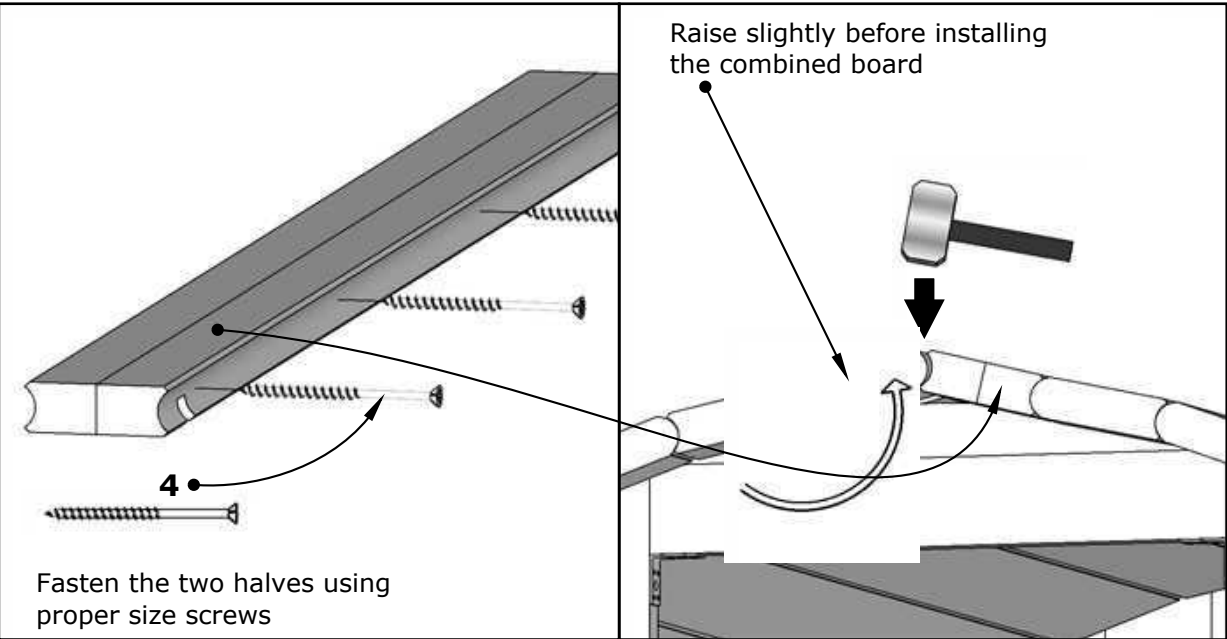


II

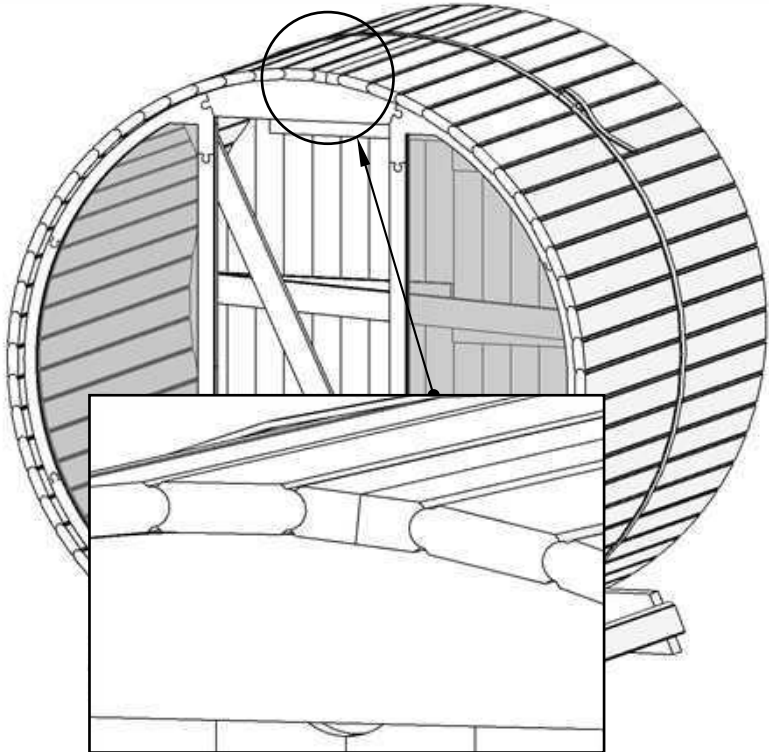

III




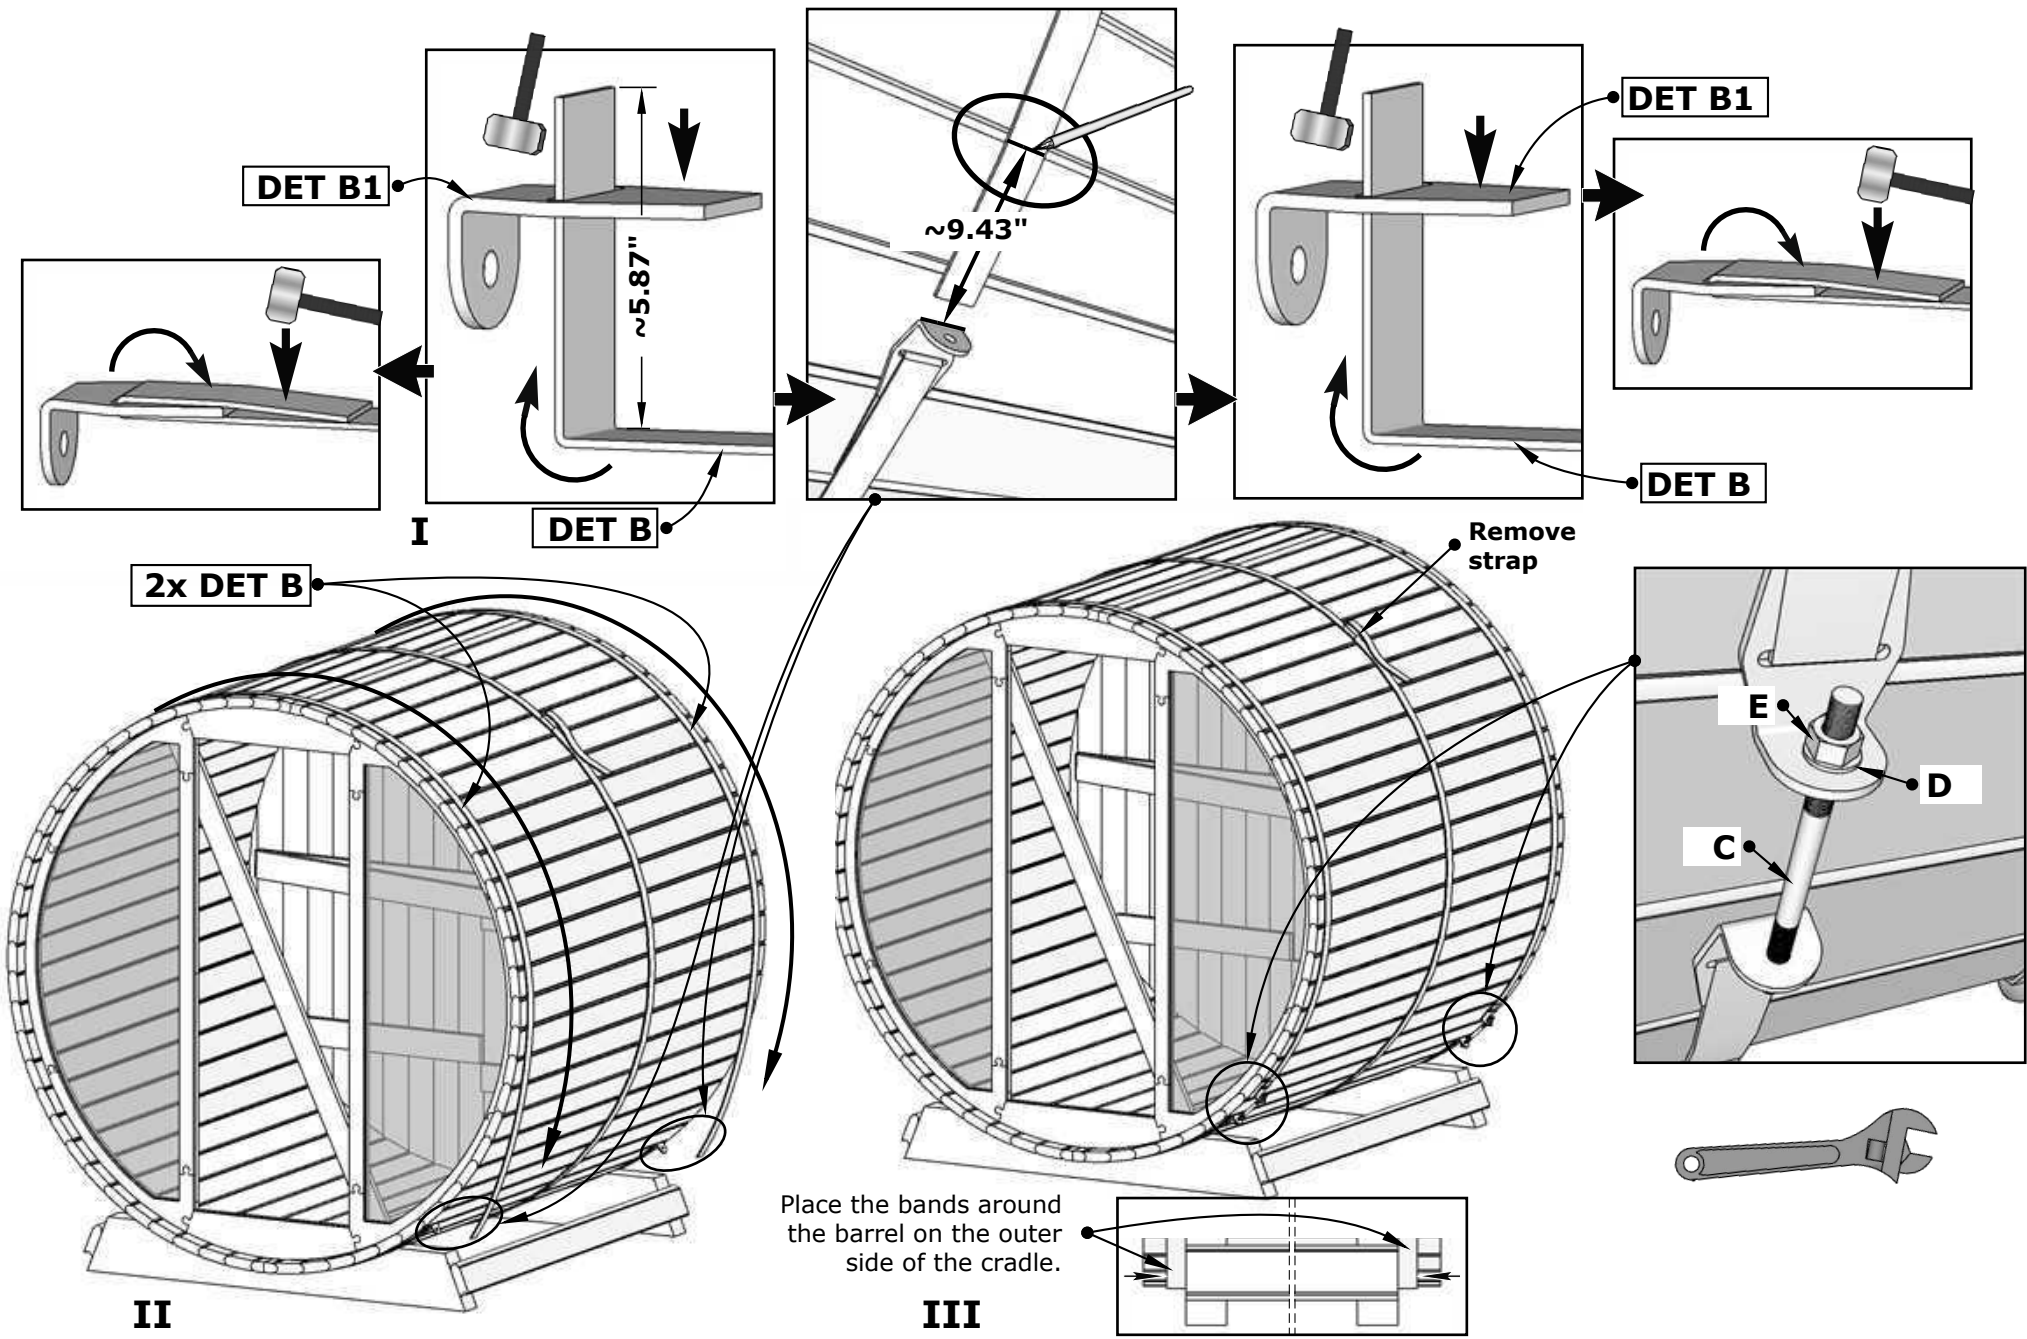


EE8G Barrel Sauna 79D" x 90H"

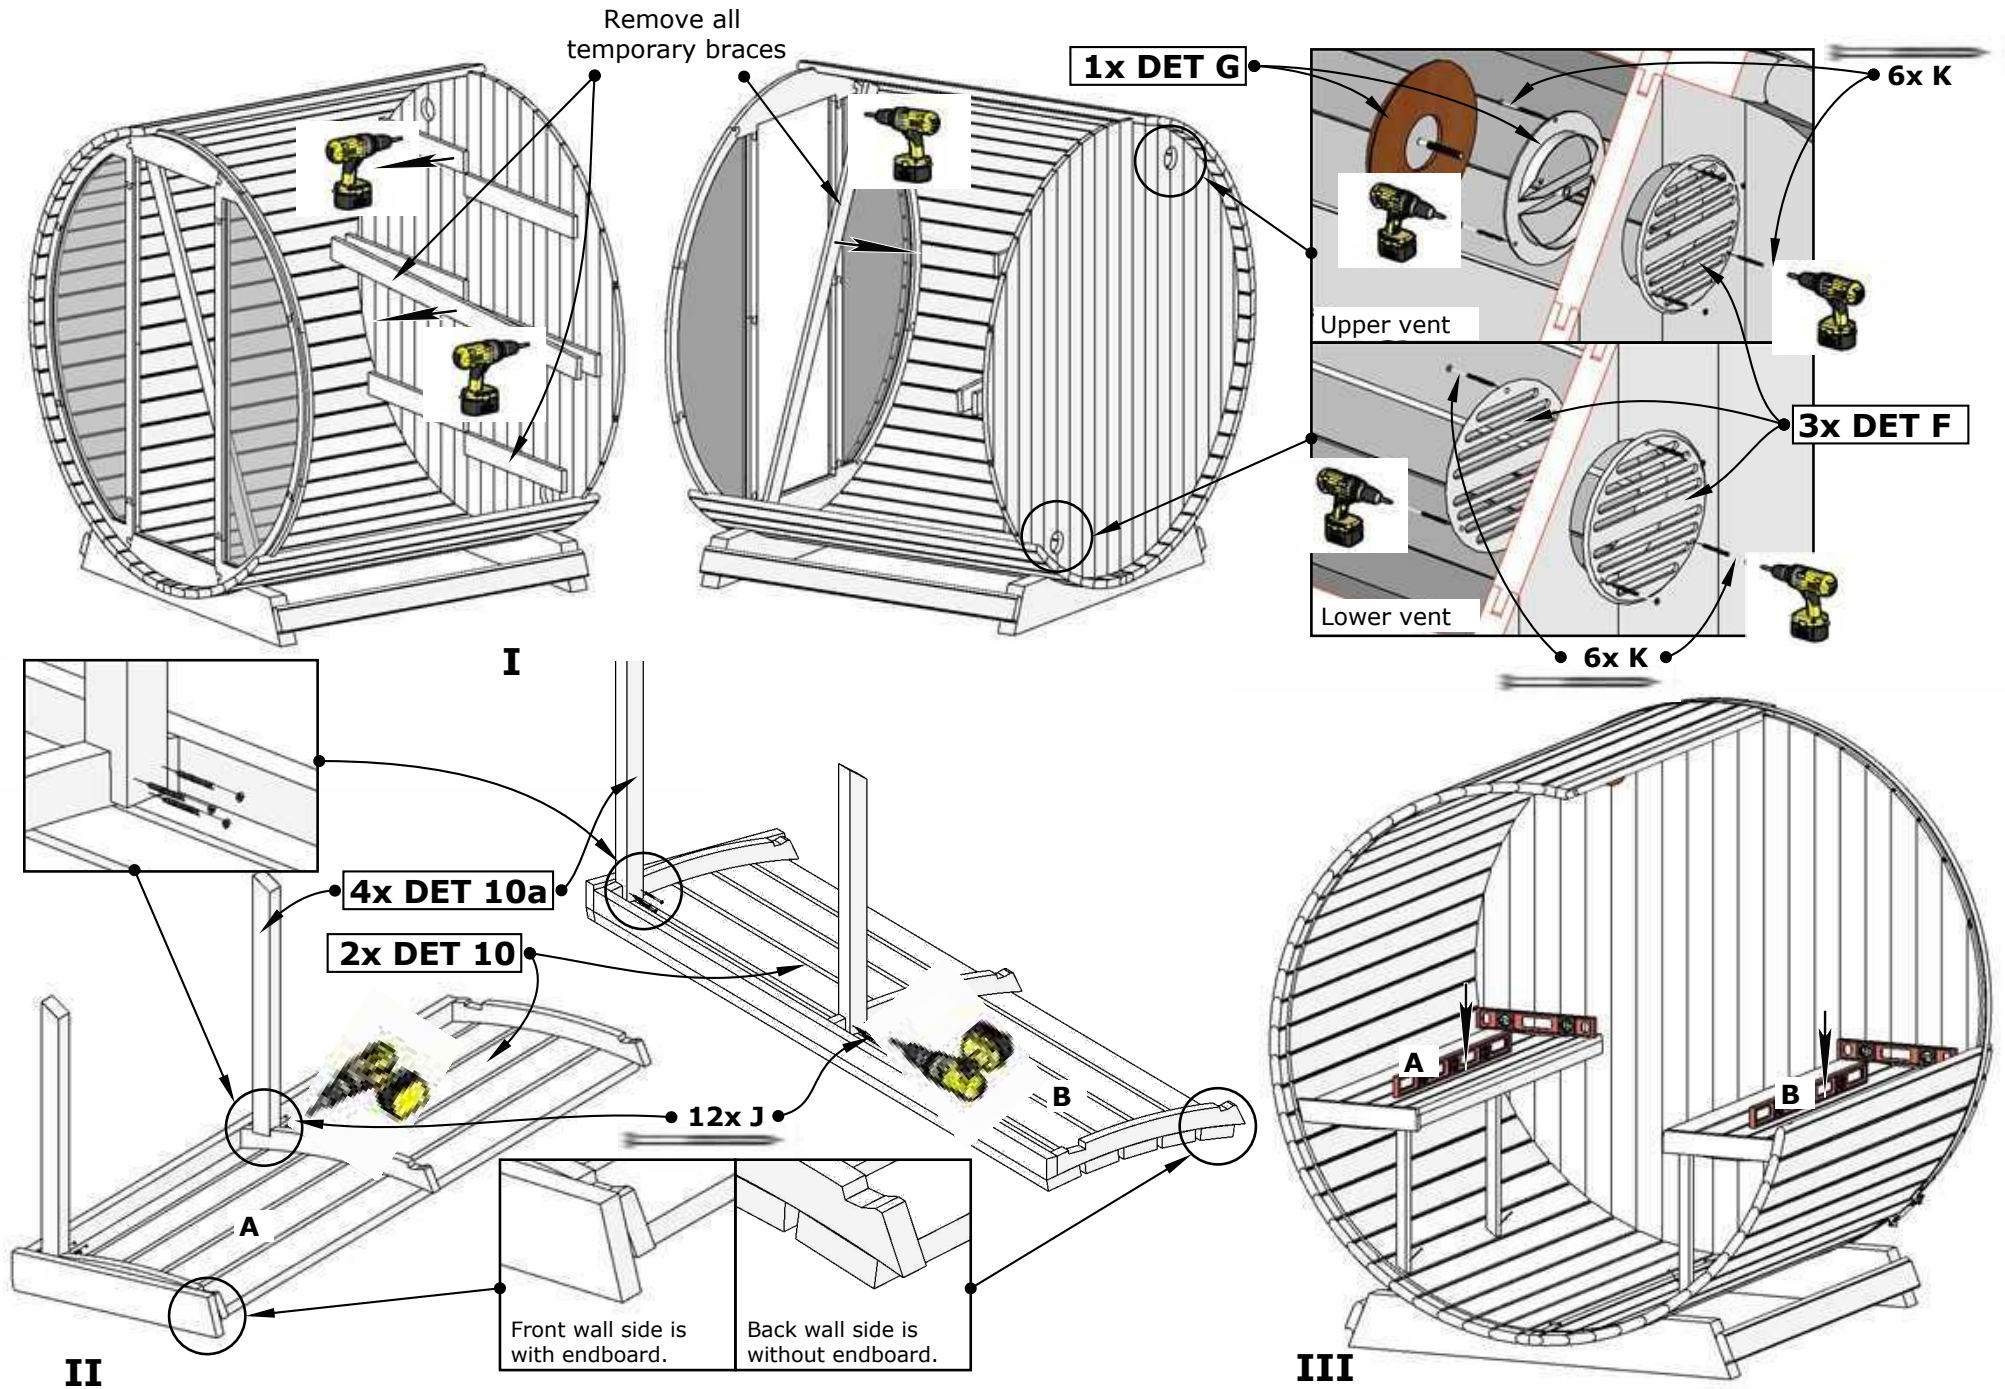



EE8G Barrel Sauna 79D" x 90H"

13

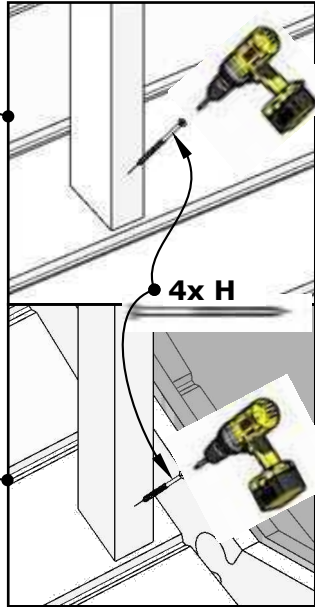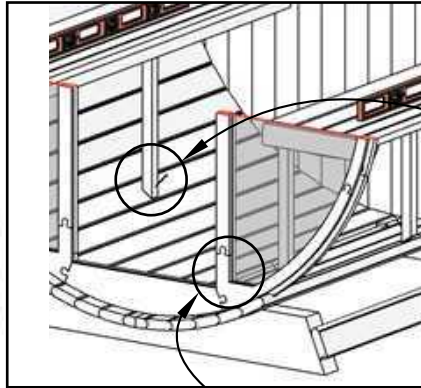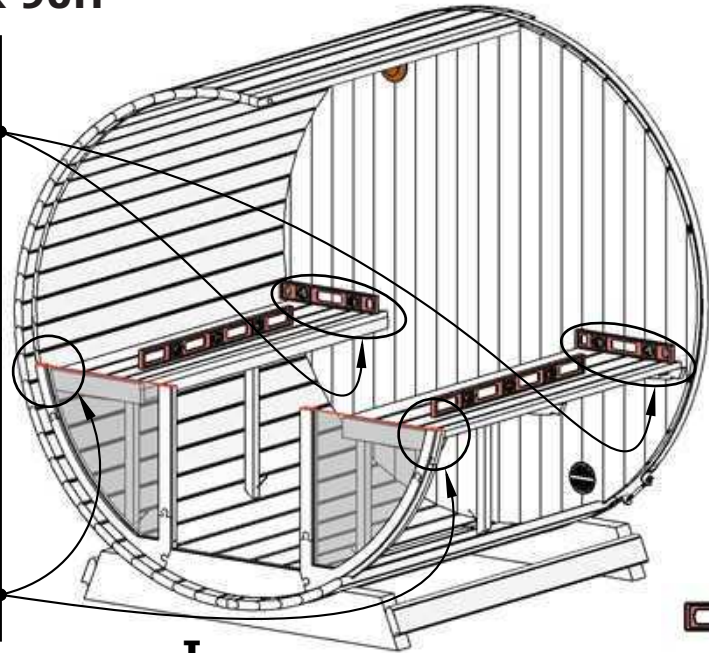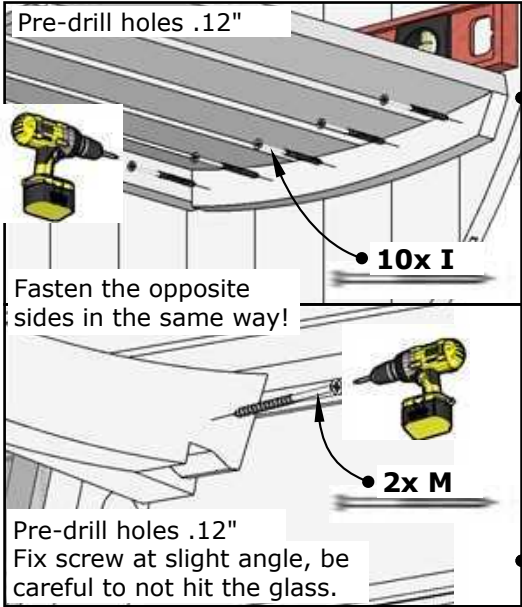


Use level for installation of benches


I

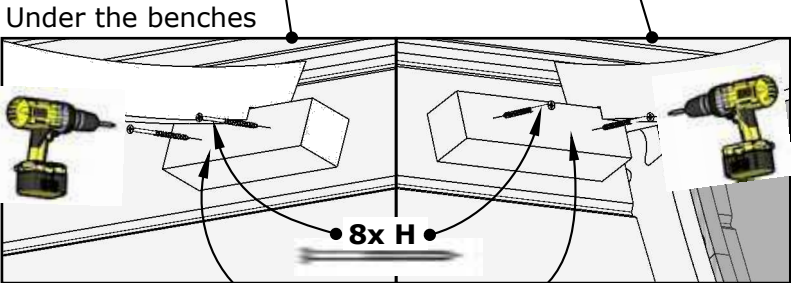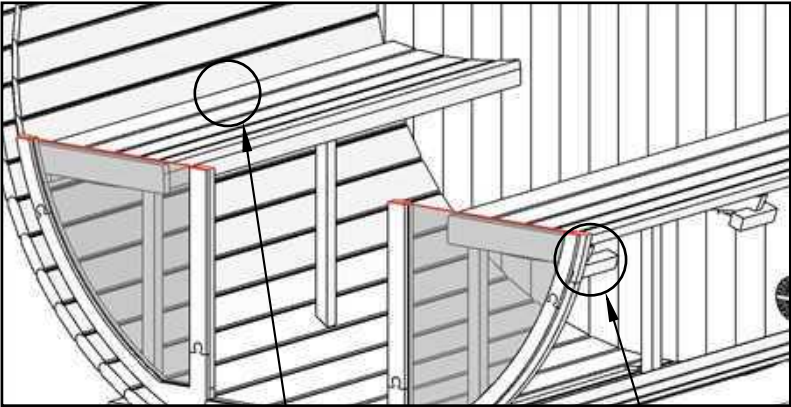


II

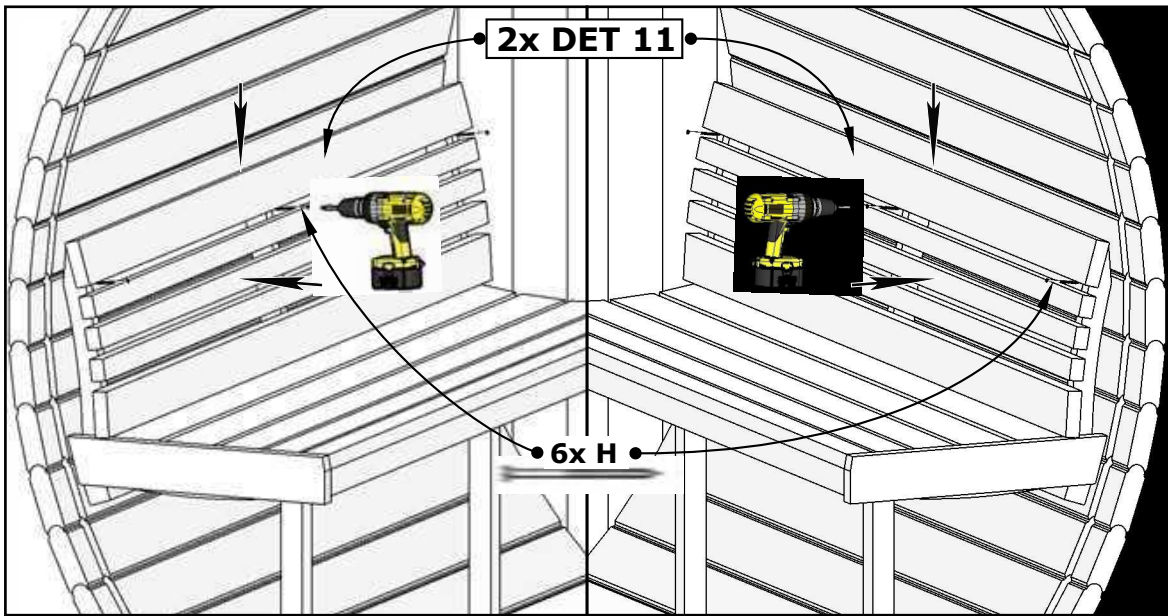


III

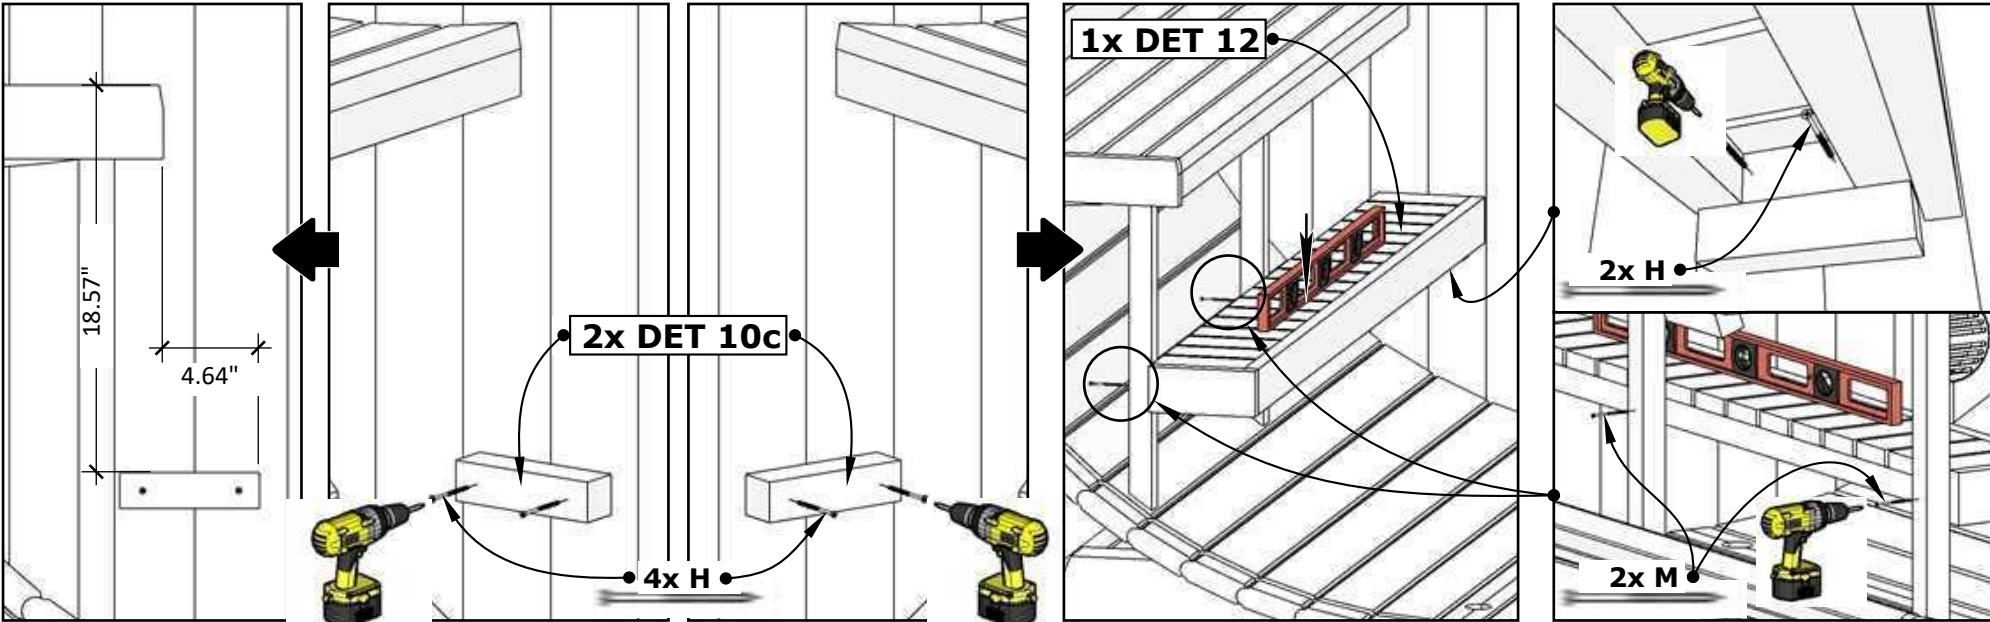


I

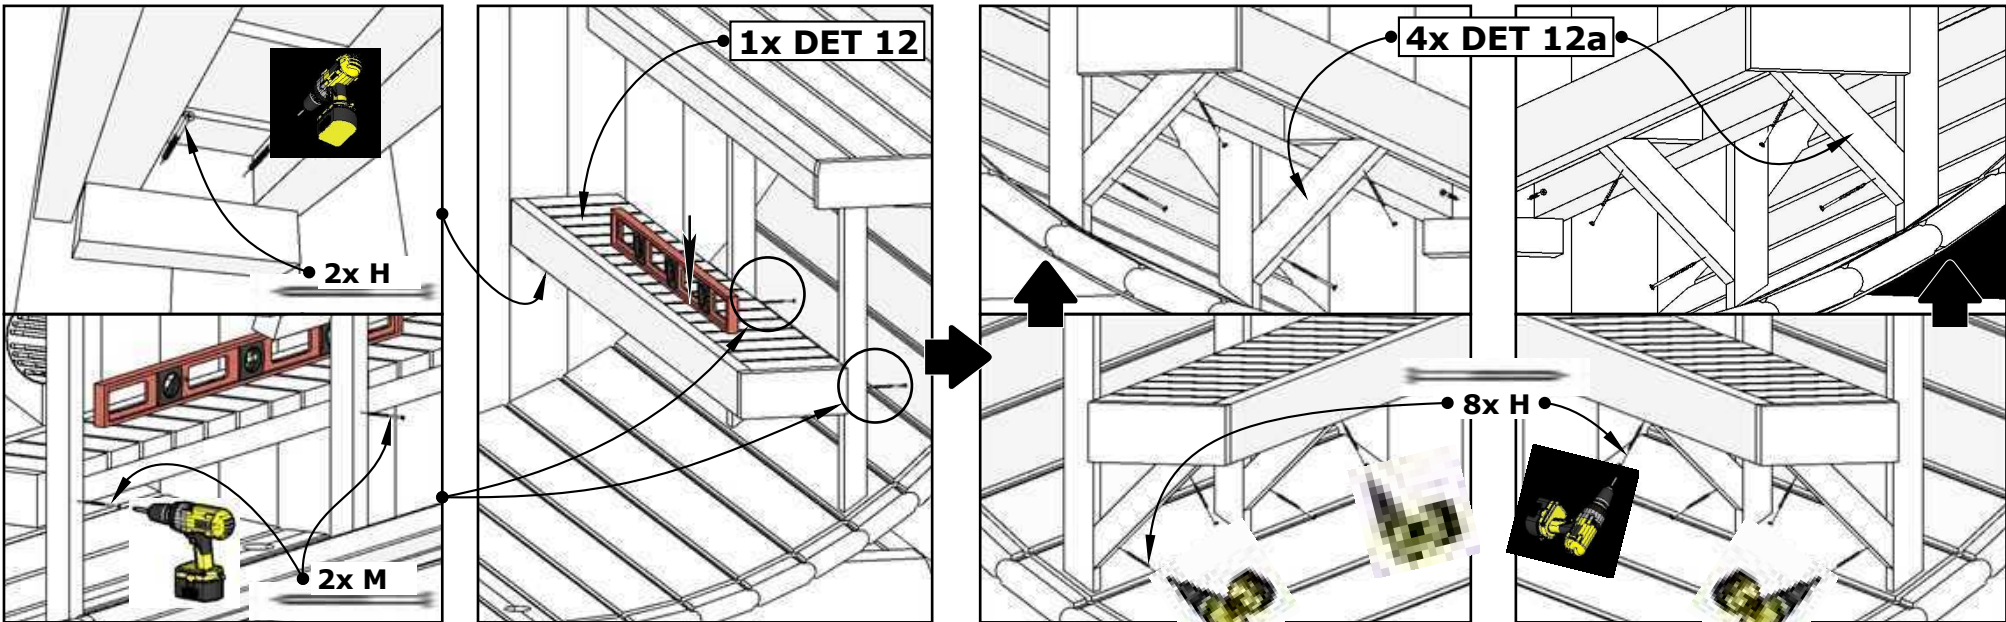


II

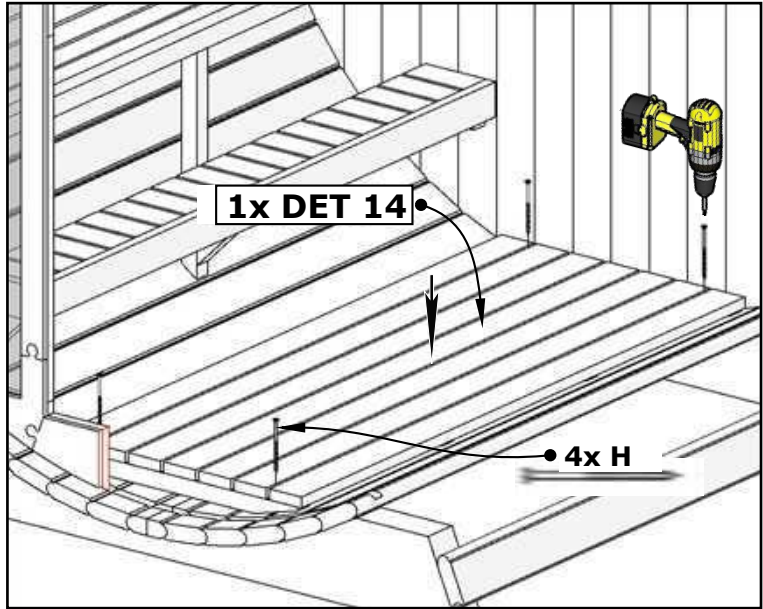




I

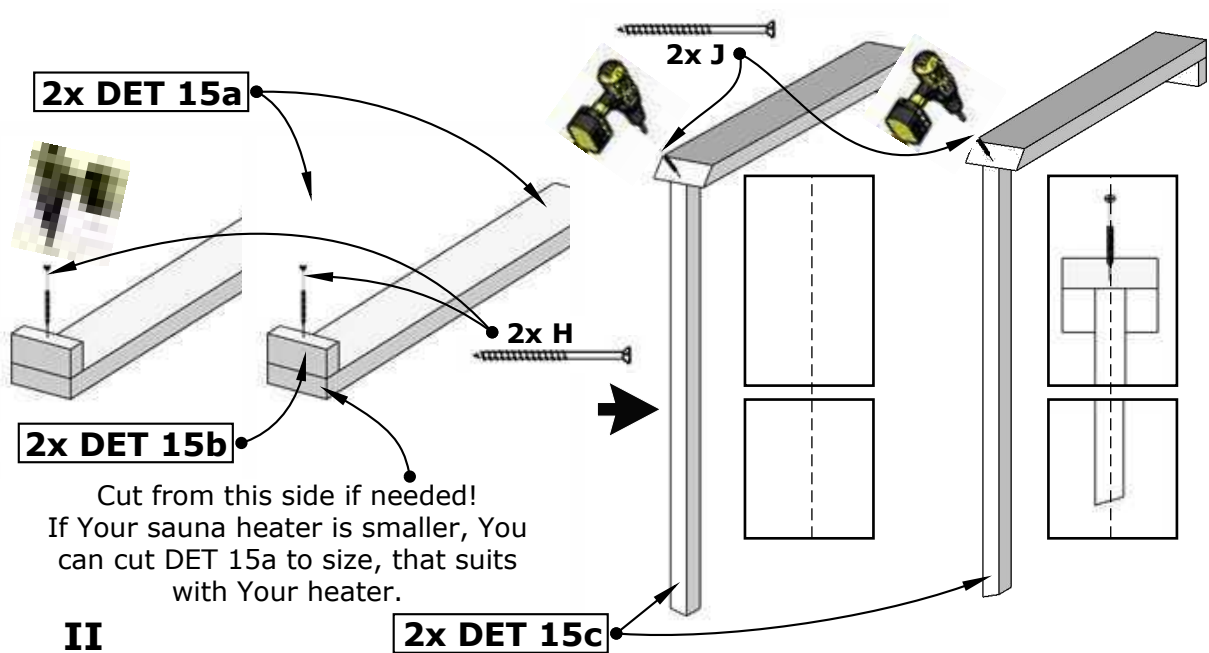





II

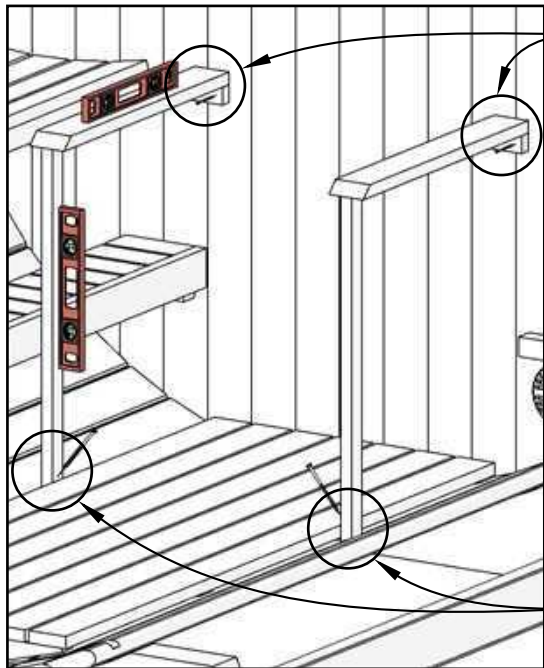


III

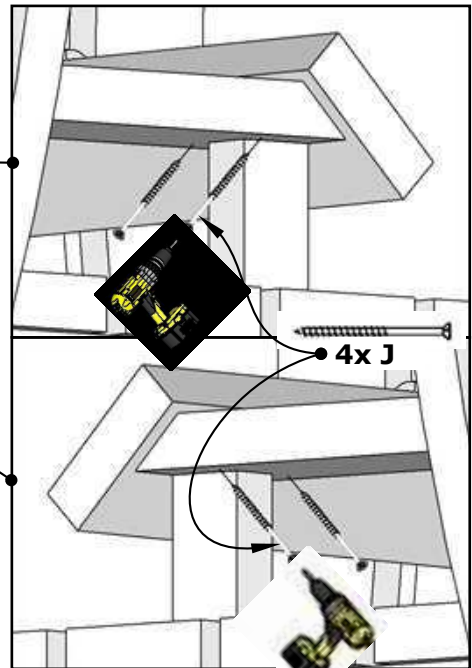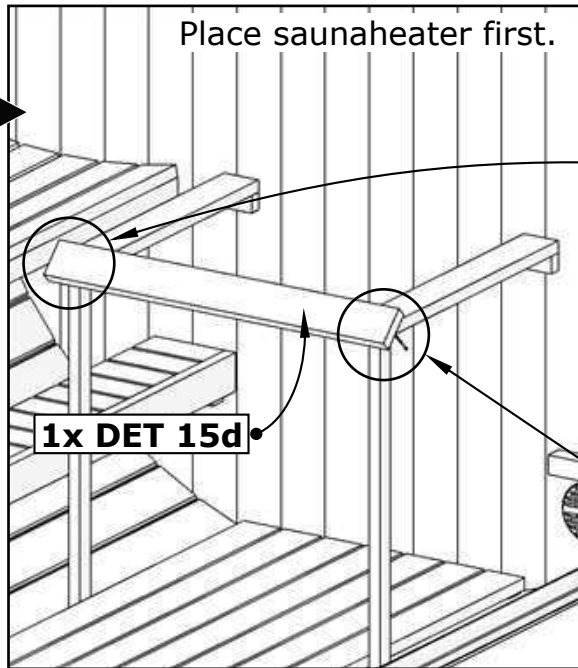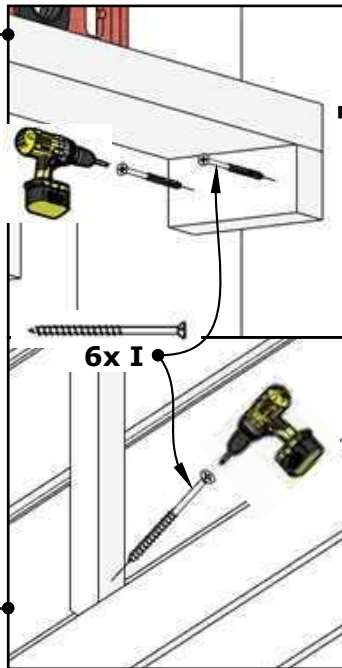



EE8G Barrel Sauna 79D" x 90H"

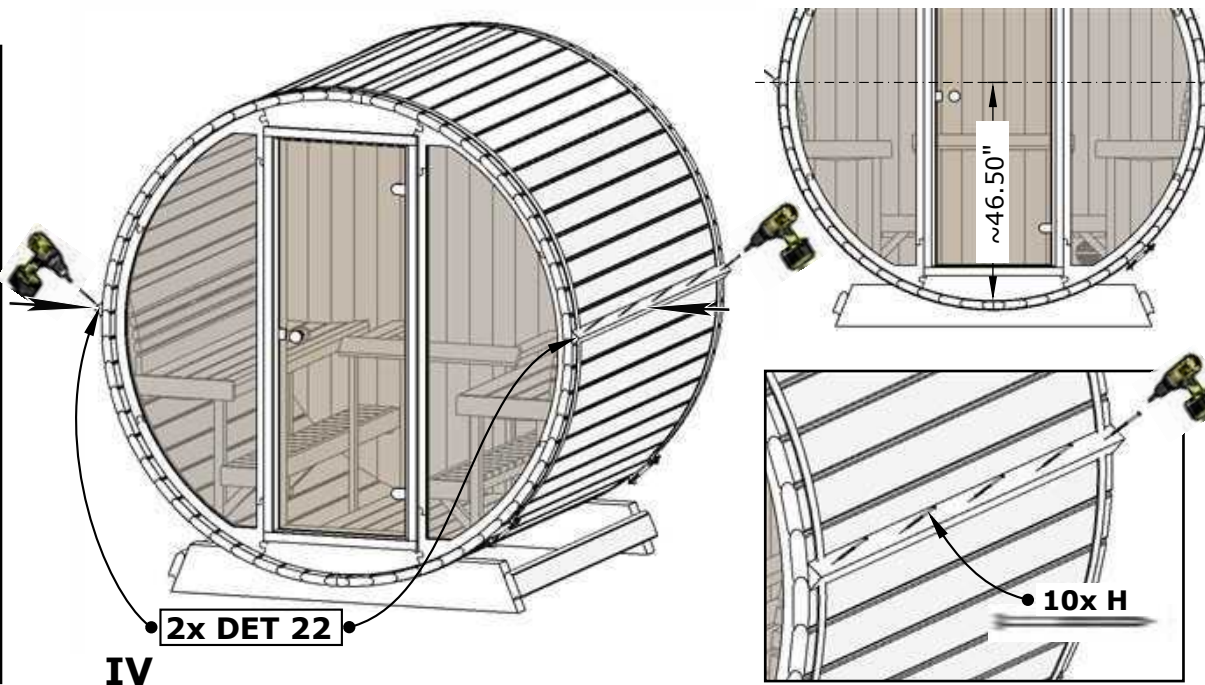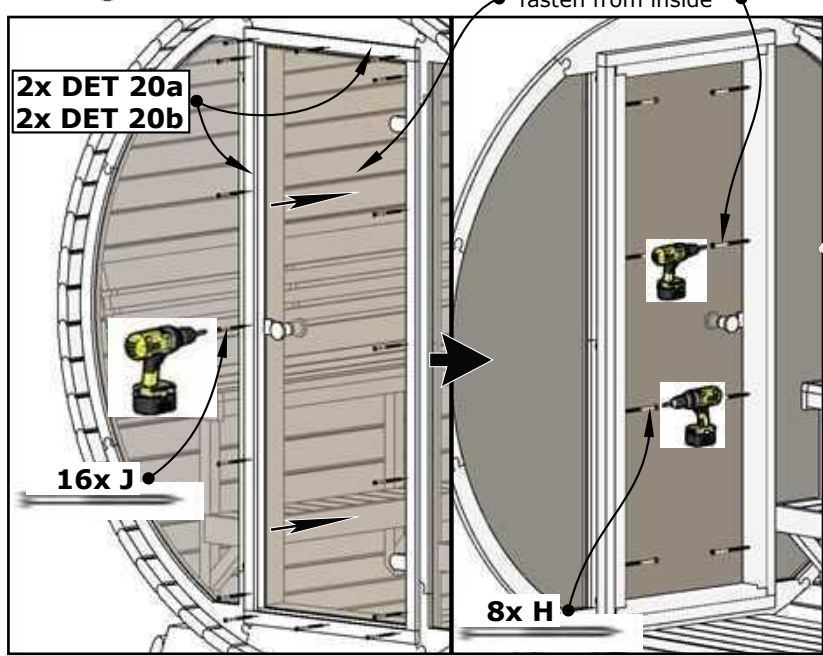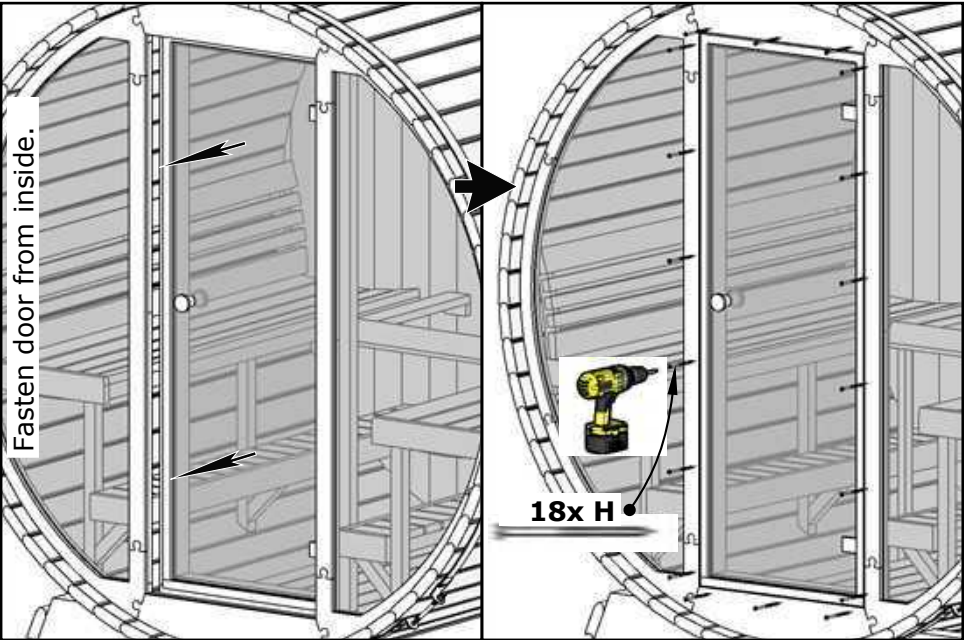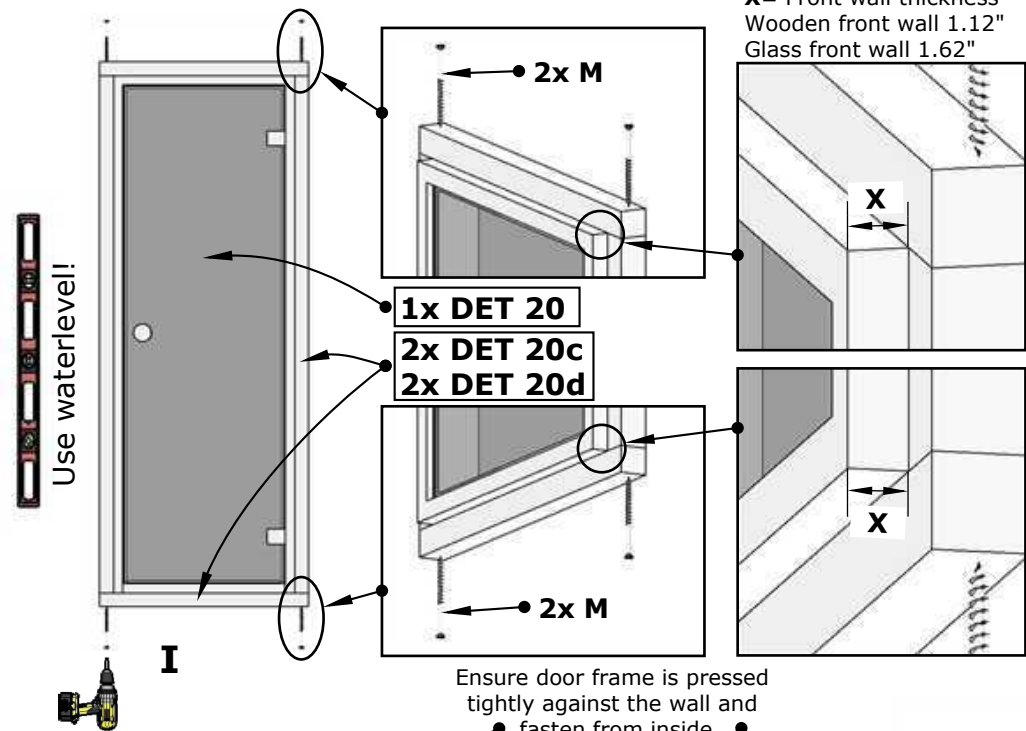

NB! Check also shingles installation manual inside shingles package.

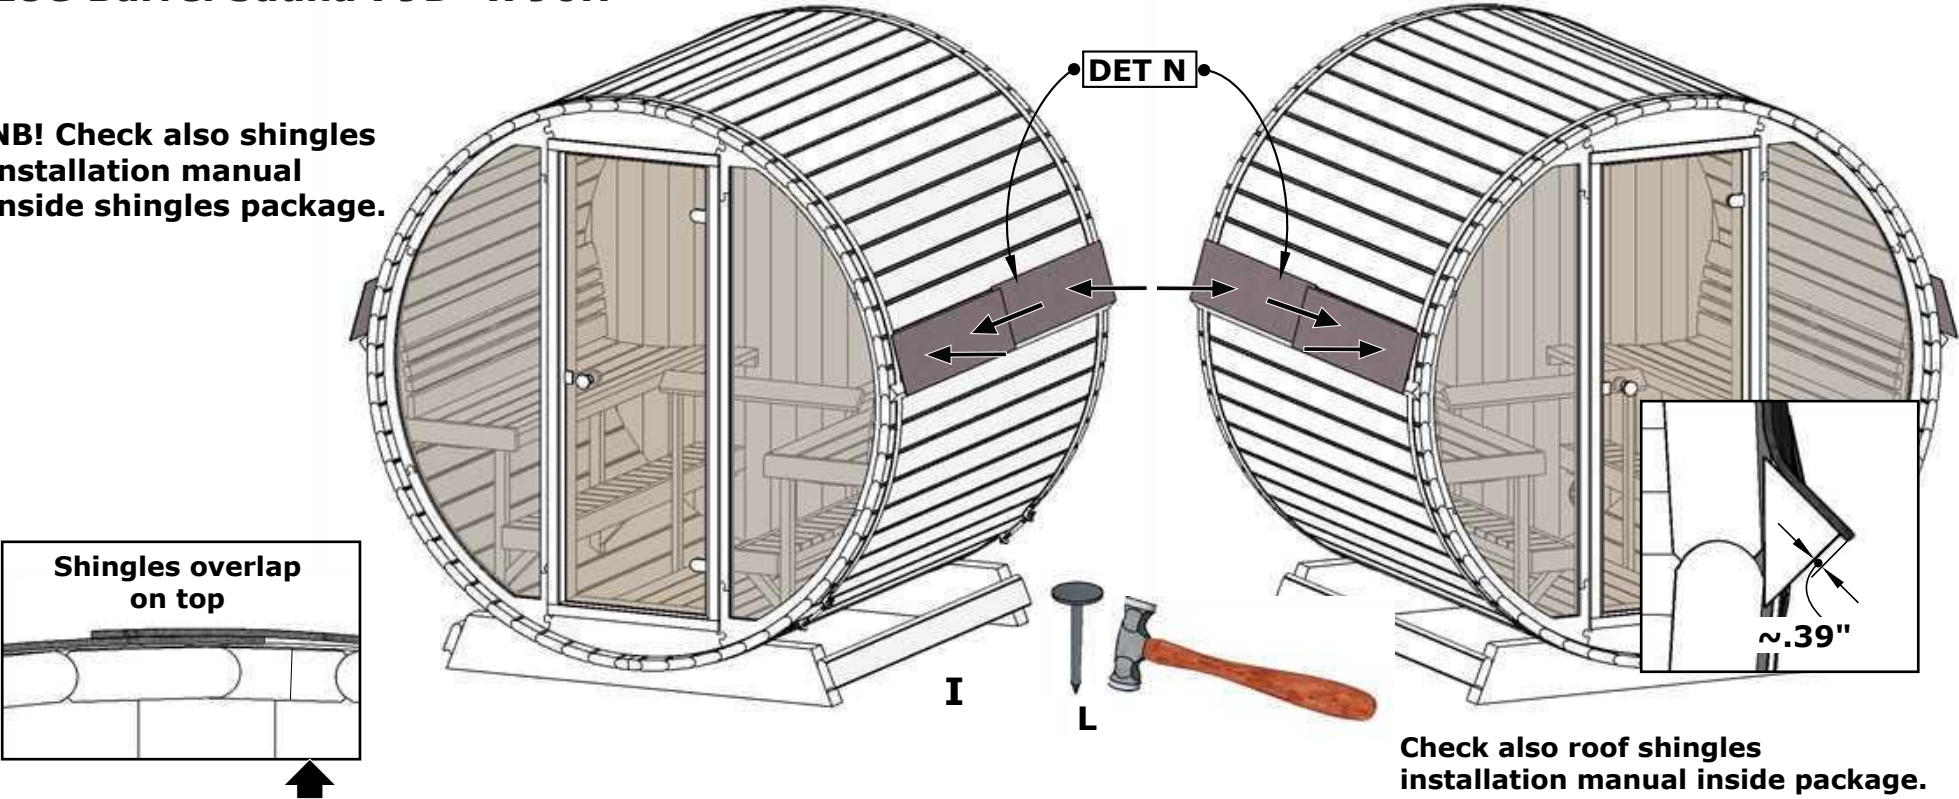

Check also roof shingles installation manual inside package.

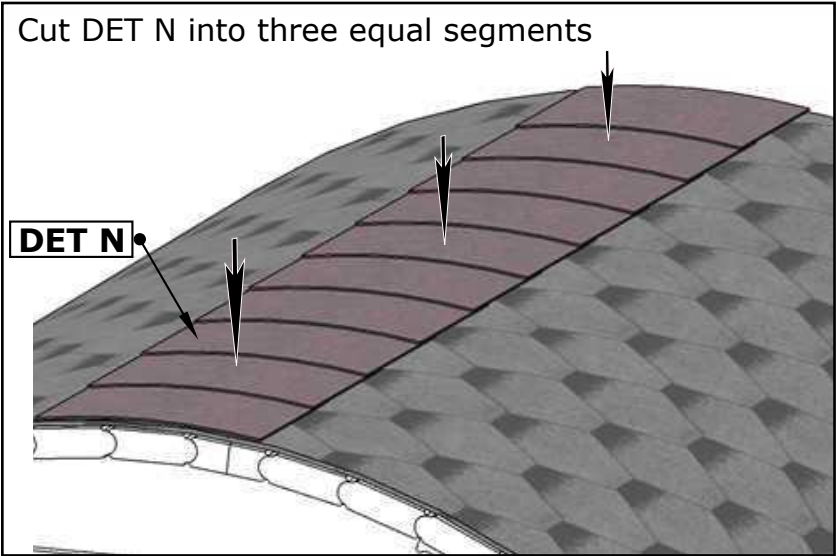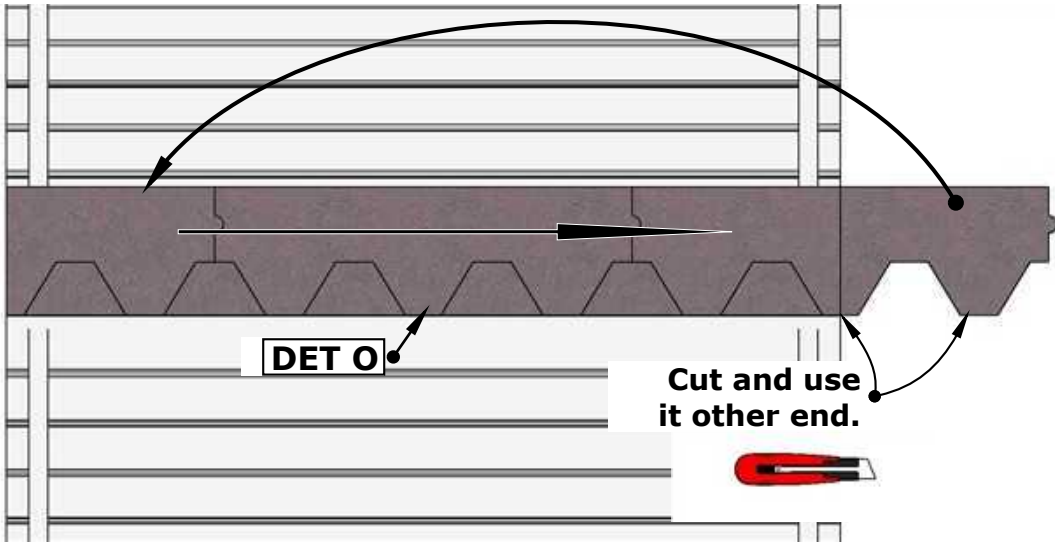

II

III

